 


Portable printer

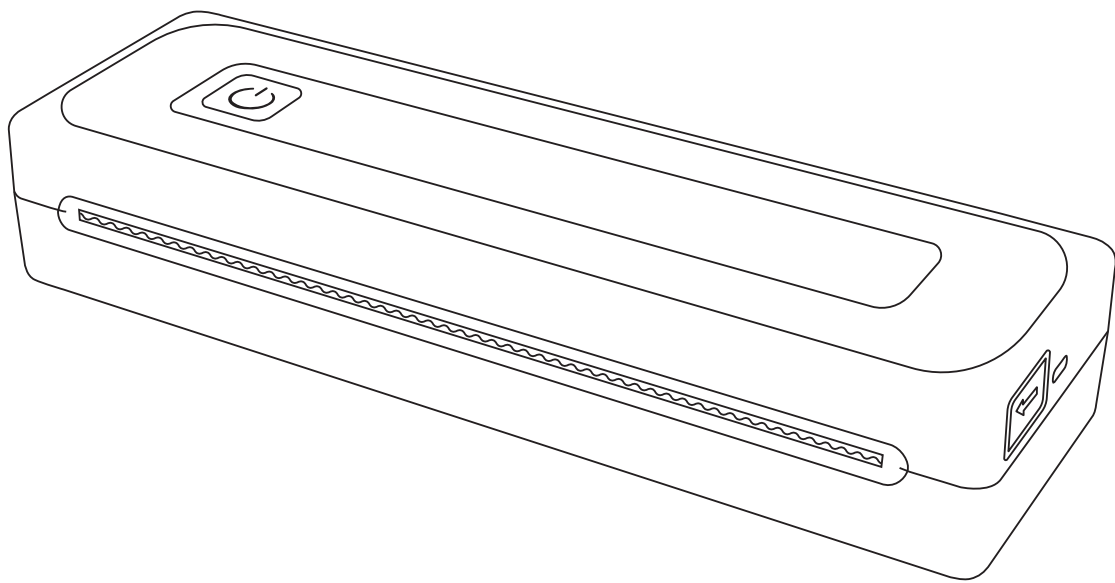


Instruction manual


1.Product information

Product name	A4 portable printer
Product model	A4
Net product weight	475g
Product size	265mm*58mm*30mm
Print type	Thermal printing
Input voltage	DC 5V/2A
Battery capacity	2000mAh
Automatic shutdown	30min
Standby time	About 30 days
Charging time	About 1.5H
Continuous printing	A4 thermal paper 90 sheets
Paper width specification	210mm or 218mm
Charging interface	Type-C

 2.Product structure

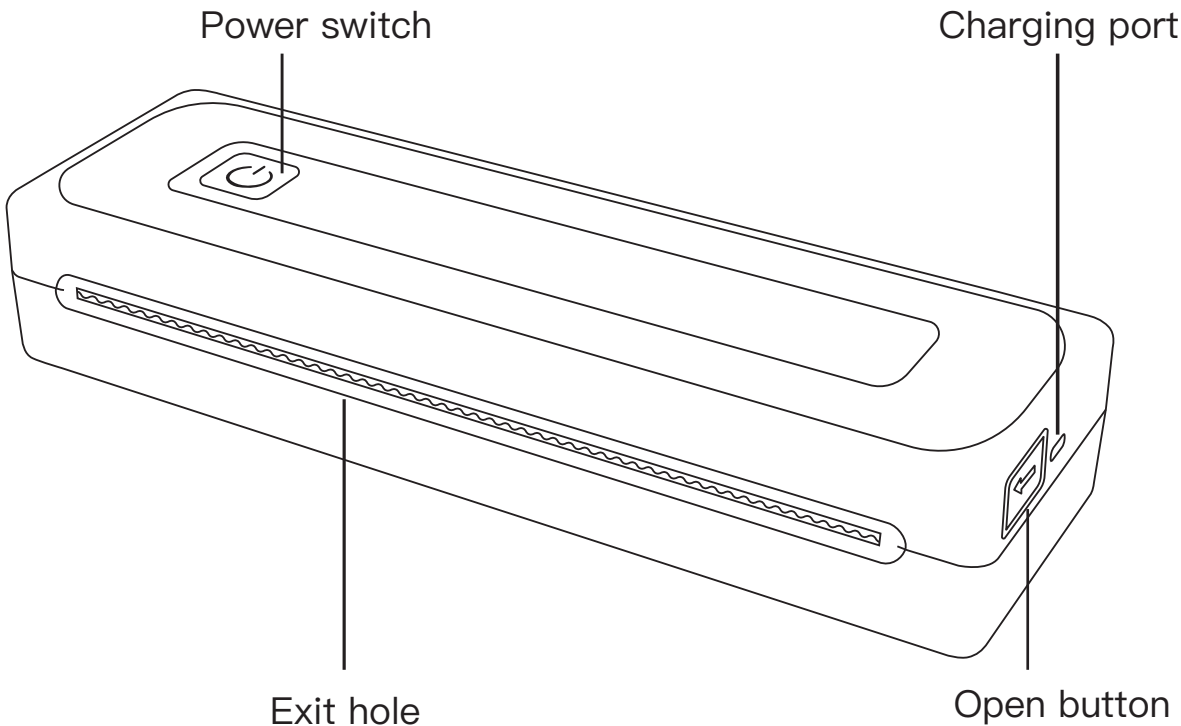

 3.Product packing list

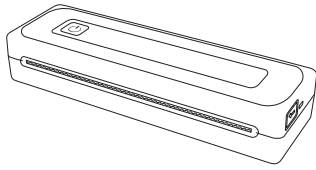

Printer host*1



Power data cable*1



 
specification*1

4.Application installation

1. For Apple users, you can also search for "iPrint" in the AppStore to download the APP;
2. Android users can also usearch for "iPrint" in the Google Play to download the APP.


5.Connected application

After the device is turned on, turn on the Bluetooth function of the mobile phone, open the app, click the “Select equipment” button at the top,Go to the "My Device" page and click the Bluetooth name at the beginning of GT08 to connect the printer Bluetooth.If Bluetooth is not displayed after entering, please click refresh button and try again.

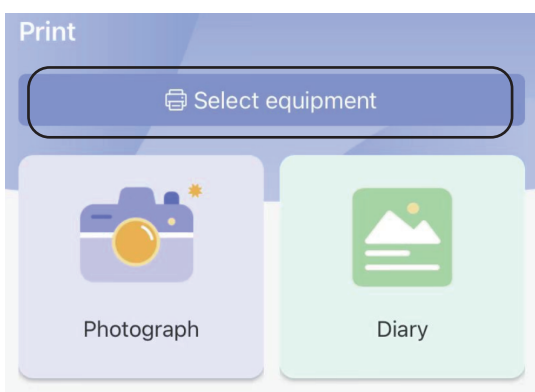



6. Personal computer connection operation


 
1. To download the application package, go to "<https://drive.google.com/file/d/1aZPPkPUTLRbaEc3QtwbyX929kwZKQwff/view?usp=sharing>" in your browser;
2. Connect computer and printer host with data cable after installation;
3. Select the device "GreatWonder J597" to print.

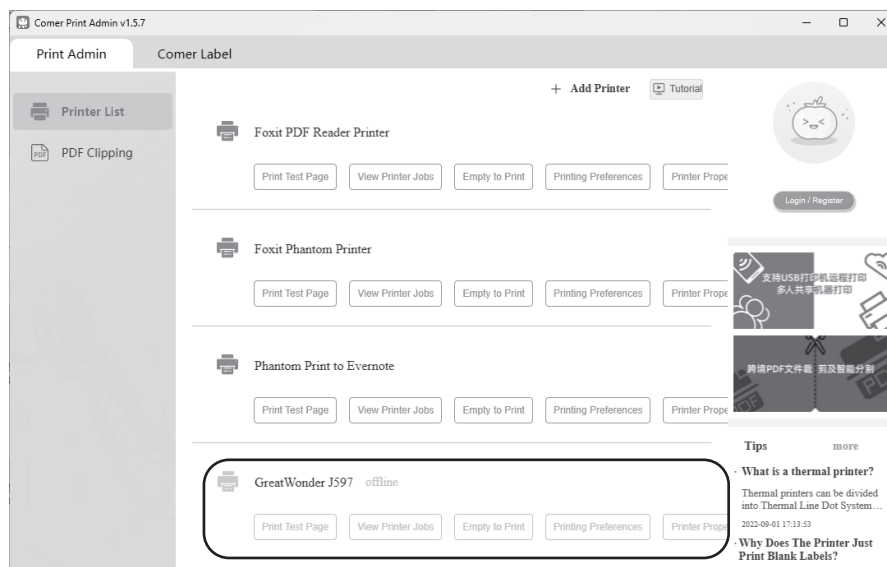

Note: When printing files, use the following Settings to improve the printing effect.

    1. Select GreatWonder J597 in the print pop-up window and click "Configuration";
2. Click "Properties" on the print setup page to proceed to the next step;
3. Click "Advanced" Options under the Layout section of the properties page;
3. In the Advanced options pop-up window, change the items selected in the box to be consistent, and finally click "OK".

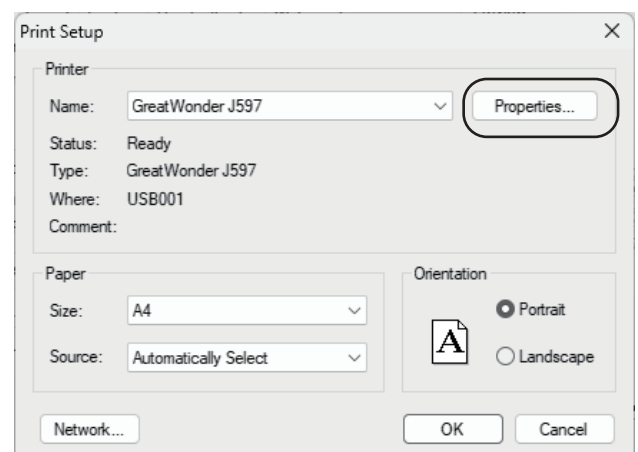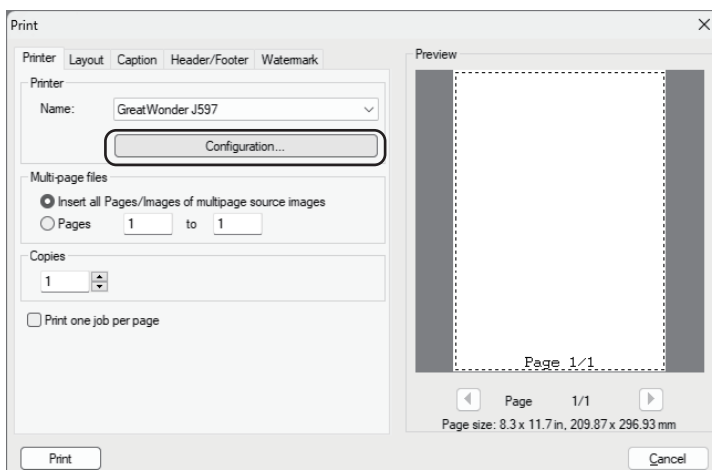

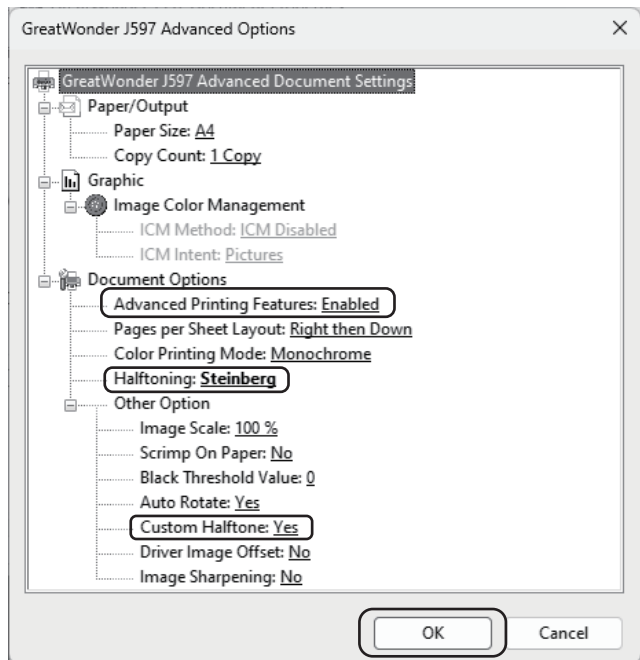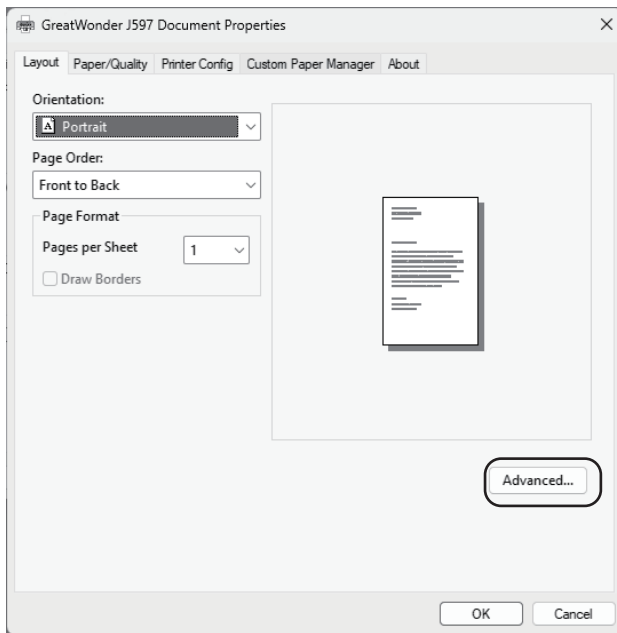


7.Switch on and off


Power on: Long press the power button for 3 seconds until the indicator lights up;

Shutdown: Changan power button for 3 seconds until the light is off.

 8.Feed operation

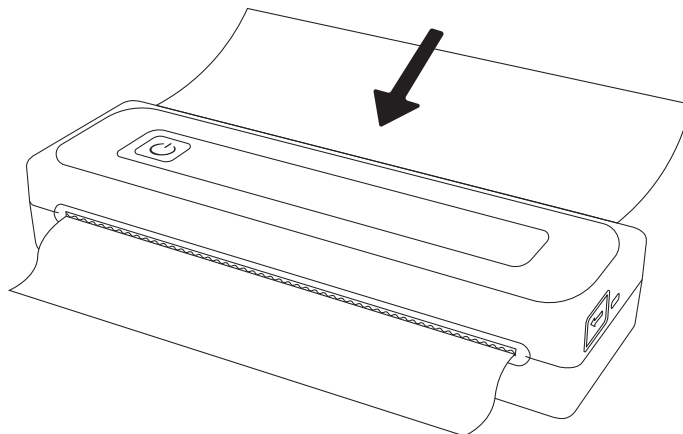

A4 paper feed operation

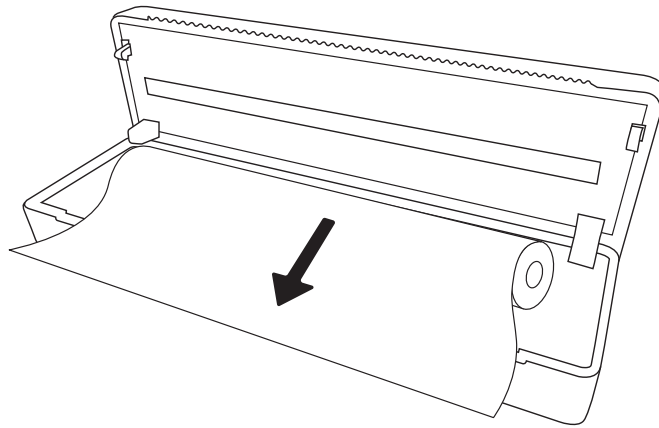 


Roll paper feed operation

9. Paper jam, exception handling and cleaning

Press the open cover button to open the flap assembly and rotate at a certain Angle.

 Do not force the paper out when the paper is jammed, otherwise it will easily cause damage to the printer.

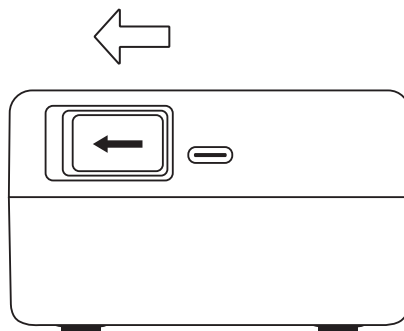

10.Pilot lamp

Steady on	Bluetooth connected
flicker	Wait for connection
Red light	Charging

11.Q&A

Q: No connected device is found when I add a device to the APP?

A: Please check whether the device is turned on to ensure that the Bluetooth is working.

Q: What can I do if my device cannot print?

A :① Confirm whether the Bluetooth of the mobile phone is turned on,
and exclude the possibility of others connecting to this device.

② Check whether the thermal paper is jammed.

③ Whether the print head is overheating, if it is overheating, please
wait for the print head to cool before trying to print.

Q: Why is the print all white paper, no content?

A: It may be caused by incorrect installation of printing paper. Please
refer to the introduction of Replacing printing paper to reinstall it.

Q: Why did the printed word fade?

A :① Please check whether the device is low power.

② Check whether the print head is covered with stains, please wipe
gently with an alcohol cloth

12.Safety and precautions

- Do not charge or use the printer in hot, humid or dusty places.
- Please charge with 5V2A input and charge with mobile phone power adapter.
- After printing, do not touch the print head directly to prevent overheating and scalding.
- Gently insert or remove the charging cable to prevent excessive force from damaging the interface.
- Improper charging may result in print head damage.
- Unplug the charging cable after charging.
- Place the machine on a solid and stable horizontal plane to prevent the machine from slipping and damaging.
- Please turn off the power when you do not use the machine for a long time.
- Prevent foreign matter from being transferred into the machine, so as not to cause failure or other risks.