

Lutron Caseta Reference Guide

STAND ALONE: **WITHOUT THE LUTRON HUB**

- USE PICOS TO CONTROL CASETA DIMMERS & SWITCHES
- CASETA DIVA DIMMER STANDALONE FUNCTIONS - SINGLE PRESS PRESET LEVEL, DOUBLE PRESS FULL BRIGHT AND PRESS & HOLD BOTTOM FOR DELAY OFF
- NO LIMIT TO NUMBER OF CASETA DIMMERS OR SWITCHES THAT ANY PICO CAN CONTROL, BUT EACH CASETA DIMMER OR SWITCH CAN ONLY BE PAIRED WITH UP TO 10 PICOS
- LIMITED TO RANGE OF PICO (ABOUT 30 FEET INDOORS)
- NO RANGE EXTENDERS
- NO SCENES, SCHEDULES, APP/VOICE CONTROL OR ADVANCED AUTOMATION
- YOU CAN'T USE SCENE AND AUDIO PICOS

PAIRING A PICO WITH A CASETA DEVICE

- PRESS AND HOLD THE BOTTOM BUTTON (OFF) ON THE CASETA DEVICE UNTIL THE LED INDICATOR LIGHT STARTS FLASHING. GO TO PICO REMOTE, PRESS AND HOLD BOTTOM BUTTON (OFF) UNTIL THE LIGHTS START FLASHING

UNPAIRING (FACTORY RESET) CASETA DIMMERS, SWITCHES, LAMP DIMMER, OUTDOOR PLUG AND PICOS

- QUICKLY TAP THE TOP BUTTON (ON) THREE TIMES. ON THE THIRD TAP, HOLD THE BUTTON DOWN UNTIL THE INDICATOR LIGHT STARTS FLASHING. RELEASE
- QUICKLY TAP THE TOP BUTTON (ON) THREE MORE TIMES. THIS TIME, DO NOT HOLD THE BUTTON ON THE THIRD PRESS.
- THE CASETA DEVICE WILL FLASH TO CONFIRM IT HAS BEEN RESET

FACTORY RESET SMART HUB

- QUICKLY TAP THE BUTTON ON THE BACK OF THE HUB THREE TIMES. ON THE THIRD TAP, HOLD THE BUTTON DOWN UNTIL THE INDICATOR LIGHT STARTS FLASHING.
- QUICKLY TAP THE BUTTON ON THE BACK THREE MORE TIMES. THIS TIME, DO NOT HOLD THE BUTTON ON THE THIRD PRESS.
- THE HUB WILL START FLASHING. WHEN THE FLASHING STOPS IT HAS BEEN RESET

WITH THE LUTRON HUB

- UP TO 75 CASETA DEVICES
- APP DEVICE CONTROL, SCENES, SCHEDULES, VOICE CONTROL AND 3RD PARTY INTEGRATIONS
- GEOFENCING, ASTRONOMICAL AUTO UPDATING CLOCK, AND DEVICE FIRMWARE UPDATES
- APP CONTROLLED TRIM, FADE & STATUS LEDS ON CASETA DIVA DIMMERS
- YOU CAN ADD RANGE EXTENDERS (UP TO ABOUT 90FT INDOORS)
- APP CONTROLLED AUTO OFF TIMER
- YOU CAN USE SCENE AND AUDIO PICOS

PRO HUB vs STANDARD HUB

STANDARD HUB

- WORKS WITH ALL CASETA DEVICES INCLUDING SCENE PICOS AND AUDIO PICOS
- DEVICE CONTROL, SCENES, SCHEDULES AND ALL APP FUNCTIONS THE SAME AS THE PRO HUB
- ALEXA, GOOGLE, AND SIRI VOICE CONTROL
- SONOS, APPLE HOME, & RING DOORBELLS
- GEOFENCING AND MULTIPLE CASETA SYSTEMS
- IFTTT, SMART THINGS, & WINK
- LUTRON SERENA SHADES
- SUPPORTS SELECT THERMOSTATS

PRO HUB

- ALL FEATURES OF THE STANDARD HUB
- SUPPORTS LUTRON TRIATHLON SHADES
- SUPPORTS LUTRON SIVOIA QS WIRELESS SHADES
- INTEGRATES WITH SELECT SECURITY SYSTEMS, A/V REMOTE CONTROLS, AND SMART HOME DEVICES: (CRESTRON, CONTROL4, RTI, SAVANT, URC, & OTHERS)

UNLESS YOU ARE INTEGRATING WITH HOME AUTOMATION SYSTEMS NOT LISTED UNDER THE STANDARD HUB SECTION OR YOU ARE USING TRIATHLON OR SIVOIA SHADES, ALL YOU WILL NEED IS THE STANDARD HUB

PLUG-IN LAMP DIMMER TOGGLE BETWEEN SWITCH & DIM MODE

- PRESS AND HOLD BOTH THE "ON" AND "OFF" BUTTONS SIMULTANEOUSLY UNTIL THE INDICATOR LIGHT STARTS FLASHING. TO VERIFY, PRESS THE RAISE & LOWER BUTTONS. IF THE LOAD DOES NOT DIM, THEN IT'S IN SWITCH MODE.
- TO REVERT BACK, SIMPLY REPEAT THE PROCESS OF PRESSING AND HOLDING BOTH THE "ON" AND "OFF" BUTTONS UNTIL THE INDICATOR LIGHT FLASHES.

**NOTE: YOU SHOULD ONLY USE LIGHTING LOADS, EVEN IN NON DIMMING MODE
(100W LED OR 300W INCANDESCENT OR HALOGEN)**