

TC One (S70) User Manual

Single line Release + Bait Tray



Set Home:

Press the button [Right Arrow] to select the home icon [Home Icon]. Then, hold the **OK** button to store your home spot (where your boat will return to). Please use this outdoor when you receive the GPS satellites only!

Set Waypoint:

Press the button [Right Arrow] to select one of the 8 available spots. Then, press **OK** to save, the spot turns blue.

Cruise Control:

Press the auto cruise button, then you can adjust the speed by moving joystick backward or forward to any speed you want. To exit cruise control, keep pushing the joystick backward until speed is 0%.

Go to The Saved Waypoint :

Press [Right Arrow] to select a saved waypoint (blue number). Then hold the waypoint button [Waypoint Icon], the boat will automatically navigate to the previously saved waypoint. In the settings, you can configure whether the boat will automatically release bait tray after reaching the waypoint by pressing the power button. [Power Icon] and change the setting to "Yes".

Return home : Press and hold the home button [Home Icon]

Attention in use :

1. How to pair remote with boat when it doesn't connect? Hold [Right Arrow] button and press power button [Power Icon]
2. Please flush the boat after use in salt water and make sure to dry it.
3. Restore the bait knob manually by turning the knobs back.
4. How to use Line release- Attach the fishing line on a stainless ring, use the ring to push the release switch into place, and then press the release button on the remote control [Release Icon]


Setting: Press Power button [Power Icon] to enter setting

Voltage: press [Right Arrow] to select Voltage, press **OK** and [Home Icon] to modify

Alarm V: press [Right Arrow] to select alarm V, press **OK** and [Home Icon] to modify

Release: press [Right Arrow] to select release, press **OK** to modify, M=manually, you can manually open bait tray when it reaches stored waypoint, A=automatically, boat opens bait tray automatically at waypoint

Gyroscope: when boat does not go in straight line, change this

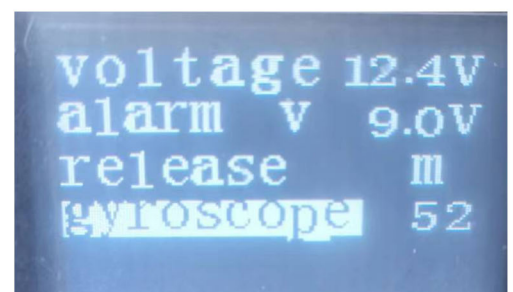



*****User Guide Setps*****

1. ****Before Use****: Please fully charge the boat battery and the remote control battery. The boat battery may take around 9 hours to charge (when the battery is low).
2. ****For boats with GPS Auto-Navigation****: Please use outdoors.
3. ****Installation****: Install the antenna, rotate the battery compartment knob to open it, connect the battery to the correct colored terminals, turn on the boat switch, and the boat light will blink to indicate the boat is on. Then close the battery compartment. Note: The battery compartment cover has a waterproof seal inside, and you must tighten the knob to ensure waterproofing.
4. ****Remote Control Setup****: Take out the remote control, install the antenna (the antenna interface is on the back of the remote). Turn on the remote, and wait for the signal bars to show that the boat is paired. Please note that the remote is paired successfully when the signal bars appear. For GPS model, the satellite signal must be displayed to connect satellites.
5. ****Test Boat Functions****: Test the boat's functions by moving the joystick to check forward and backward movement, as well as all steering directions. Turn on the boat light, and when turning left, the right propeller rotates, and when turning right, the left propeller rotates. Both motors will rotate simultaneously when moving forward or backward. Test the top and rear line release mechanisms.
6. ****Auto-Cruise****: Press the auto cruise button once.  The boat will go in auto cruise state, pull joystick forward or backward to increase or reduce speed at your will. Note that when you press this button, speed goes to 60%.
7. ****Set Home Point****: Move the boat a few meters from the shore, press the triangle button  and select the home icon . Long press the OK button to set your starting point. After setting, the boat will move forward slightly to indicate that the home point is set.
8. ****Set Destinatin Points****: When the boat reaches the destination, press the triangle button and select one of the 8 available numbers. Press the OK button to set a destination point. Once set, the boat will move forward slightly, and the selected fishing point will turn blue.
9. ****Go to The Saved Point****: Press the arrow button , select the blue location point just you set, and long press the waypoint buttn . The boat will head towards this point.
10. ****Return Home****: Long press the home button , and the boat will return to the starting point.

To enter settings, turn on the remote, press the power button once to access the settings menu. In the settings, you can adjust the yaw value, set the battery voltage alarm, and choose between manual and automatic baiting.

****Important Notes****:

1. Before use, please check if your fishing line is long enough. If the boat's auto-cruise or navigation distance exceeds the length of your fishing line, it will drag the fishing rod.
2. After use, disconnect the boat's battery and wipe off any seawater from the battery compartment cover before opening it to avoid water splashing into the boat and causing a short circuit or rust.
3. After using in seawater, remember to close the battery compartment cover and rinse the boat with freshwater at home. Dry it before using it again.
4. This boat does not have an automatic flip function, but due to its high power, heavy body, and high speed, it generally will not capsize unless used in very large waves. If used on a beach, it is recommended to use it in waves under 0.8 meters. The boat will not capsize when moving through waves due to inertia, unless it is stationary in very large waves.

We wish all players a pleasant experience and hope you enjoy your fishing time. Thank you for your support. If you have any questions or need assistance, feel free to contact us.