


FÖHR

FÖHR1B

TRANSFORMER OIL BDV TESTER

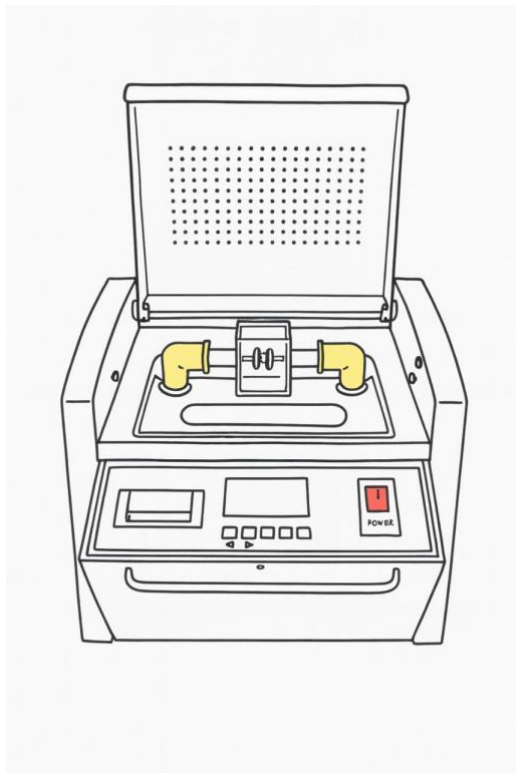

INSTRUCTION MANUAL

Contents

I. Overview	1
II. Key Function And Feature	1
III. Major Technical Indicators	2
IV. Panel Description	2
V. Operational Approach	3
VI. Precautions	7
VII. Maintenance	7
VIII. Oil Cup Cleaning Method And Common Fault Clearances	7
IX. Packing List	9

I. Overview

Many power systems, railway systems, large-scale petrochemical plants and enterprises have a lot of electrical equipment whose internal insulation are mostly oil-filled insulation type, and therefore, test on insulating oil dielectric strength is common and necessary. To meet the needs of the market, we have developed and produced a series of insulating oil dielectric strength testers according to national standard GB/T507-2002, industry standard DL429.9-91 and the latest Electric Power Industry Standard DL/T846.7-2004 by ourselves. This instrument, by using a single-chip microcomputer as the core, can operate in full automation with high accuracy, greatly improving work efficiency and reducing the labor intensity of workers. Moreover, it is small in size and convenient to carry.


II. Key Function And Feature

1. With a microprocessor, automatically fulfill the withstand voltage test for oil circulation with a range of 0~100KV (including boosting, maintaining, mixing, standing, calculation, printing and other operations)
2. Display by large-screen LCD and prompt by English menu.
3. Simple operation. The machine will automatically complete the withstand voltage test on one cup of sample oil after simple setting by the operator. Breakdown voltage value of 1 to 9 times and recurrent times will be automatically saved. After the test, the thermal printer will print each breakdown voltage value and average value.
4. Power-down preservation. It can save 100 tested results and displaying current ambient temperature and humidity.
5. Adopt a single-chip microcomputer to boost the voltage at an even speed. The voltage is accurate at 50HZ, ensuring the whole process easy for control.
6. Equipped with over-voltage, over-current and limit protections to ensure the safety of operators.
7. With the function of displaying the measured temperature and system clock.
8. Communicate with computer with a standard RS232 interface.(Optional)

III. Major Technical Indicators

- 1、 Output voltage: 0~100KV (optional)
- 2、 Voltage distortion rate: <3%
- 3、 Voltage raising speed: 0.5~5 KV/S (adjustable)
- 4、 Standing time: 15min (adjustable)
- 5、 Boosting interval: 5 min (adjustable)
- 6、 Boosting frequency: 1~9time(s) (optional)
- 7、 Booster capacity: 1.5KVA
- 8、 Measuring accuracy: $\pm 3\%$
- 9、 Supply voltage: AC220V $\pm 10\%$ 50Hz ± 1 Hz
- 10、 Power: 200W
- 11、 Applicable temperature: 0 $^{\circ}$ C~45 $^{\circ}$ C
- 12、 Applicable humidity: <75%RH
- 13、 Overall dimension: 465 \times 385 \times 425

IV. Panel Description

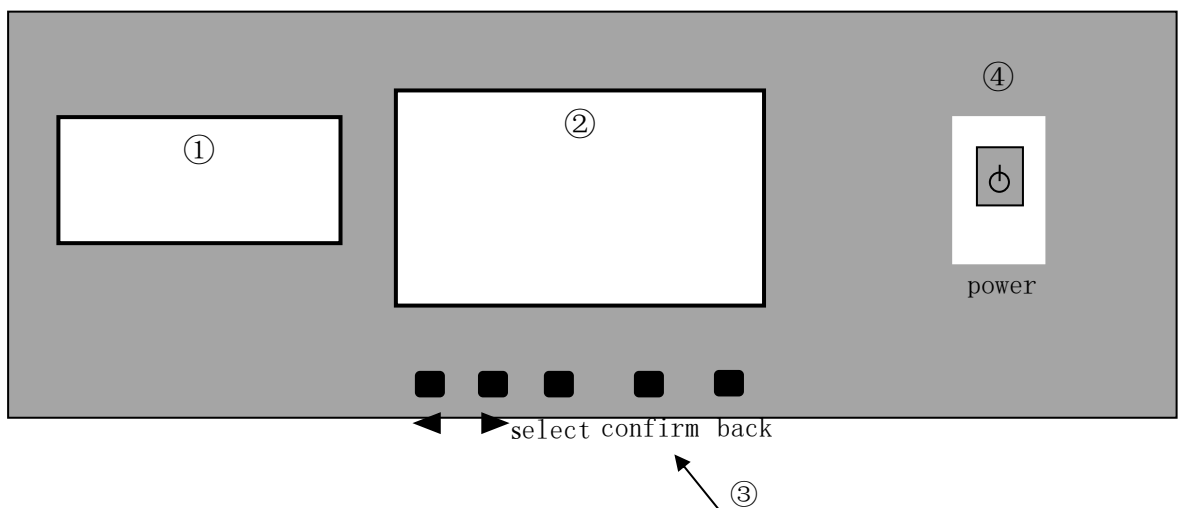

- ① Thermal printer --printing the test results
- ② LCD --displaying the menu, cues and test results
- ③ Operating keys:

-- ◀ For increasing the setting value after pressing “SELECT”

-- ▶ For decreasing the setting value after pressing “SELECT”

SELECT—for choosing functions (the item selected is on reverse display)

CONFIRM—for executing the function

BACK –for exiting the operating interface

④ Power switch and indicator

V. Operational Approach

1 Preparation before Test


① Connect the earth terminal (on the right side of the equipment) to the earth wire firmly before start the equipment.

② Sample the oil according to relevant standard. Adjust the electrode distance inside the oil cup with standard gauge. Clean the cup according to relevant requirements. Pour the sample into the cup and close the cap.

③ Switch on AC220V power supply after the above items are confirmed, ready for the test.

2 Testing

① Press the power switch and then enter the following interface:

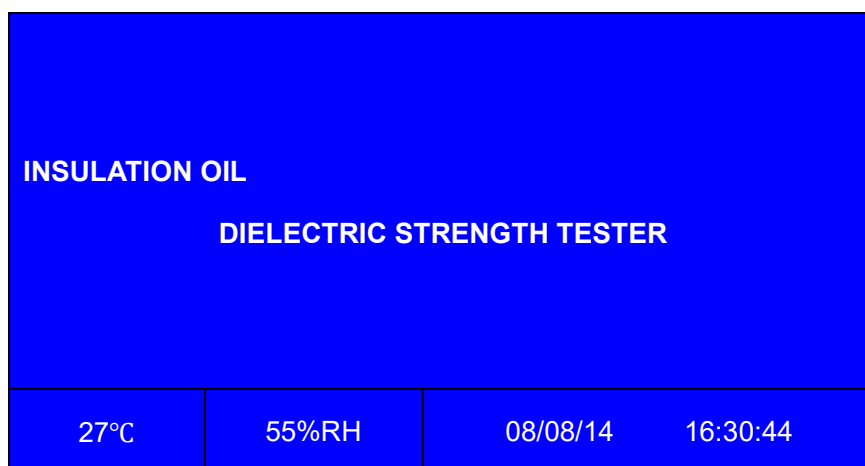

Parameter Setting Start Testing Data Viewing and Printing			
27°C	55%RH	08/08/14	16:30:44

② Setting of system parameters:

Press “Enter” key and enter the following interface:

Voltage of boosting stop: 100KV Standing time: 0~15min Interval of boosting: 0~5min Stirring switch: On Boosting frequency: 1~6 Voltage boosting rate: 0.5~5 KV/S		Print Automatically: YES
		08/08/14 16:36:21
27°C	55%RH	08/08/14 16:30:44

Setting of voltage boosting: the user may select based on actual demand.

Voltage of boosting stop: 10~100KV Standing time: 0~15min Interval of boosting: 0~5min Stirring switch: On / Off Boosting frequency: 1~9 Voltage boosting rate: 0.5KV/S~5 KV/S	Autotype: Yes / No System time:
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------

Press "Esc" key to exit this interface after the setting is done.

③ Testing:

Press the "Select" key to select the "Start Test" menu and press the "Enter" key to enter the following interface:

Standing, Please wait.....			Start
863			Back
27°C	55%RH	08/08/14	16:30:44

Voltage is boosting.....			Start
Average:56.0KV (1)56.0KV			Stop
			Voltage Boosting
			Voltage reducing
			Back
27°C	55%RH	08/08/14	16:30:44

Stirring, Voltage Reducing and Delaying.....			Start
288			Back
27°C	55%RH	08/08/14	16:30:44

The first test is finished here and the next test starts until the boosting frequency is reached. Finally, the result is showed and printed as follows:

Data of Test			Print
Average:53.8KV (1)56.0KV (2)50.4KV (3)55.1KV (4)54.3KV (5)54.3KV (6)53.1KV			Empty
27°C	55%RH	08/08/14	16:30:44

④ Data viewing and printing:

Press the “select” key to select the “Data Viewing and Printing” menu and press the “Enter” key to enter the following interface:

Test Data			Page Up
Average Value: (1)56.0KV (2)50.4KV (3)55.1KV (4)54.3KV (5)54.3KV (6)53.1KV 16 Articles in total, No.01 article is displaying			Page Down
			Print
			Empty
27°C	55%RH	08/08/14	16:30:44

Select “Page Up” or “Page Down” and select the records to be printed and select “Print”.

VI. Precautions

1. The selection, placing and electrode distance of the oil sample before testing shall meet relevant national and industrial standards.
2. The operators or other personnel are strictly forbidden to touch the casing after the power is switched on to avoid accidents.
3. The power shall be cut off immediately if any abnormal event is found during the operation.

VII. Maintenance

1. This equipment shall not be exposed in moist environment.
2. Keep the oil cup and the electrodes clean. Fill the cup with fresh transformer oil for protection during its idle. Check the electrode distance and check the tightness between the electrode tip and electrode bar screw thread before the cup is used again.

VIII. Oil Cup Cleaning Method And Common Fault

Clearances

1. Oil Cup Cleaning Method

(1) Wipe the electrode surfaces and bars again and again with clean silk cloth.

(2) Adjust the electrode distance with standard gauge.

(3) Use petroleum ether (other organic solvents are forbidden) to clean thrice. Each time shall follow the bellow procedures:

① Pour the petroleum ether into the oil cup till the cup is $1/4 \sim 1/3$ full.

② Cover the cup mouth with a piece of glass cleaned by petroleum ether.

Shake the cup evenly for one minute with certain force.

③ Pour away the petroleum ether and dry the cup with a blower for 2~3 minutes.

(4) Use the oil sample to be tested to clean the cup for 1~3 times.

① Pour the petroleum ether into the oil cup till the cup is $1/4 \sim 1/3$ full.

② Cover the cup mouth with a piece of glass cleaned by petroleum ether. Shake the cup evenly for one minute with certain force.

③ Pour away the left oil sample and then the test starts.

2. Agitating Blade Cleaning Method

(1) Wipe the agitating blade again and again with clean silk cloth until fine particles are not found on their surfaces. It is forbidden to touch the surfaces with hands.

(2) Use forceps to clamp the blade; put them into petroleum ether and wash.

(3) Use forceps to clamp the blade and dry them with a blower.

(4) Use forceps to clamp the blade; put them into the oil sample to be tested and wash.

3. Oil Cup Storage

Method 1 Fill the cup with good insulating oil after the test is finished and place it stable.

Method 2 Clean and dry the cup under the above procedures and then put it into a vacuum dryer.

Note: The oil cup and agitating blade shall be cleaned under the above procedures after the first test and tests with poor oil.

4. Common Fault Clearances

(1) Power light off, screen display off

① Check the plugging of power plug.

② Check the condition of the protector tube inside the power plug.

③ Check the socket electricity.

(2) No punch through oil cup

① Check inserting of connectors on circuit board.

② Check contacting of cap high-voltage switch.

③ Check attracting of high-voltage contacts.

④ Check break of high-voltage line.

(3) Light display contrast

① Adjust the potentiometer on the circuit board.

(4) Printer failure

① Check plugging of printer power line.

② Check plugging of printer data line.

IX. Packing List

No.	Item	Qty
1	Main engine	1
2	Oil Cup	1
3	Elbow	2
4	Stirrer	2
5	Tweezers	1
6	Feeler gauge	1
7	Power line	1
8	Fuse pipe	2
9	Print paper	2
10	Allen wrench	1

Made in China

FÖHR Group Electrical Measurement Equipment

MANUFACTURED BY H.E.M.B. CO.LTD

CE/ISO/CNAS/IAF CERTIFIED

info@fohrgroup.com

www.fohrgroup.com

LEGAL DISCLAIMER AND LIMITATION OF LIABILITY

(Intellectual Property and Manufacturing Responsibility Statement) Effective Date: JANUARY 2025. This Legal Disclaimer and Limitation of Liability Statement ("Statement") is issued by FÖHR (the "Brand").

1. Manufacturing Structure. FÖHR is a commercial brand engaged in the marketing and distribution of electrical testing and industrial equipment. FÖHR does not design, engineer, develop, or manufacture the products directly. All products bearing the FÖHR brand name are manufactured, assembled, or produced by independent third-party original equipment manufacturers (OEMs) and contract manufacturers under private-label or contract manufacturing agreements. FÖHR operates solely as a brand owner and distributor.

2. No Ownership of Underlying Technology. FÖHR does not claim ownership of any underlying patents, utility models, industrial designs, trademarks, trade secrets, copyrights, proprietary software, firmware, embedded systems, or other intellectual property rights associated with the engineering or technological development of the products unless expressly stated in a separate written agreement. All intellectual property rights remain the sole responsibility of the respective manufacturers or lawful rights holders.

3. Intellectual Property Compliance Responsibility. Each independent manufacturer supplying products to FÖHR represents and warrants that: The products do not infringe any third-party patents, trademarks, copyrights, industrial designs, trade secrets, or other intellectual property rights. The products comply with applicable international intellectual property laws, including but not limited to: The TRIPS Agreement (WTO) The Paris Convention for the Protection of Industrial Property. The Berne Convention for the Protection of Literary and Artistic Works. Applicable national patent, trademark, and copyright laws in the jurisdictions where the products are manufactured or sold. FÖHR relies in good faith on such representations from its manufacturers.

4. Disclaimer of Liability for Intellectual Property Claims. To the fullest extent permitted by applicable law, FÖHR shall not be held liable for: Any alleged or actual patent infringement; Trademark violations; Copyright infringement; Misappropriation of trade secrets; Unauthorized use of proprietary technology; Design rights violations; Or any other intellectual property claim arising from the manufacture, design, engineering, or technological development of the products. Any claims relating to intellectual property infringement shall be directed exclusively to the original manufacturer responsible for the design and production of the goods.

5. No Independent Technology Development. FÖHR does not reverse engineer, modify core technologies, or alter proprietary engineering components supplied by its manufacturers. FÖHR does not independently develop internal circuitry, embedded firmware, measurement algorithms, or proprietary testing methodologies associated with the equipment.

6. Indemnification by Manufacturers. Manufacturers supplying products under the FÖHR brand are contractually required to indemnify, defend, and hold harmless FÖHR, its directors, officers, shareholders, affiliates, distributors, and agents from and against any claims, damages, liabilities, costs, or expenses arising from alleged intellectual property violations.

7. Jurisdictional Limitation. Nothing in this Statement shall exclude or limit liability where such exclusion is prohibited by mandatory law in any applicable jurisdiction. In jurisdictions where limitations of liability are restricted, FÖHR's liability shall be limited to the maximum extent permitted by law.

8. No Admission of Liability. This Statement does not constitute an admission of liability, infringement, wrongdoing, or legal responsibility of any kind.

9. Governing Law. This Statement shall be governed by and construed in accordance with the applicable commercial laws of the jurisdiction in which FÖHR is legally incorporated, without regard to conflict of law principles.