Package Contents

- Mouse × 1
- USB Receiver × 1
- Charging Cable × 1
- Manual × 1

Technical Specifications

Product Type: Wireless Mouse

Wireless Type: 2.4G

Wireless Frequency: 2402~2480 MHz
Resolution: 800 / 1200 / 1600 / 2400 DPI

Charging Voltage: 5V = 500mA

Product Model: F9Battery Capacity: 3.7V

Operating Distance: 14 meters

Supported Operating Systems: Windows / Mac OS

Charging Instructions

- 1. Connect the mouse to a powered USB port or USB charger using the provided charging cable.
- 2. When charging, the LED will light up to indicate charging is in progress.
- 3. The charging indicator light will turn off when charging is complete. You can then use the mouse wirelessly.

Indicator Light Instructions

- When battery level is between 75%-100%: The indicator light will flash once every three seconds.
- When battery level is between 50%-75%: The indicator light will flash once every two seconds.
- When battery level is between 25%-50%: The indicator light will flash once per second.
- When battery level is between 0%-25%: The indicator light will flash rapidly, signaling the need to charge the mouse.

Product Warranty

Thank you for purchasing our product. Inphic Electronics Co., Ltd. ensures product quality by providing continuous technical support and dedicated service. This warranty policy is

intended to offer repair and exchange services for products that fail due to manufacturing defects under normal usage.

- 1. **Warranty Period**: The product is covered by a three-year warranty, starting from the date of purchase, during which time it will be repaired free of charge if necessary.
- 2. **Free Replacement**: If the product experiences malfunction within seven days of purchase (from the issue date on the receipt), and it is determined to be due to a manufacturing defect, you may request a free replacement after confirmation from the service center.
- 3. **Repair Service**: If the product is faulty after seven days but within the warranty period, Inphic will provide repair services.
- 4. **Post-Warranty Repair**: After the three-year warranty period has expired, you may still request repairs, but they will be performed at the user's expense.

The Following Conditions Are Not Covered by Warranty

- 1. Damage caused by improper use, such as liquid spills, drops, fire, or other accidents.
- 2. Unauthorized repairs, modifications, or disassembly by the user.
- 3. Damage caused by natural disasters, such as floods, earthquakes, or lightning.
- 4. The absence of valid proof of purchase, such as a receipt or invoice.

Other Information

If you encounter issues with your product, please contact the designated service center. The receipt or purchase voucher must be presented during repair services. If it is determined that the fault is due to improper usage, repair costs may be charged.

Environmental Protection Statement

This product complies with environmental protection requirements based on SJ/T 11364 (electronic products pollution control), with a service life of 10 years. During this period, hazardous substances are unlikely to leak out of the product under normal usage.

Safety Instructions

Before using the product, please read this manual carefully and keep it for future reference. The normal working environment for the product is 0°C - 40°C , with humidity between 40°C - 85°RH .

Warning:

- Keep the product out of reach of children.
- In case of any malfunction (e.g., a stuck button, abnormal sound), immediately turn off the device and unplug it from the USB connection to avoid any accidents. Only resume use after ensuring that it has returned to normal working condition.
- Please use the product with caution and ensure it is disconnected from the USB port when not in use to prevent overheating.

Important:

- Do not use the product on unstable surfaces. Keep children or individuals with disabilities away from the product to avoid injury from improper use. Do not attempt to open or modify the device, as this can cause irreparable damage.
- If the device gets wet, immediately turn off the power and unplug it to avoid any electrical accidents.
- Using the device in dusty or excessively humid environments, or exposing it to direct sunlight, may result in damage or reduced product life.
- For your safety, avoid any unauthorized modifications. In case of malfunction, please contact the authorized service center.

Maintenance:

- Clean the product with a dry, soft cloth. Avoid using any detergents, solvents, or other chemicals that may cause damage to the product's surface or internal components.
- If the product is not used for an extended period, ensure it is stored in a clean, dry environment and unplug it to avoid unnecessary energy consumption.

Return/Exchange:

• If the product does not work correctly due to quality issues, you can contact the designated service center for assistance.

Official Website: www.inphic.cn

Customer Service Hotline: 4000-187-128