

---

## Portable Mini Printer

### Operating Manual

---

#### Product Specification

- **Size:** 79x79x42 mm
  - **Weight:** 220g
  - **Printing method:** Thermal printing
  - **Resolution:** 203dpi
  - **Printing width:** 57mm
  - **Input voltage:** 5V/2A
- 

#### Use the Wizard

1. **Power on:** Press and hold the power button for 3 seconds to turn on.
  2. **Connect via App:** Download the app and connect your device via Bluetooth for printing.
- 

#### Key Interface Specification

- **Print outlet:** Location where the paper exits after printing.
  - **Paper cover:** The cover protecting the paper roll.
  - **Print lamp:** Indicates the status of the printer.
  - **Power button:** Used to turn on/off the device and manage functions.
  - **USB charging port:** For charging the device.
- 

#### Indicator Status

- **Green light:** Device is powered on and ready.
  - **Red light:** Low battery or error.
  - **Flashing light:** In progress, like pairing or printing.
- 

#### Brief Introduction

This mini portable printer supports thermal printing technology, allowing users to print without ink. It is suitable for printing notes, images, and labels, making it ideal for students, office workers, and home use. This product provides an efficient and convenient printing experience. The high-quality build ensures it can handle a variety of tasks.

---

## Maintenance and Care

- Ensure the printer is kept in a dry environment and avoid exposure to high temperatures or direct sunlight.
- Regularly clean the printer head and roller to maintain clear printing quality.
- Charge the printer fully before long-term storage to preserve battery life.
- Avoid placing heavy objects on the device to prevent damage.

---

## Paper Replacement Guide

**Open the Paper Cover:** Press the latch button to open the cover and expose the paper compartment.

**Insert the Paper Roll:** Take out the old paper roll and insert a new one with the correct alignment. Ensure the paper exits through the opening at the top. Close the cover securely.

**Verify Installation:** After installation, pull out a small section of the paper to ensure it is aligned correctly. The printer is now ready for normal use.

**Printing Test:** After the paper is correctly inserted, the machine can print normally.

---

## Battery Warning Note

It is recommended to charge the device according to the following conditions:

 
1. Charge in a ventilated, dry environment.
2. Stop charging once the battery is fully charged.
3. Use the specified charger to prevent damage to the battery.
4. If not used for long periods, charge the device every 2-3 months to maintain battery life.
5. Replace the battery according to product specifications when needed.

---

## Maintenance and Recycling

1. Please charge the printer and use it in a dry environment.
2. Do not discard batteries in normal trash. Recycle batteries at designated recycling centers to prevent environmental damage.
3. Avoid using the printer in environments with high humidity or temperatures.
4. Follow the recommended procedures for maintaining and recycling the product to ensure longevity.

## Key/interface specification

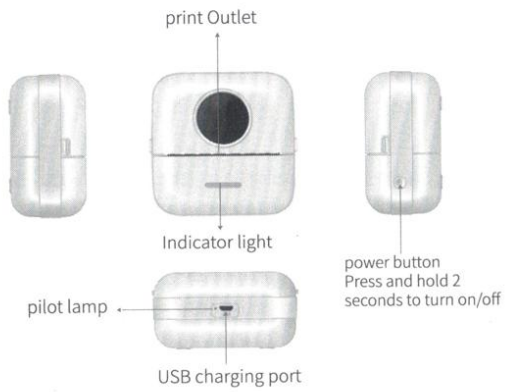

### Indicator status

Green light flash: Normal use status.
Red light on: Out of paper/Overheat/Cover opened.
Red/Green light flash: low power



- After bluetooth is enabled, use the app downloaded from the mobile phone to connect to the Bluetooth printer in the TAB bar of "My device". After successful connection, the note can be printed.

## Paper replacement course

1.



press both sides inward according to the direction indicated by arrow 1, while opening the paper bin cover lid upward as shown in arrow 2.



3.



Cover the paper bin, the machine can automatically absorb paper after normal use

 
## Product specification

battery capacity: 800mAh	Sharpness: 200dpi
Printing method: inkless printing	Paper size: 57*26MM*6M
Display method: Black and white	bluetooth: 2.1/4.2
Product Size: 82X82X45MM	Input power: DC5V 2A

## Use the wizard




- First use please charge first, long press the power key 3 seconds to boot.



- Apple store or Google search: Tiny Print installed APP to use.



 2.

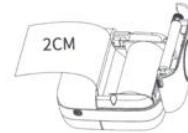

Take out the old paper roll and put the new paper roll in the direction shown. The paper should be put straight and not crooked. (Note: The new thermosensitive paper needs to be exposed to 2 cm of paper bin length so that the machine can absorb paper automatically when the paper bin is shaped)

3.



Cover the paper bin, the machine can automatically absorb paper after normal use

4.



After the above steps are correct , the machine can print normally.

#### Battery Warning Note

- 1 . Please use 5V charger to charge according to the specification to avoid damage to the machine
- 2 . Disassembly , impact , extrusion or fire are prohibited ;
- 3 . If severe bulging occurs , do not continue to use ,
- 4 . Do not put in high temperature environment , battery after immersion is prohibited to use;
- 5 . Replacement with the wrong type of battery can be explosive , be sure to follow the instructions to dispose of used batteries .

#### Matters needing

- 1 . when charging . please gently insert or pull out the charging line to prevent excessive force damage to the port;
- 2 . After charging , please unplug the charging line in time
- 3 . In order to avoid danger , do not use or charge in high temperature ,high humidity , excessive smoke and dust environment . such as: bathroom , steam room , open fire , etc ;
- 4 . Improper charging may lead to print head damage ;
- 5 . Do not touch the print head to prevent overheating and scalding ;
- 6 . Tear paper blade sharp , be careful not to touch ;
- 7 . Contains small parts, not suitable for children under three years of age to use
- 8 . The Guardian should be in custody while the child is playing.