

## **Commercial Gas Hot Plate**

**HD**B-12

## **SPECIFICATION SHEET**

## MODEL#: HDB-12



## **Choose GAS TYPE When Placing Order**

LPG
Liquid Propane Gas

NG
Natural Gas

## **POWER**

2 BURNERS; TOTAL POWER=50,000BTU

#### MODEL # HDB-12

## **Features**

- Front/Left/Right side panel material is \$\$430
- Heavy duty cast iron burners and cooking grate
- Drip resistant burners allow for faster heating


and even heat distribution


- Chrome knobs with visible on/off indicators
- Full width aluminum drip pan try
- Angled slope hotplates keep grease away from burners and pilot lights
- Front access for light of pilot lights


#### **Standard Accessories**


- Adjustable bullet leg
- Regulator
- Orifice
- Instruction manual

#### PRODUCT DIMENSION CHART Model: **HD**B-12

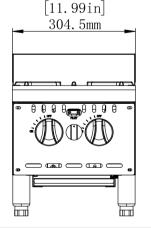

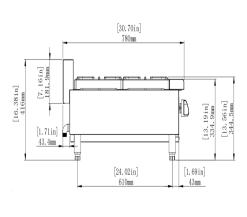

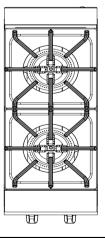

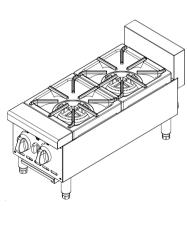

| Model # | <b>Product Dimension</b> | Heat Power   | Heating<br>Burner | Gas Consumption:                    | Gas inlet<br>Connection | N.W  | G.W    | Packing<br>dimension |
|---------|--------------------------|--------------|-------------------|-------------------------------------|-------------------------|------|--------|----------------------|
| HDB-12  | 304.5X738X334.9mm        | 25,000 BTU/H | 2                 | LPG:0.68 (kg/h)<br>NG: 1.578 (kg/h) | 3/4"BSP Male            | 43kg | 29.5kg | 400*885*415mm        |

#### COCINA EQUIPMENT PTE LTD

ADD: 3018 Ubi Road 1 #04-121 S408710 Email: enquiry@cocina-equipment.com



## **Commercial Gas Hot Plate**

**HDB-12** 

## PARAMETERS SHEET

MODEL#: HDB-12

#### NOTES BEFORE USING

#### NOTICE

These installation procedures must be followed by qualified personnel or warranty will be void. Local codes regarding installation vary greatly from one area to another. The National Fire Protection Association, Inc. states in its NFPA 96 latest edition that local codes are the "authority having jurisdiction" when it comes to installation requirements for equipment.

Gas Supply and Burner Information Supply pressure should be minimum of 4" W.C. for natural gas or 10" W.C. for propane.

If the gas type needs to be changed from LPG to NG, the nozzles of main burner and pilot flame should

be replaced.

| Model # | Quan .of<br>heating Tube | Power/Heating tube | Total Power | Gas type | Manifold pressure | Orifice Size |
|---------|--------------------------|--------------------|-------------|----------|-------------------|--------------|
| HDB-12  | 2                        | 25,000BTU/H        | 50,000BTU/H | LPG      | 2800Pa            | #52          |

#### **!! WARNINGS**

There must be adequate clearance between hot plate(s) and construction. Clearance

must also be provided in front for servicing and for operation.

Minimum Clearances:

From Combustible Construction

Sides 6 inches Rear 6 inches

ALL GAS FLOOR MODEL HOT PLATE SHALL BE INSTALLED WITH AT LEAST A 16 INCH SPACEBETWEEN THE FRYER AND SURFACE FLAMES FROM ADJACENT EQUIPMENT. A FLAMEGUARD IS ACCEPTABLE IF ALLOWED UNDER LOCAL CODE.

No additional side and rear clearance is reauired for service as the range is serviceable from the front.

#### **WARNINGS**

- Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other equipment.
- Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death.
- Read the installation and maintenance instructions thoroughly before installing or servicing this equipment.
- Keep children and animals away from unit.
- Have the equipment installed by a qualified installer in accordance with all federal, state and local codes.
- This equipment should only be used in a flat, level position.
- If gas odor is detected, shut unit down at main shutoff valve and contact service company.
- Do not install or use without all 4 legs.
- Do not obstruct the flow of combustion and ventilation air.
- Do not spray controls or the outside of the equipment with liquids or cleaning agents
- Any loose dirt or metal particles that are allowed to enter the gas lines on this equipment will damage the valve and affect its operation

# PLEASE DO READ USER MANUAL CAREFULLY BEFORE USING THE EQUIPMENT

#### COCINA EQUIPMENT PTE LTD

ADD: 3018 Ubi Road 1 #04-121 S408710 Email: enquiry@cocina-equipment.com