


THE USER INSTRUCTIONS FOR USE

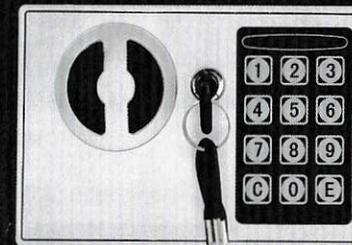

Made in China

ONE: USAGE STEPS



ENTER THE PASSWORD 159




PRESS E TO CONFIRM



THE GREEN LIGHT IS ON
TURN THE KNOB IN 5 SECONDS


TWO: CHANGE PASSWORD

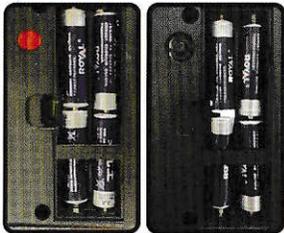

PRESS THE RED BUTTON DOOR




5 SECONDS TO ENTER A
NEW PASSWORD OF 3-8 BIT

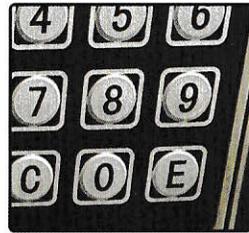

PRESS E TO CONFIRM

THREE: HOW TO USE THE EMERGENCY KEY

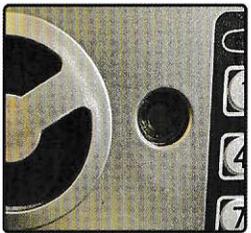

OPEN THE EMERGENCY KEY COVER



INSERT THE EMERGENCY KEY



THE KEY AND THE KNOB
ROTATES AT THE SAME TIME

INTELLIGENT ELECTRONIC SAFE




Please do not keep emergency keys in your safe!

Dear valued customer:

Thank you for choosing our products! You've taken an important step in organizing and protecting your most valued possessions. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Schematic drawing of case

Schematic drawing of control panel

  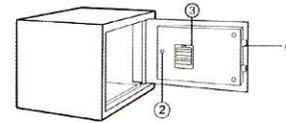

1. Locking bolts
2. Reset button
3. Battery compartment
4. Emergency lock cover
5. Knob
6. Keypad
7. Confirming button
8. Screw fixed safe method

OPENING YOUR SAFE FOR THE FIRST TIME

Upon first opening, users should open the safe with the emergency key. The operation in details refers to "opening the safe with the emergency key".

·Remove emergency lock cover, then insert the emergency key, and turn it counter clockwise.

·Turn the knob clockwise to open the door.

CAUTION: Finish operation, pull out the emergency key and keep it in a safe place.

INSERTING THE BATTERIES

·Open the door.

·Insert 4 X AA batteries into the battery compartment.

·Under normal condition, if both of the red and the green lights are on at the same time, it means the voltage is low and you should insert new batteries.

CAUTION: Replace 4 fresh batteries by lining them up in a manner as indicated by the "+" and "-" signs. When outage, you should reset the user's code.

OPENING DOOR

·Input your user's code (3 to 8 digits), each pressing results one buzzer beep and yellow light

flashes.

·Press "E" button, the green light will be on.

·Rotate the knob clockwise and pull outwards within 5 seconds, the door is opened.

CAUTION: The user preset code is "159". Please input the user code again if the yellow light flashes with three buzzer beeps.

CLOSING DOOR

·Turn the knob counter clockwise to close the door.

AUTOMATIC LOCK

·3 continuously wrong entries, the red light is flashing for 20 seconds.

·Another 3 continuously wrong entries, the red light is flashing for 5 minutes.

CAUTION: The keypad would be disabled during the beeping. You can only stop the beeps by opening the safe with emergency key and power-cut by removing the battery.

SETTING THE USER CODE

·With the door open, press the reset button, start setting code when the yellow light goes on.

·Input new code (3-8 digits), and press the "E" button to confirm with 2 buzzer beeps, which indicates the acceptance and storage of the new code.

·If the yellow light flashes with 3 buzzer beeps, which means the code changing is not effective, and you need to try again.

OPENING THE SAFE WITH THE EMERGENCY KEY

Upon first receipt of the safe, or out of power or codes unknown, you could use the emergency key to open the safe.

·Remove the cover of the emergency lock.

·Insert the emergency key, turn it counter clockwise, then turn the knob clockwise to open the door.