




OWL PLATFORM Assembly Order


3/28/26

REDWOOD


BASE

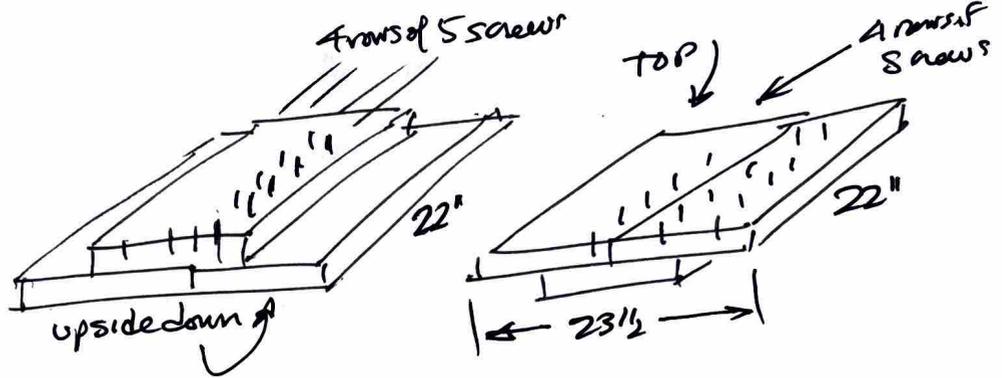


8" & 9" SIDES.

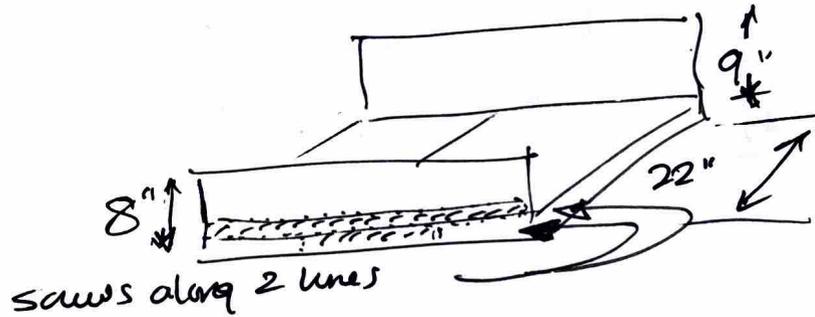


ANGLED SIDES

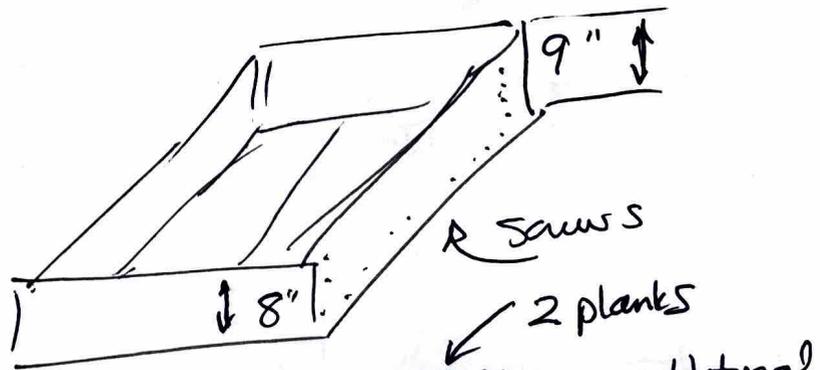

ADDITIONAL
9" SIDE

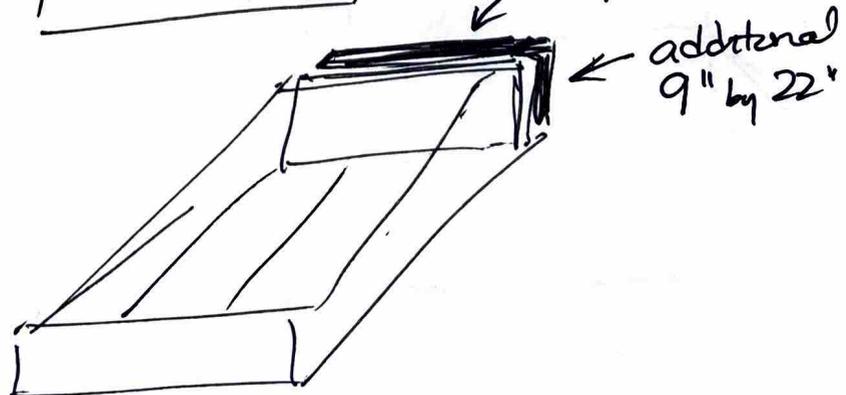


METAL MOUNT

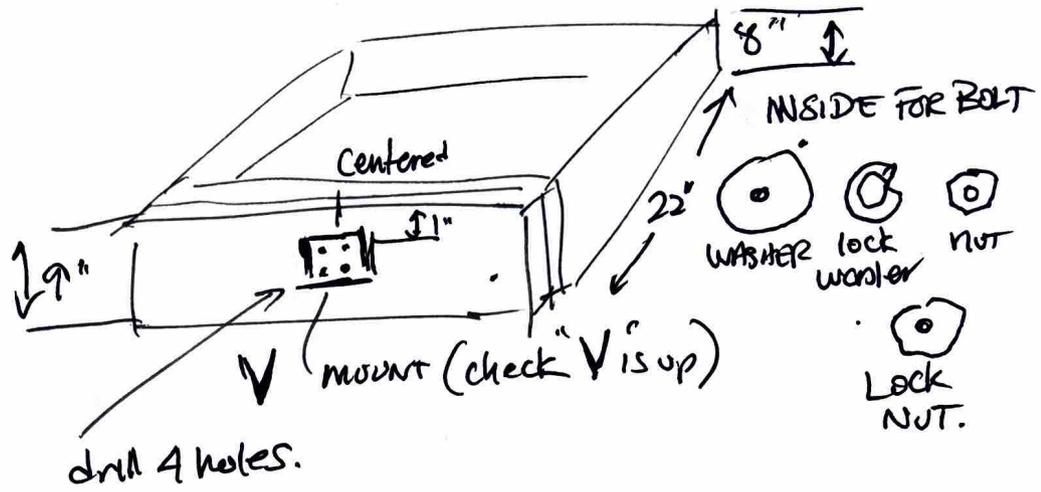


BRACING

short screws
 &
 long screws


4 off
 2" brackets

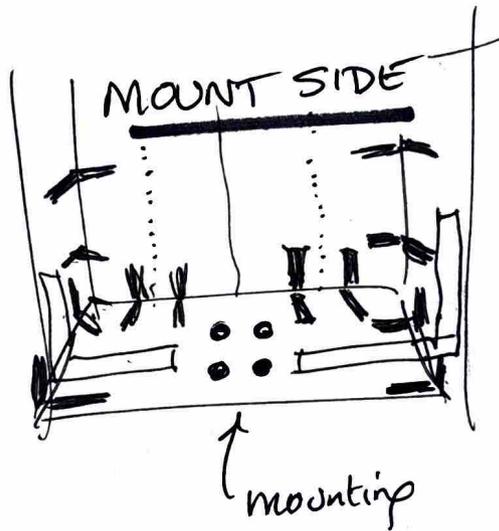

- 12 3" L brackets
- 2 galvanized brace


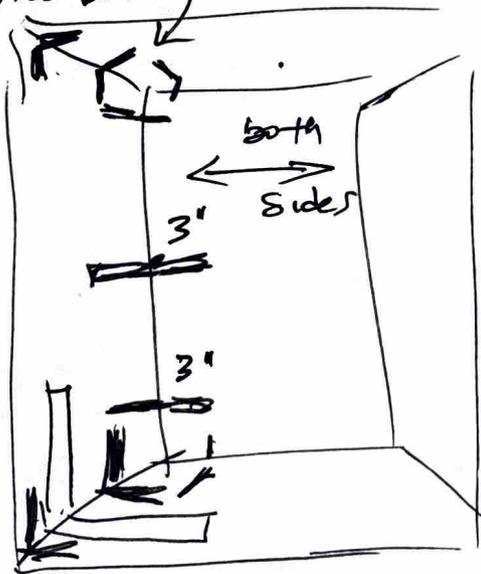


SIDE BRACKETS

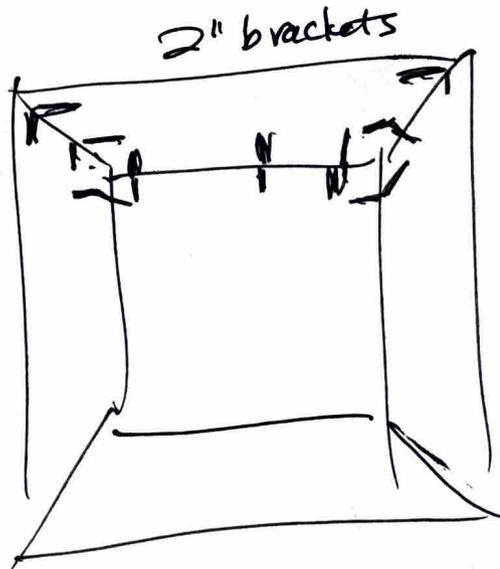


opposite MOUNT side

CORNER BRACING

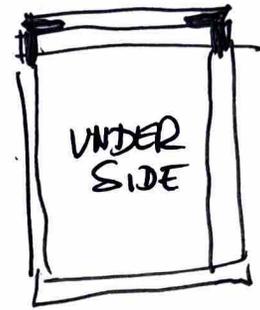
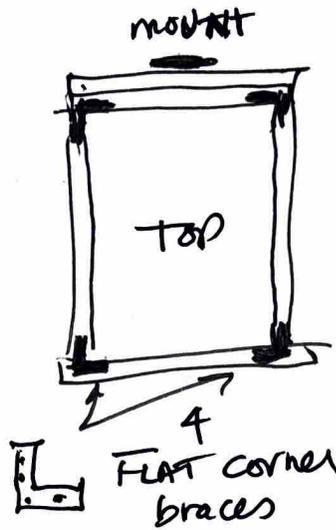


2 flat braces


STAGGERED SHINGLES

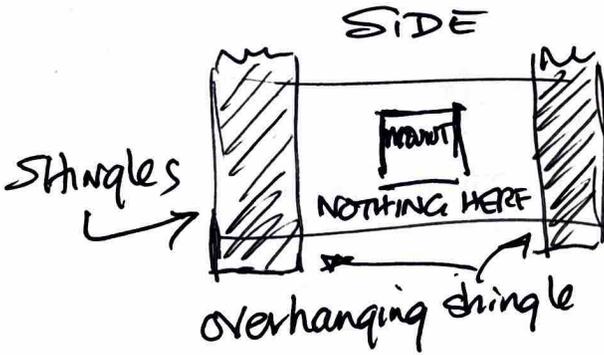



1st layer shingles

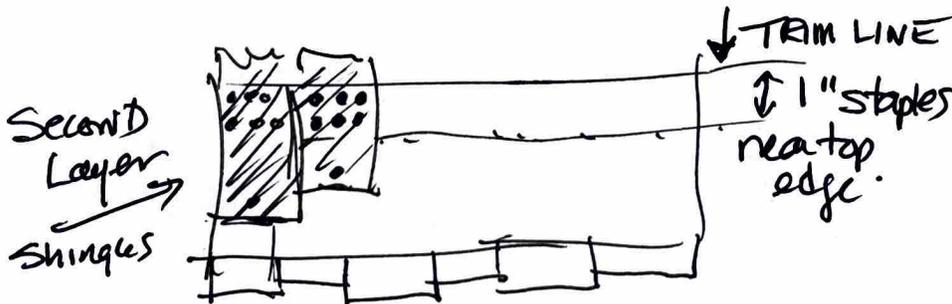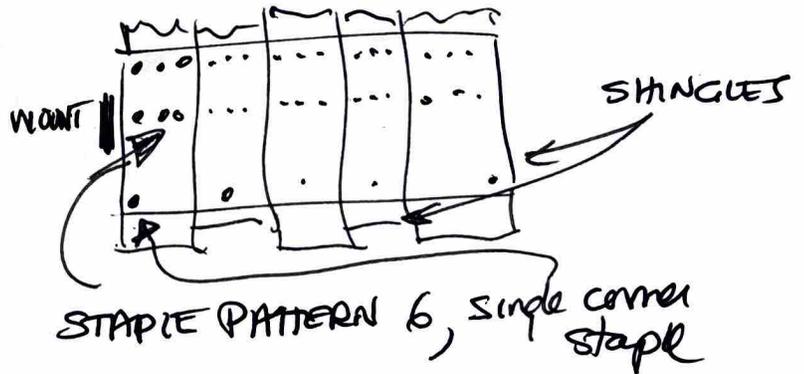


Repeat on remaining 2 sides

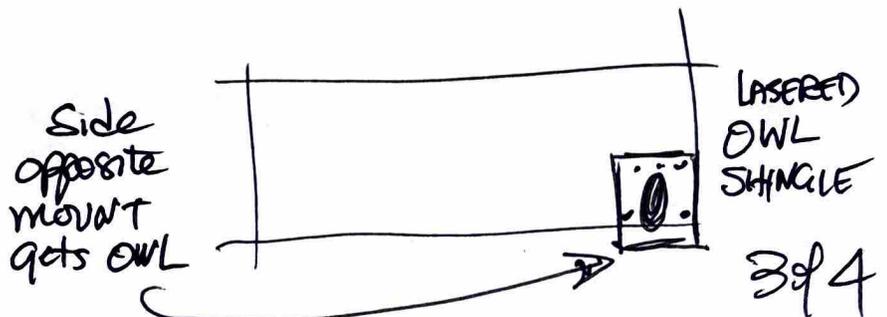

TRIM SHINGLES

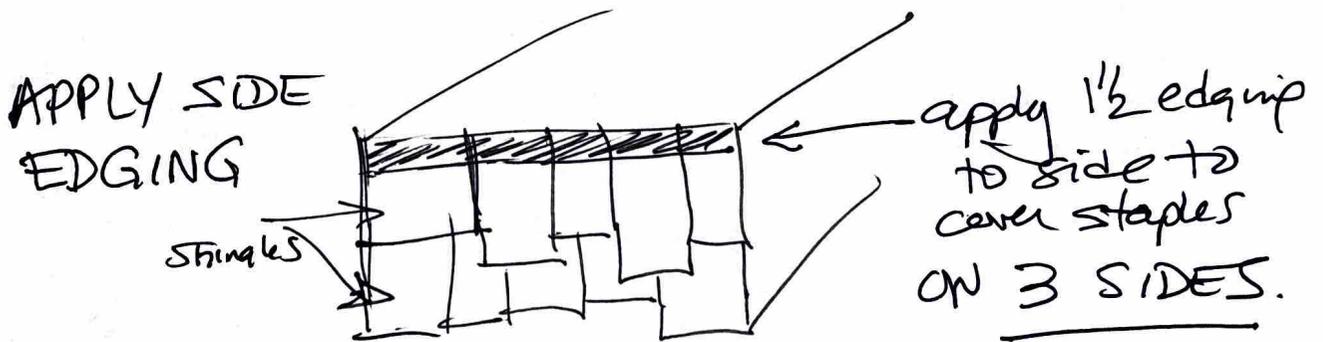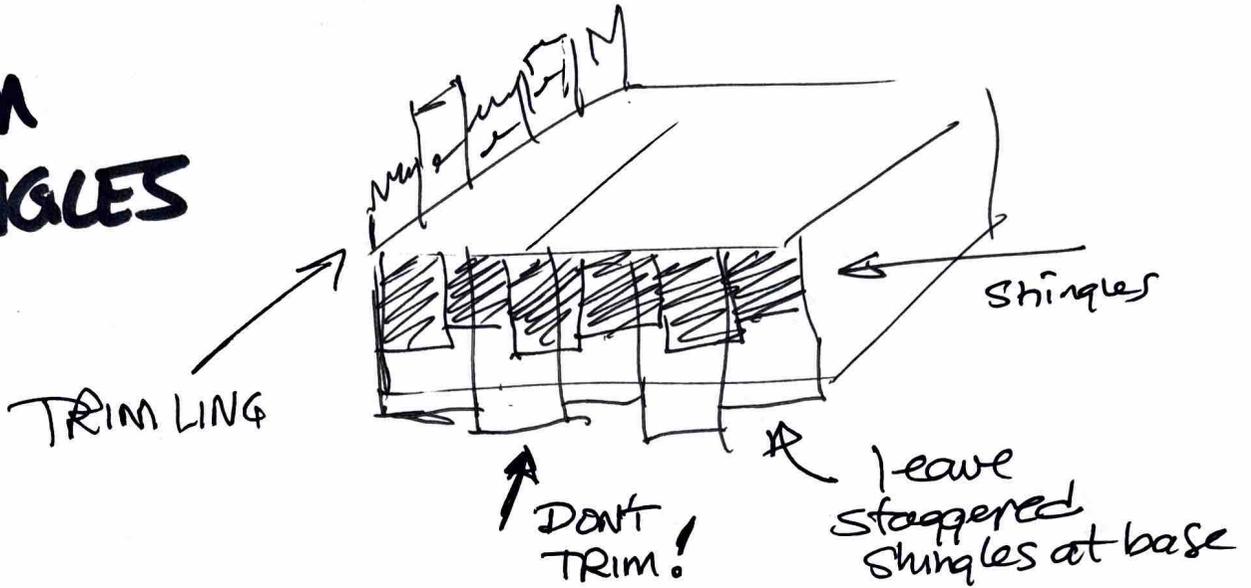

APPLY TOP EDGING

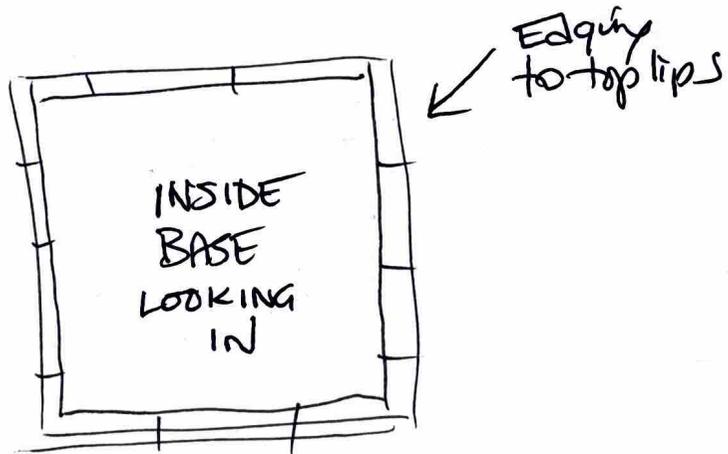

STAIN - every trip thickly