




1 EW Ext. corner
A 1:10

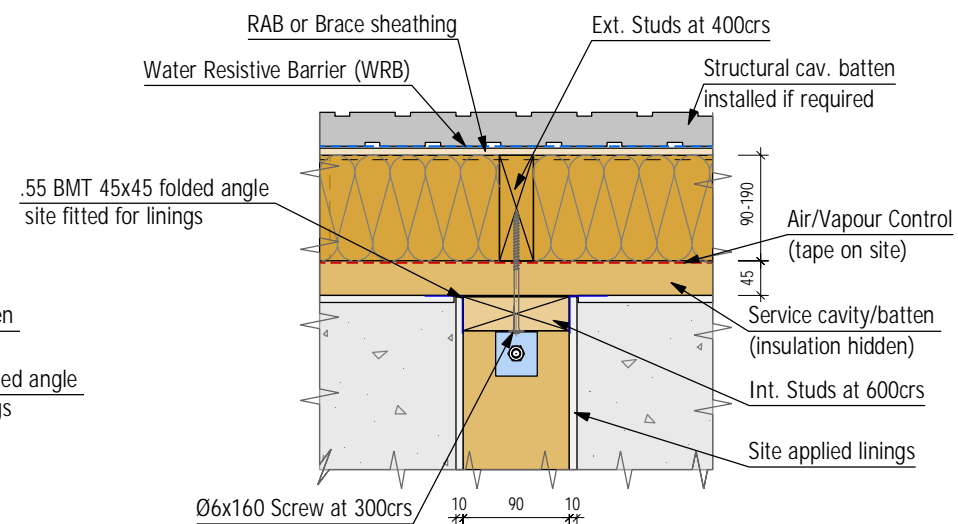


2 EW/IW T junction
A 1:10

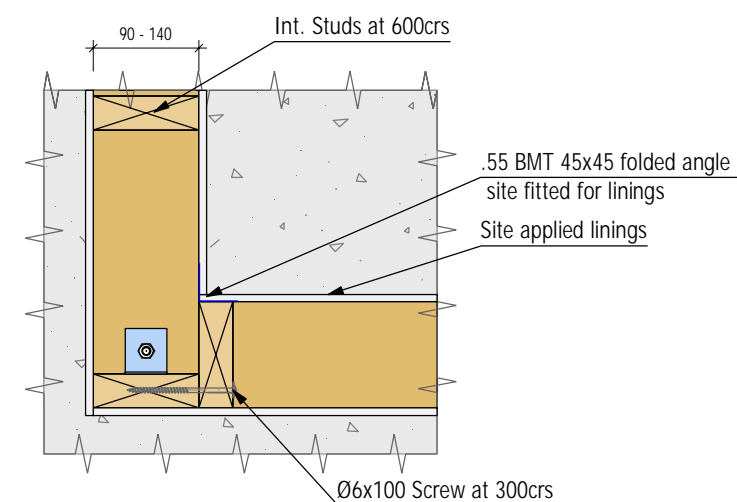


3 IW 90° corner
A 1:10

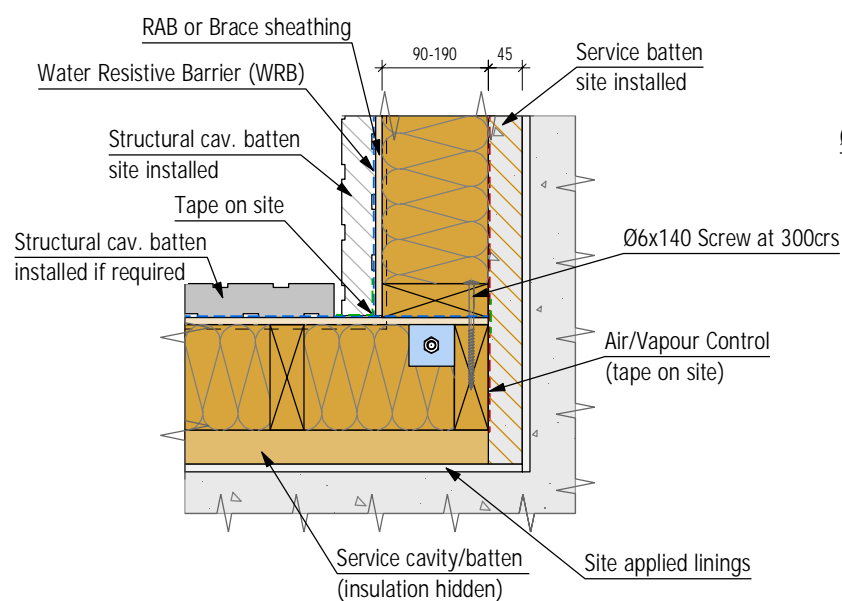

4 EW Int. corner
A 1:10



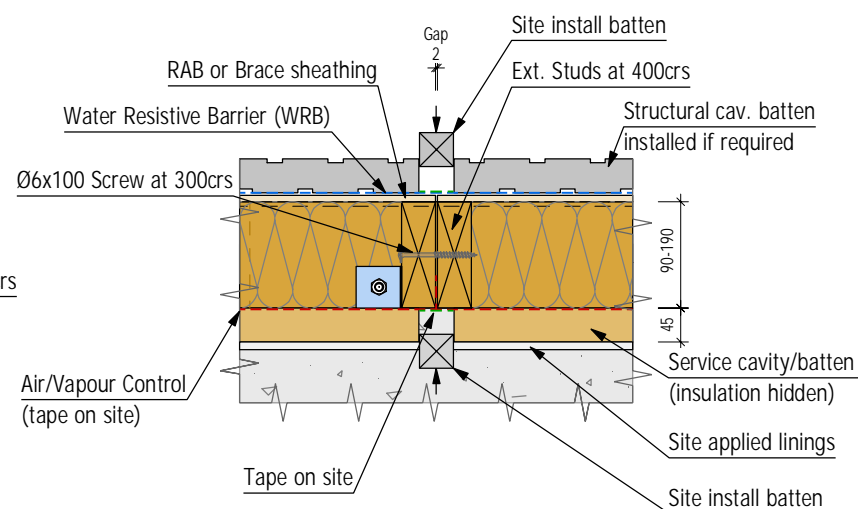


5 EW inline junction
A 1:10



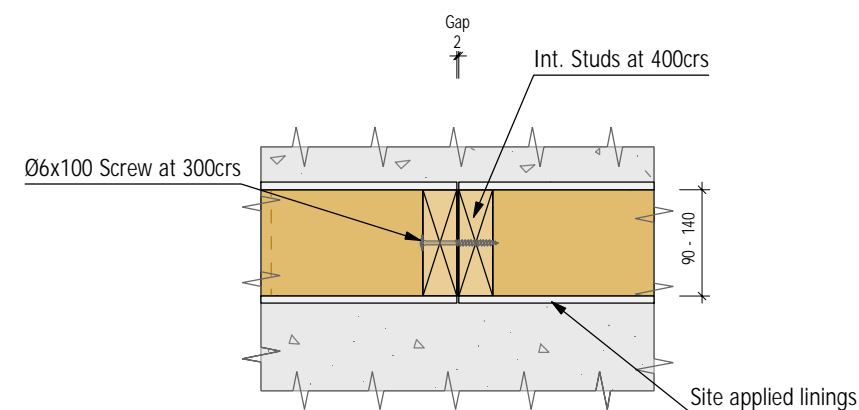



6 IW inline junction
A 1:10

DRAFT for COMMENT

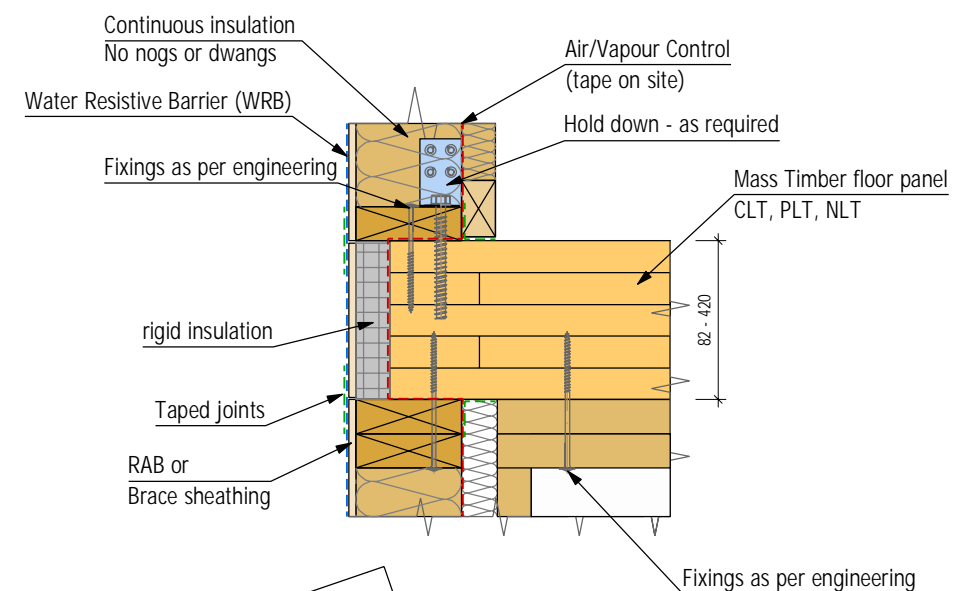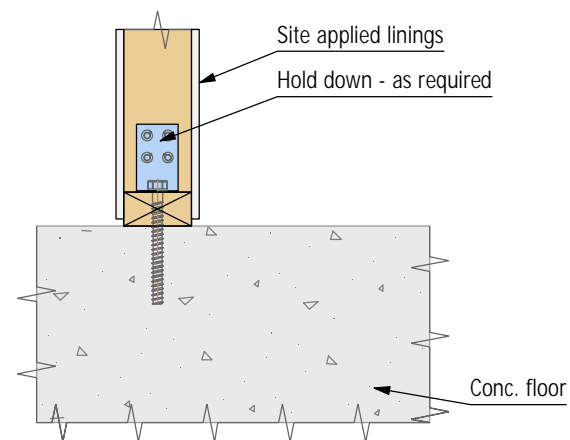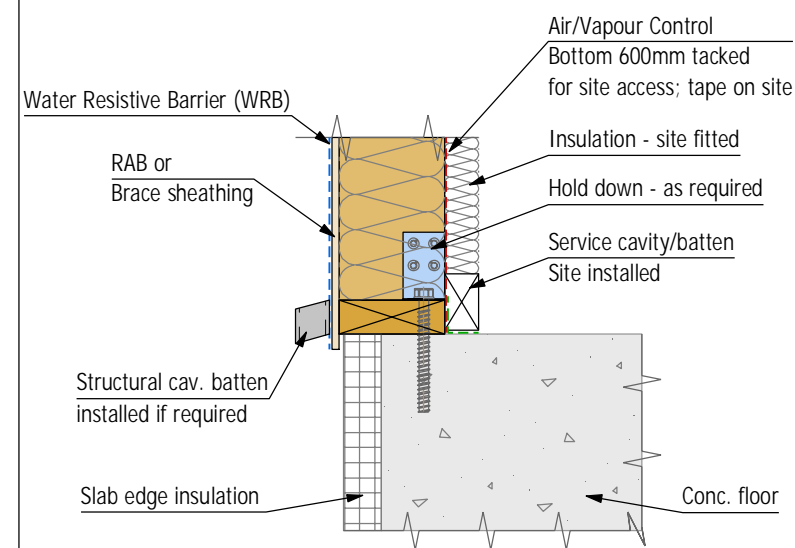


DRAFT for COMMENT

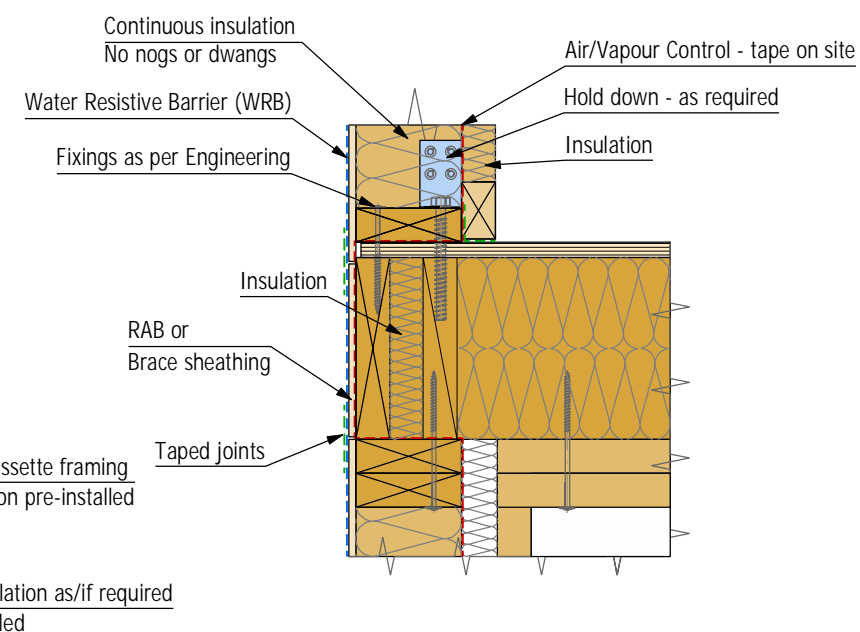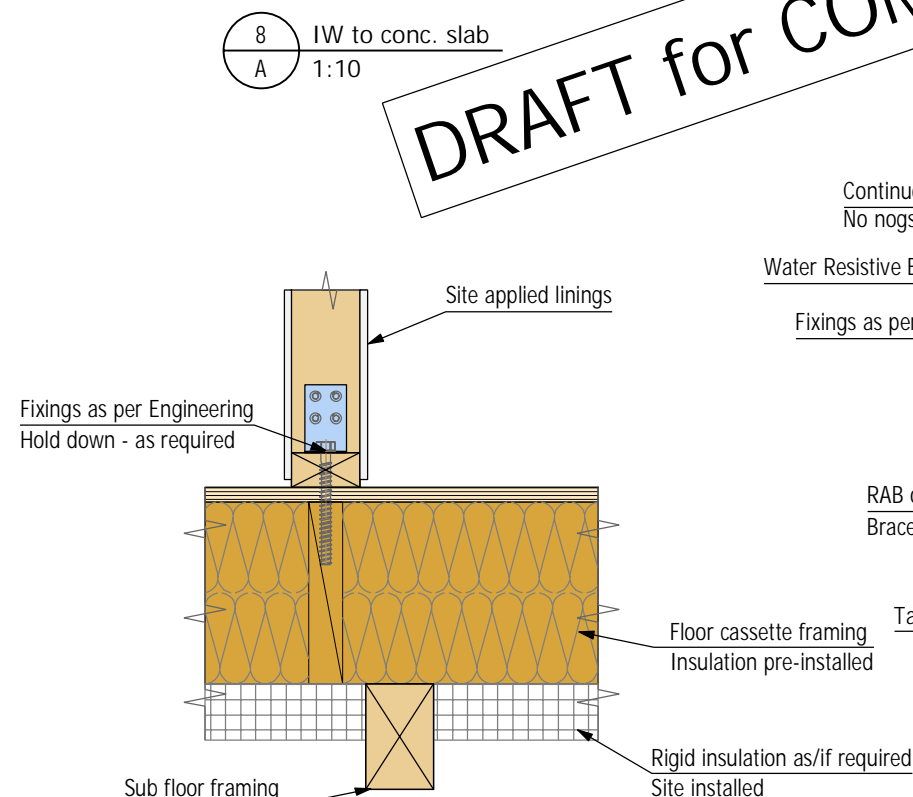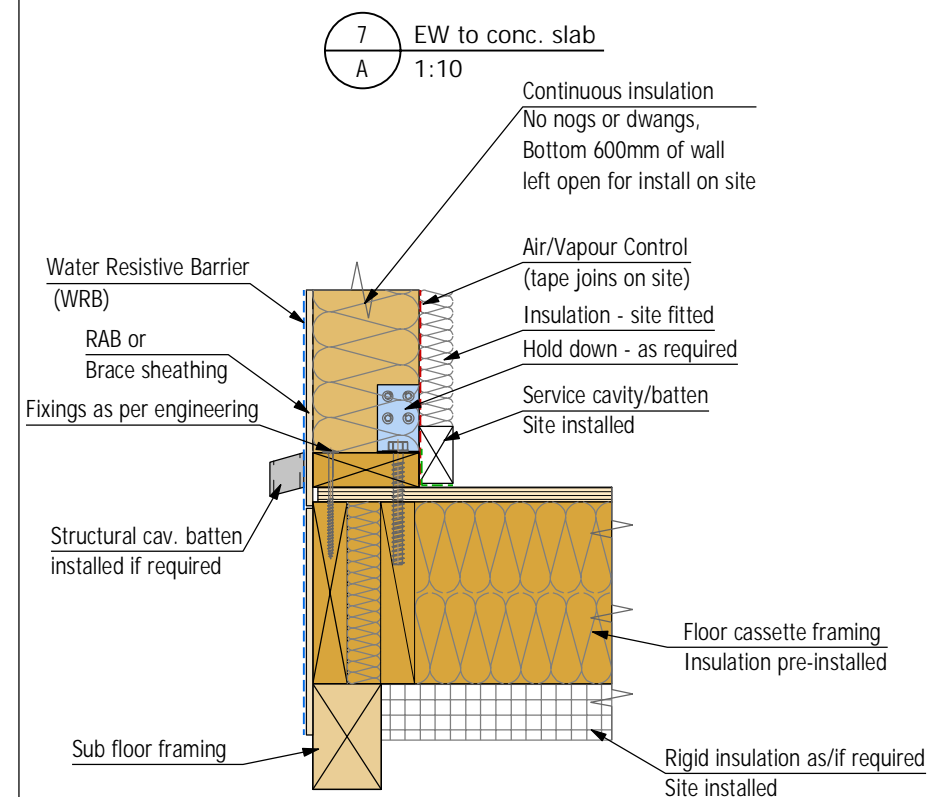


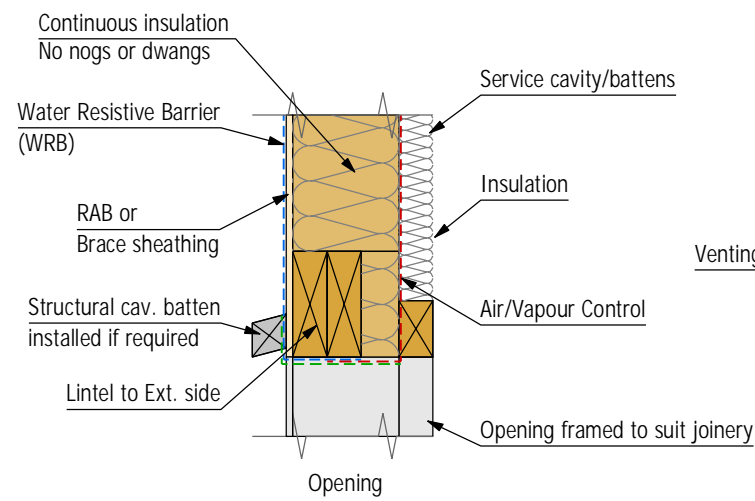


13
A
EW Lintel - Typical
1:10

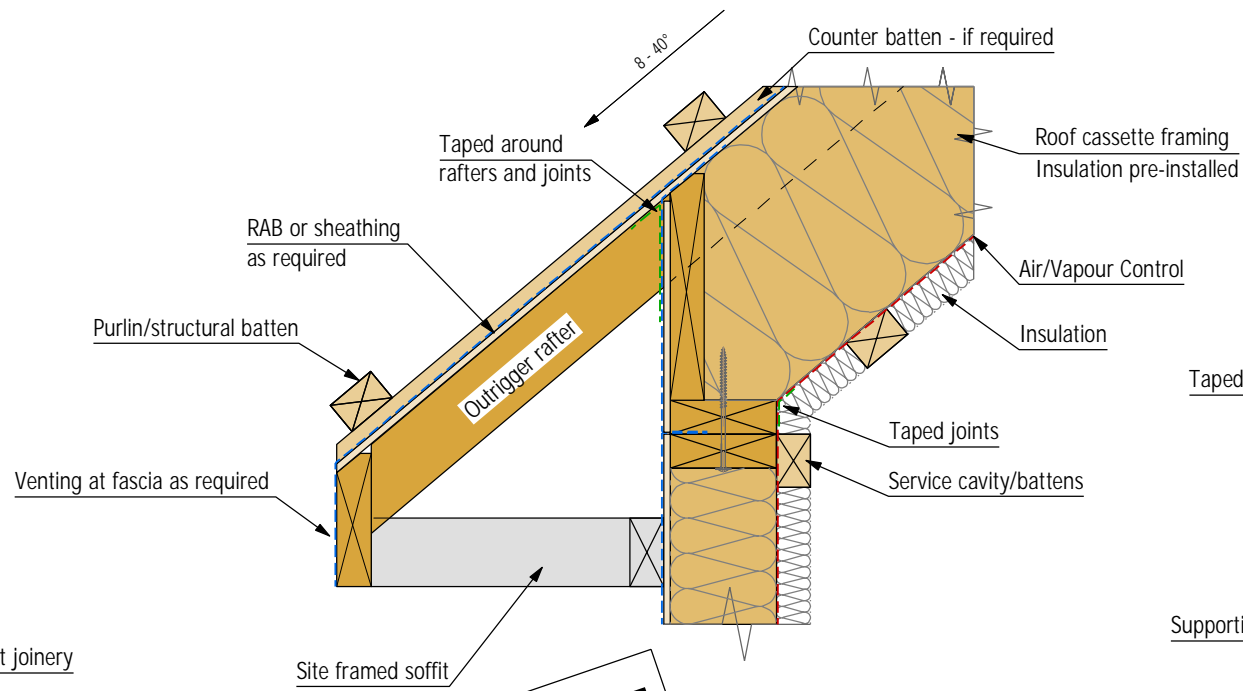


14
A
EW to Timber Framed Roof Cassette - with eave
1:10

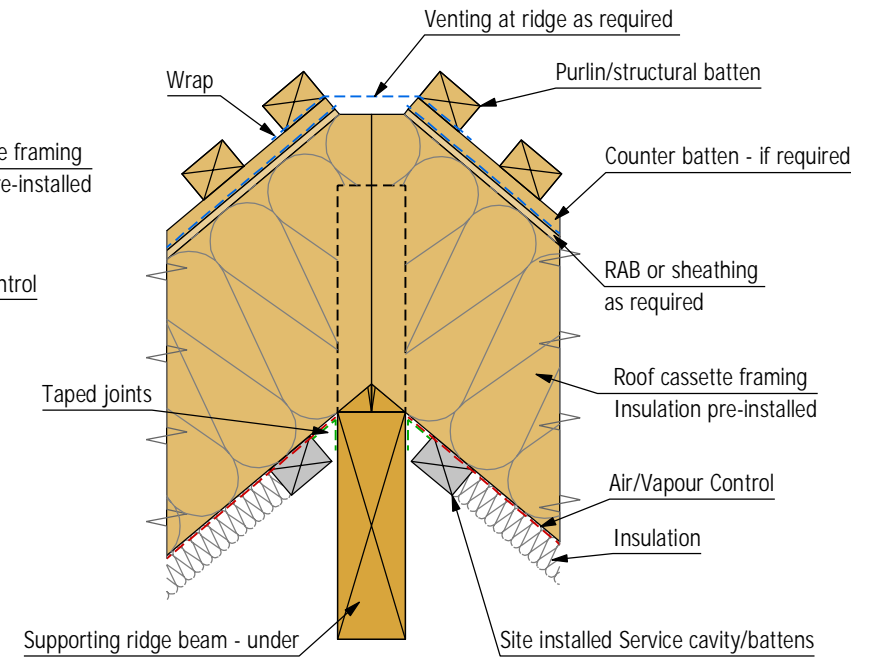


15
A
Timber Framed Roof Cassette - Apex
1:10

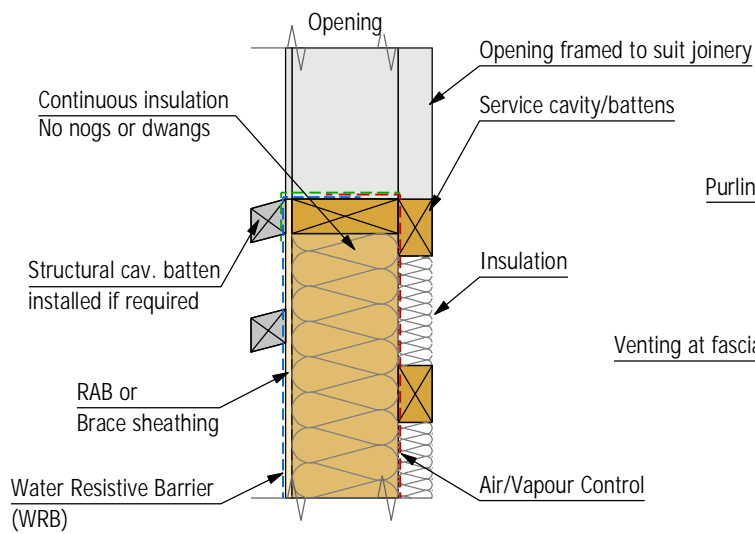

16
A
EW Sill - Typical
1:10

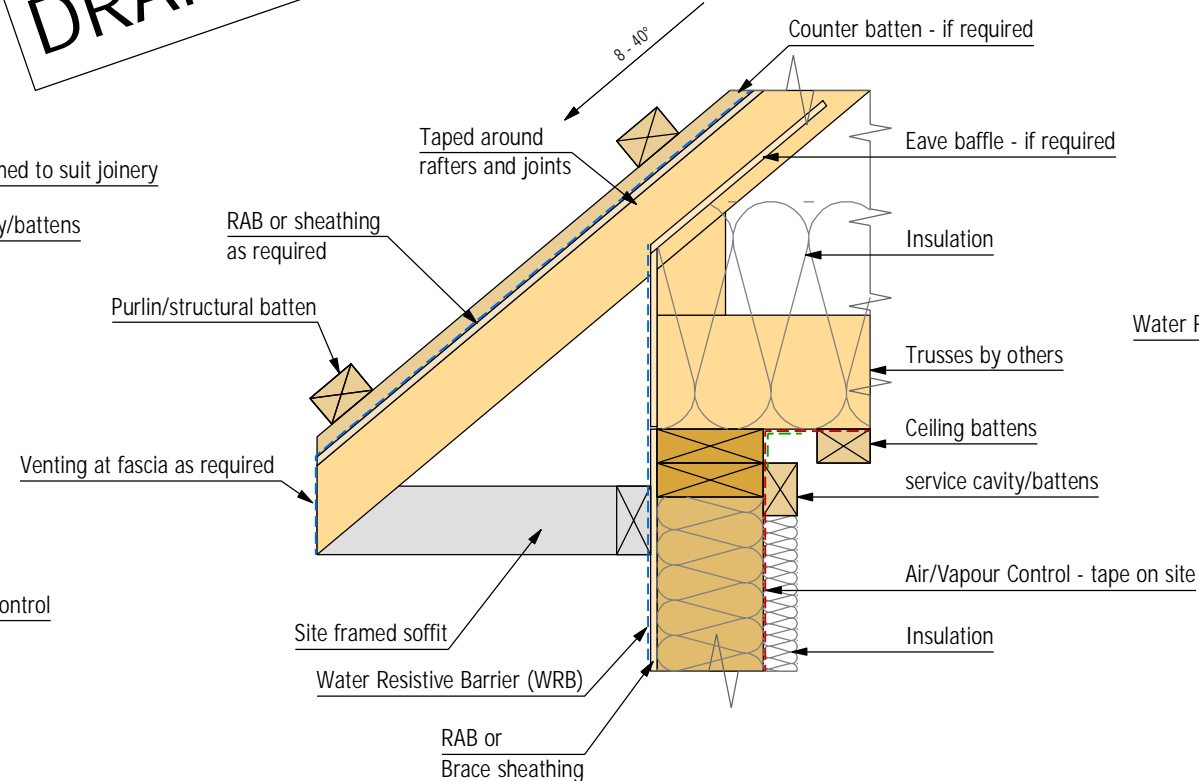

17
A
EW to Trussed roof - typical
1:10

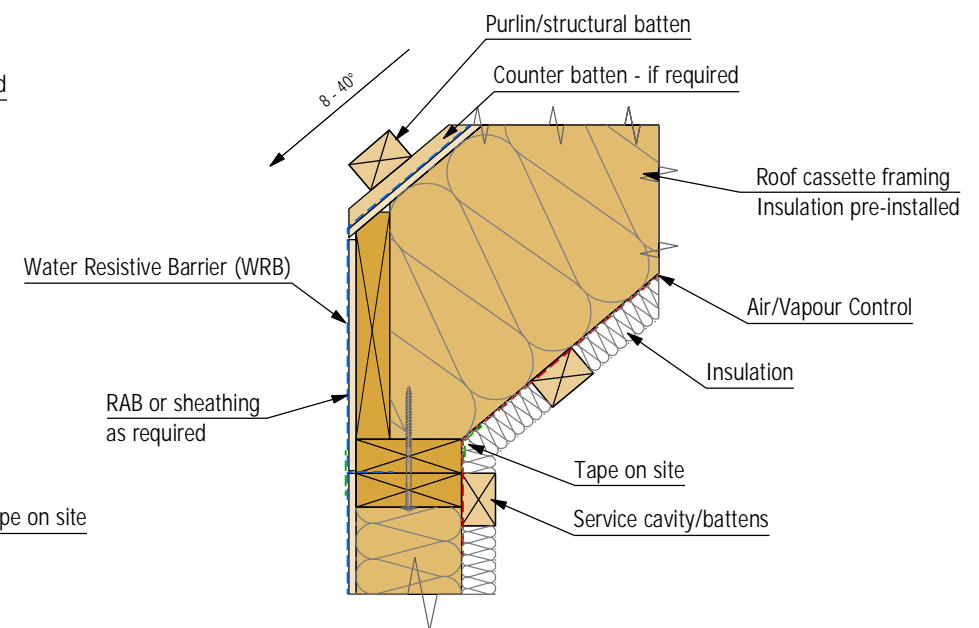

18
A
EW to Timber Framed Roof Panel - no eave
1:10

DRAFT for COMMENT