


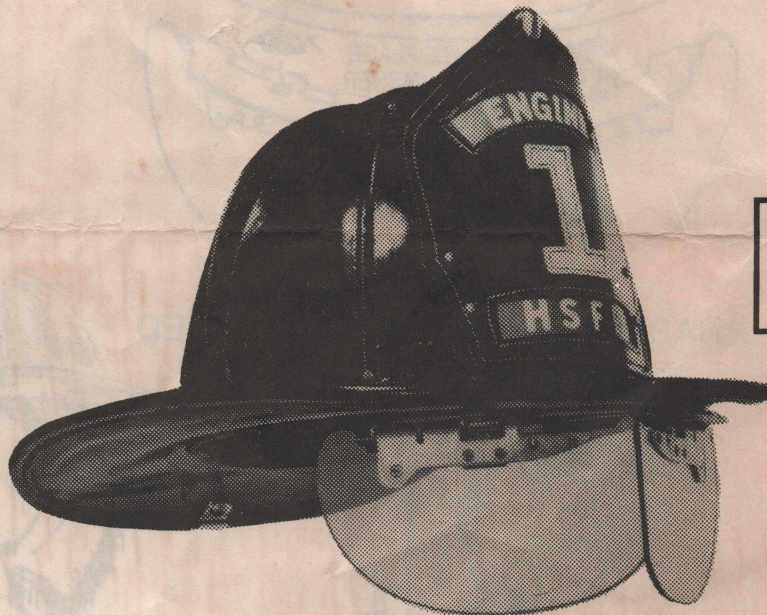

CAIRNS & BROTHER INC.

201-473-5867

**BOURKE SAFETY EYE SHIELD
MOUNTING INSTRUCTIONS — GENERAL**



• NOTE •
WEDGEWASHER NOT
INCLUDED IN KIT.
PART IS OBSOLETE

- a) This shipment contains:
1 Bourke safety eye shield,
2 brass screws, brass washers, lock washers, cap nuts, fibre and wedge mounting washers.
- b) The fibre and wedge mounting washers are supplied for use with helmets having uneven surface for mounting the shield. We suggest their use as follows:


LEATHER HELMETS — use Fibre washers. Mount shield directly. Be sure to use brass basher under lock washers as shown on reverse side.

CAIRNS #880 CENTURY — Use fibre washers.

MSA POLYCARBONATE HATS — Use wedge washer to compensate for angle of forepeak.





- c) Lens should be mounted so that the inner edge of the brass base is approximately 1/2 to 3/16 of an inch from the outer edge of the lining band.
- d) Mark underbrim through two holes in eye shield brass base plate and drill two holes through the brim with 3/16 inch drill.
- e) Be sure there is sufficient material under the cap nut so it will seat firmly on the lock washer.

REVISED ASSEMBLY INSTRUCTIONS

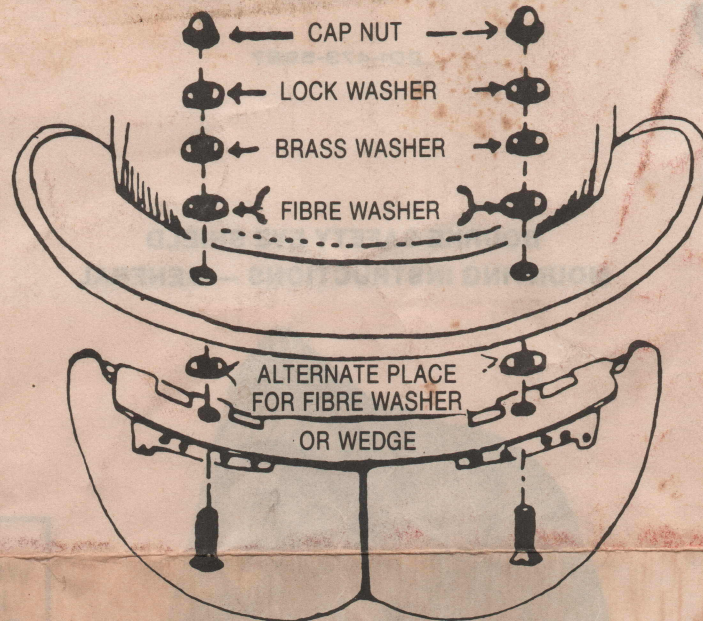

BRASS WASHERS MUST BE USED

ASSEMBLE WITH WRENCH AND SCREW DRIVER

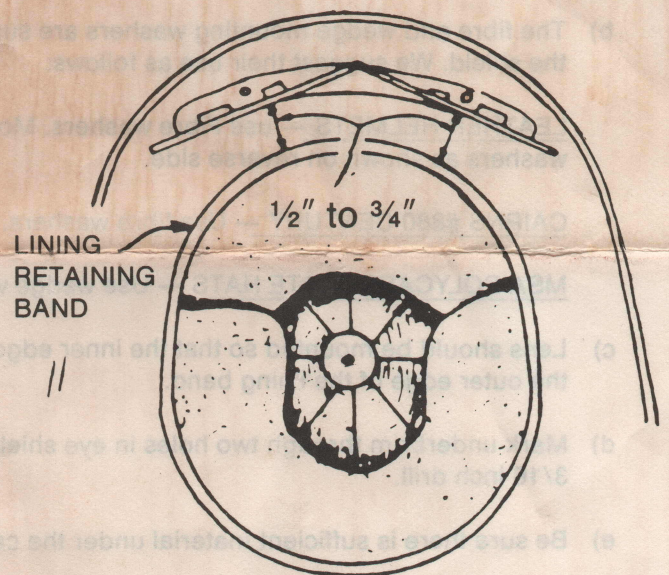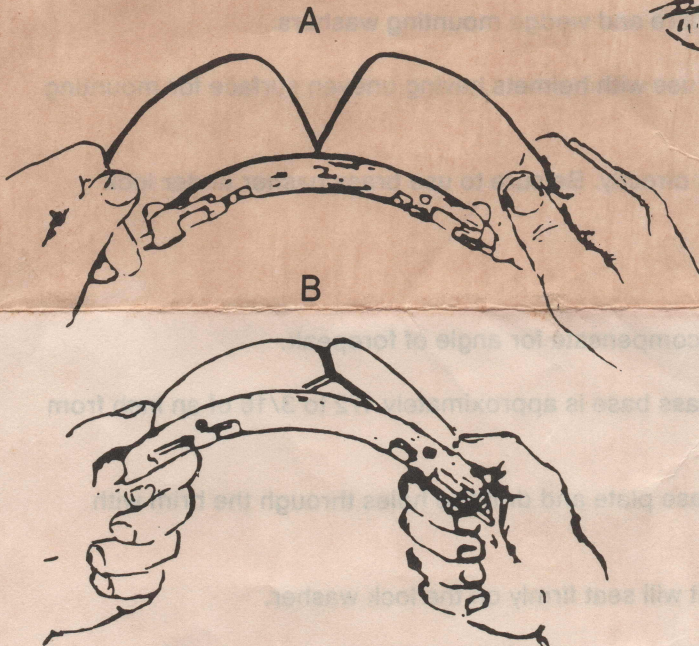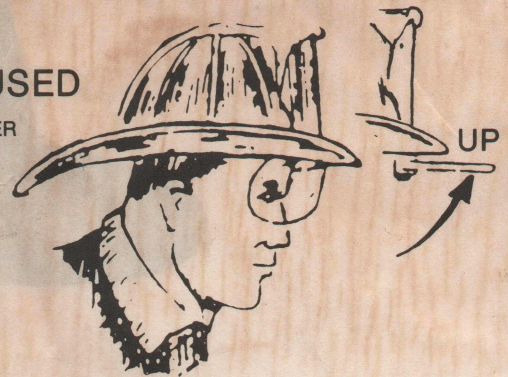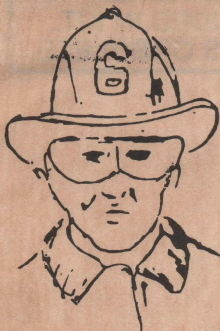

To open unattached shield, grasp lenses (Fig. A) and press downward, rotating them from brass plate until they meet (Fig. B) and are at a 90 degree angle to the plate.