


Assembly Instructions:

1. Rotate guide rod into position and push rod into notch on hone wand. This may take some effort or a light tap. Once in place, it should not be rotated out of position. The goal here is to have the guide rod and the hone on the same plane.



2. Assemble Base. Insert two (2) M6x14 screws and nuts as shown and tighten.

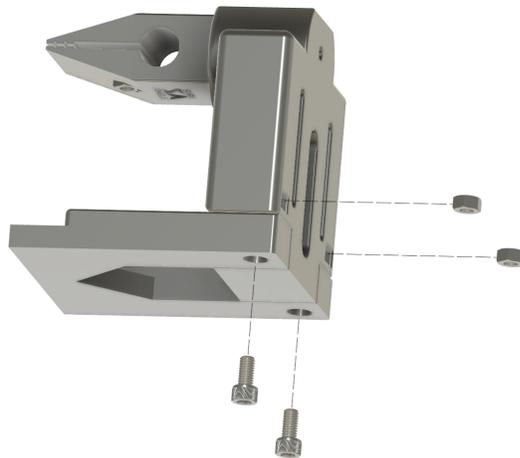

3. Assemble angle adjustment slider to base with two M6x14 screws and hand tighten as shown.

