

Scan for PDF



Divan Bed
Sofa Bed
Day Bed
Ottoman

2026/27

Beyond Bedding

Signature Design Collection




Nokka

Bed frame



3'	8002790
3'6"	8002850
5'	8002850
6'	8003210

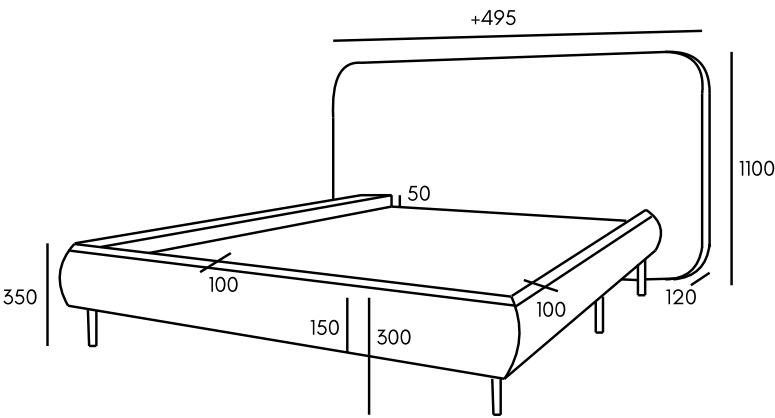


Cloudea

Bed frame



3'	8003390
3'6"	8003450
5'	8003450
6'	8003810

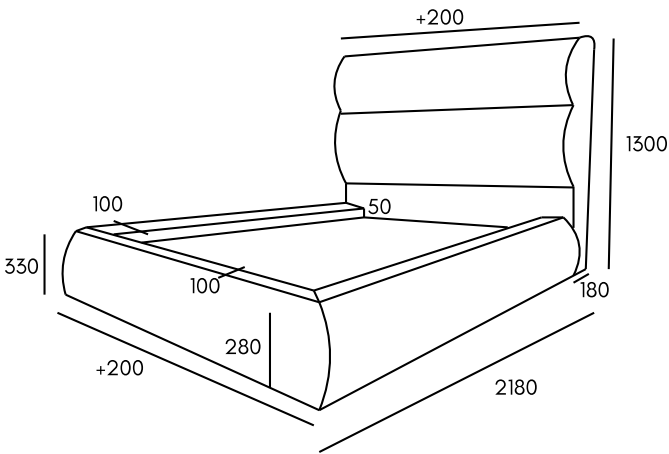


Craig

Bed frame



3'	8002640
3'6"	8002700
5'	8002700
6'	8003060

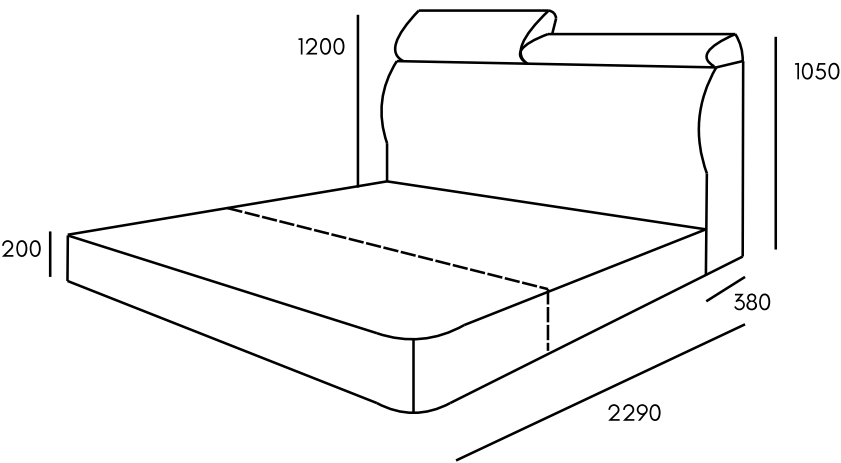


Luciano

Bed frame



Fini

Ottoman

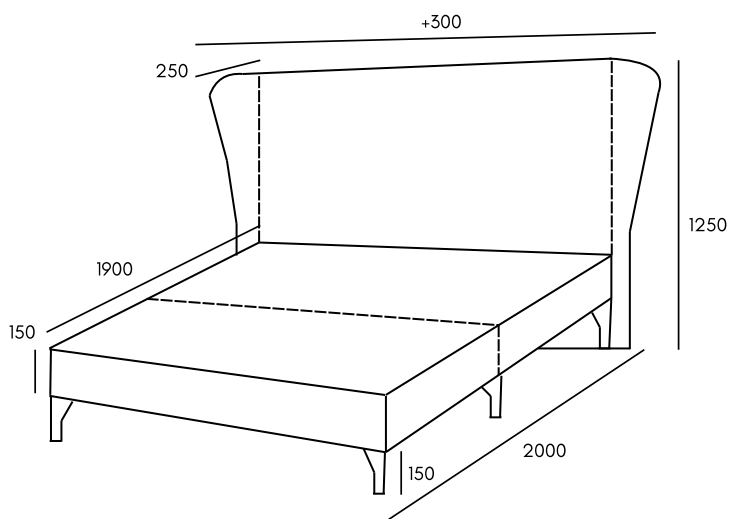


Luciano

Bed frame

8877-1/9977-03

3'	8002310
3'6"	8002370
5'	8002370
6'	8002730

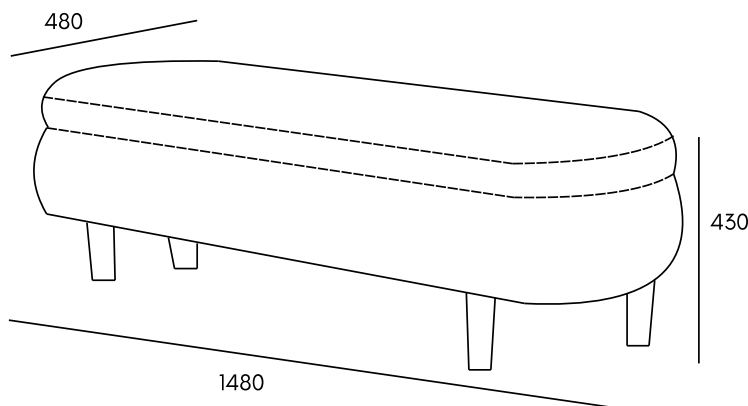

Fini

Ottoman

9977-03

8001770


Vista

Bed frame



CT001/ ZAZU HEX LIGHT BROWN

3'	8002190
3'6"	8002250
5'	8002250
6'	8002610

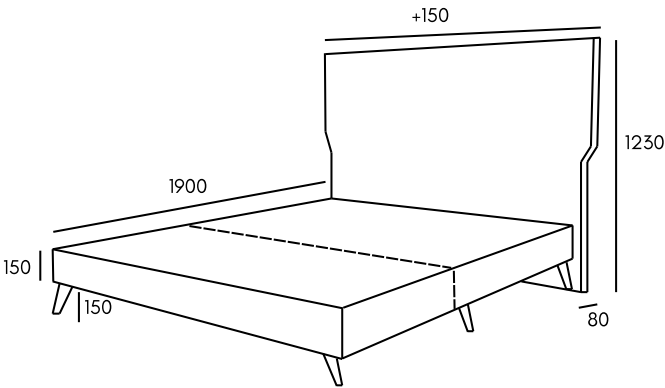


Aurum

Bed frame



3'	8002010
3'6"	8002070
5'	8002070
6'	8002430

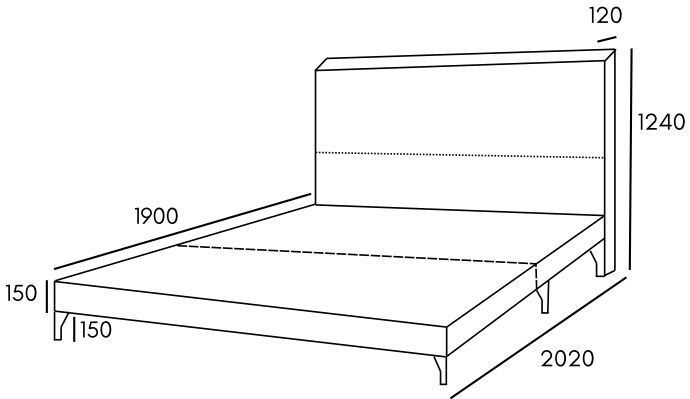


Larson

Bed frame



3'	8002190
3'6"	8002250
5'	8002250
6'	8002250

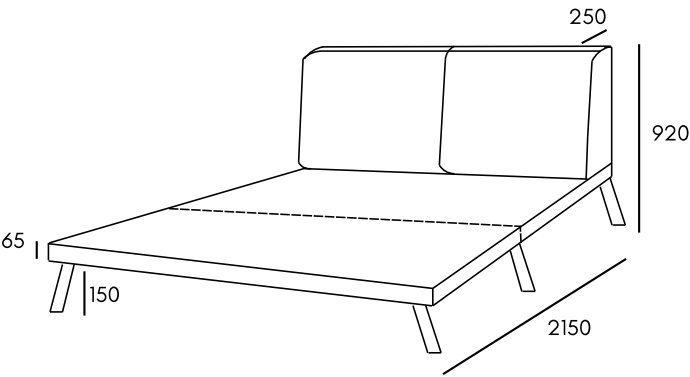


Perry

Bed frame



J8881-12

3'	8002190
3'6"	8002250
5'	8002250
6'	8002610

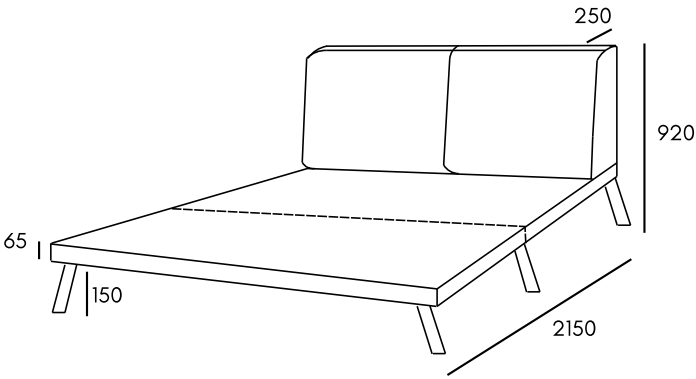


Eleva

Bed frame



3'	8001710
3'6"	8001770
5'	8001770
6'	8002130

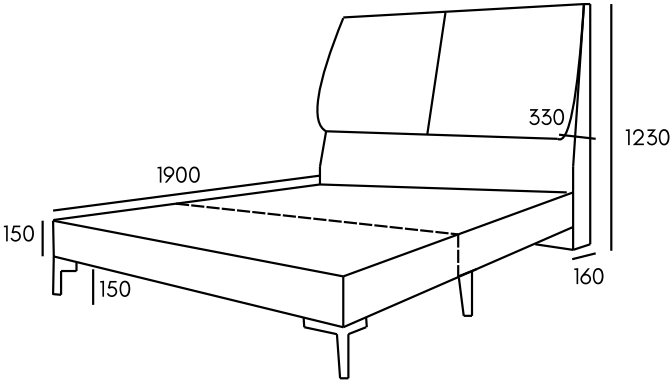


Oxford

Bed frame



ZAZU HEX GREY & 6856

3'	8002010
3'6"	8002070
5'	8002070
6'	8002430

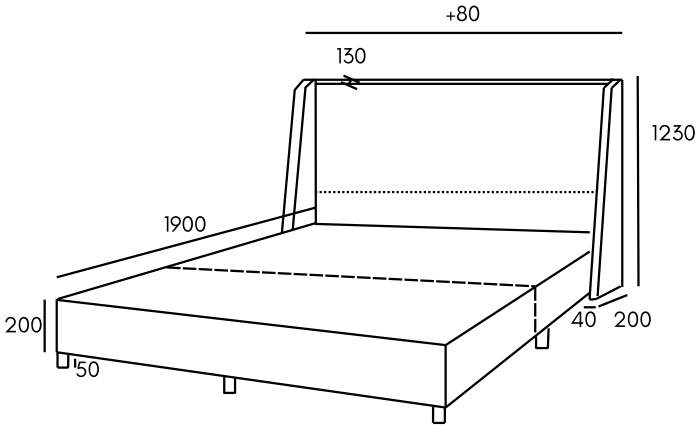


Julis

Bed frame



3'	8001500
3'6"	8001560
5'	8001560
6'	8001920

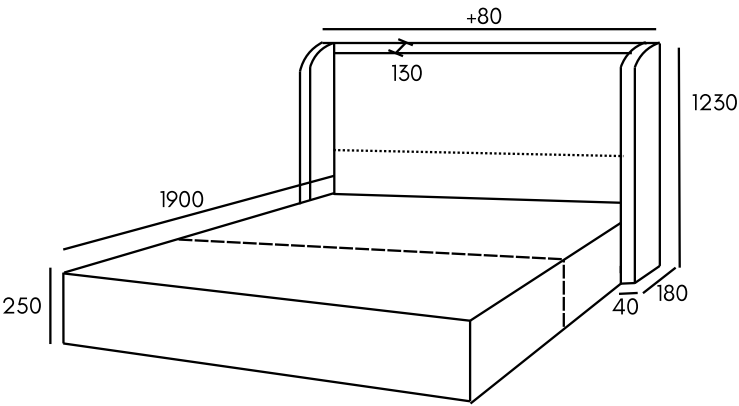


Charlotte

Bed frame



3'	8001500
3'6"	8001560
5'	8001560
6'	8001620

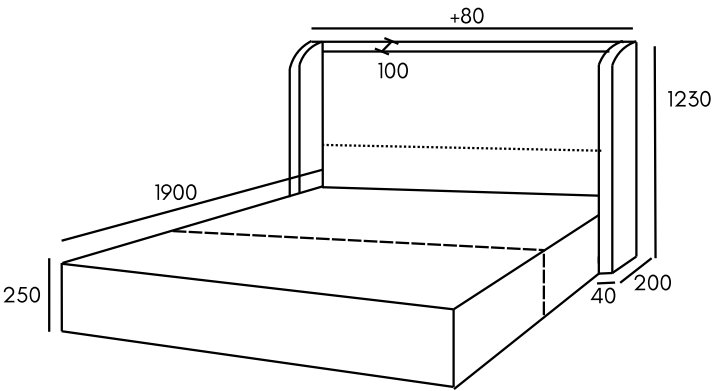


Bernard

Bed frame



3'	8001710
3'6"	8001770
5'	8001770
6'	8002130

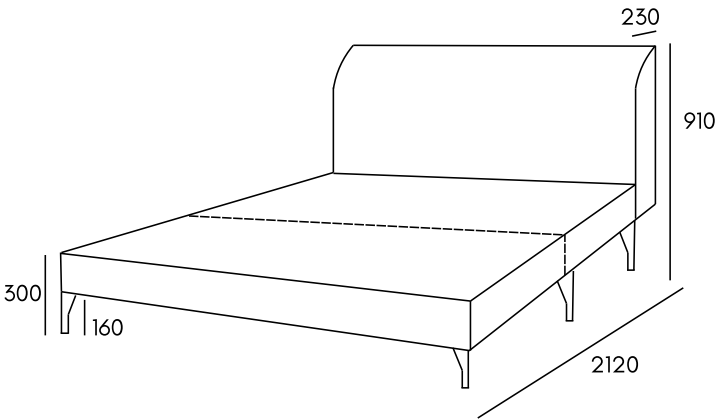


Edison

Bed frame



3'	8002190
3'6"	8002250
5'	8002250
6'	8002610

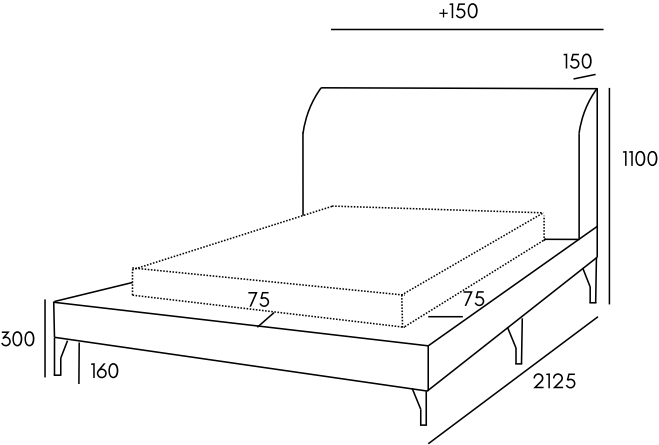


Carter

Bed frame



3'	8002010
3'6"	8002070
5'	8002070
6'	8002430

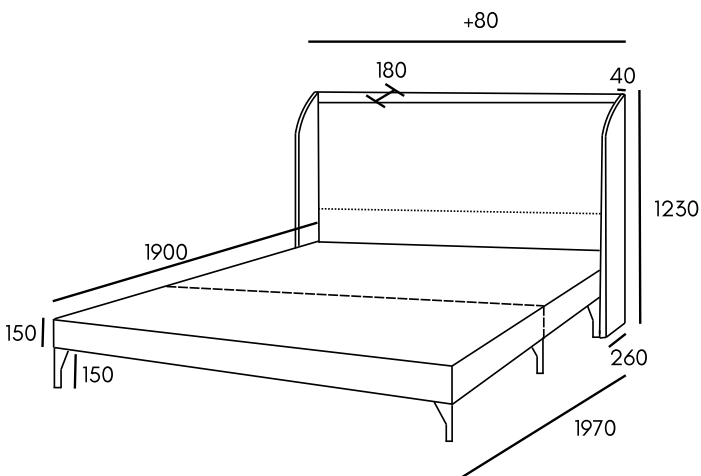


Daphne

Bed frame



VERANDO 21

3'	8001380
3'6"	8001440
5'	8001440
6'	8001800

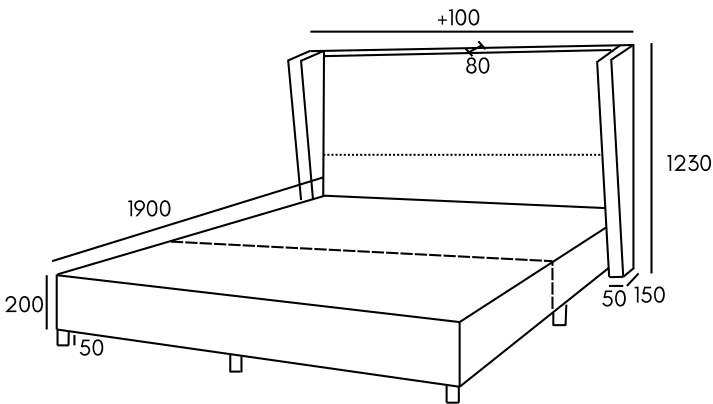


Felix

Bed frame



ZAZU QUARTZ GREY & J8881-14

3'	8002190
3'6"	8002250
5'	8002250
6'	8002610

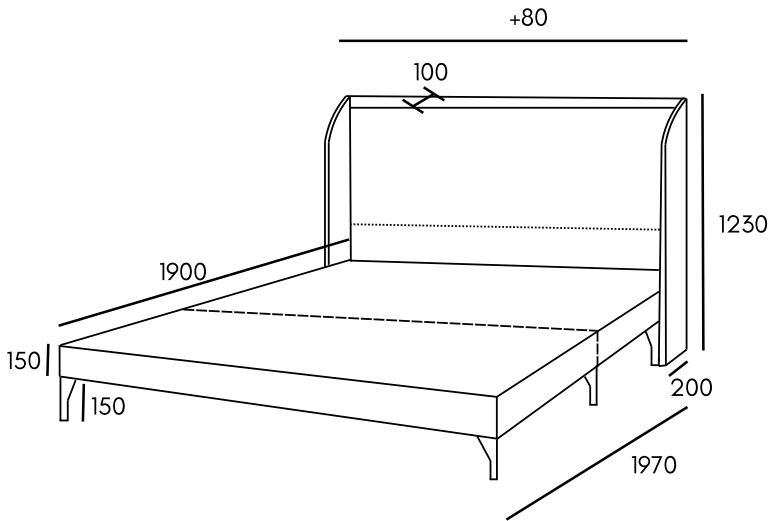


Larry

Bed frame



J8881-11

3'	8001920
3'6"	8001980
5'	8001980
6'	8002340

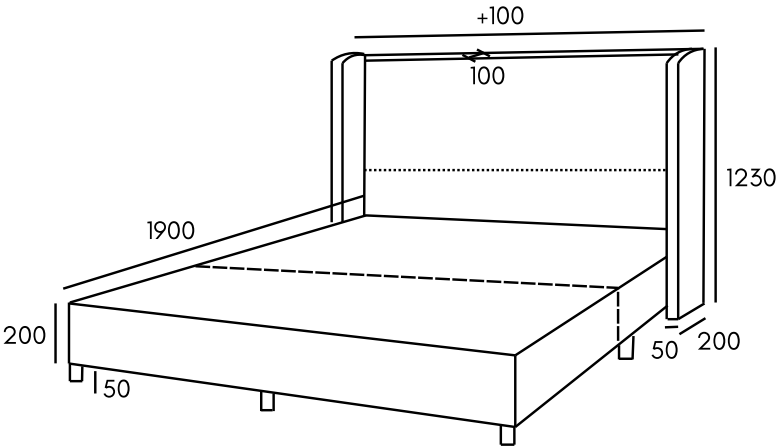


Amber

Bed frame



J2299-2

3'	8002010
3'6"	8002070
5'	8002070
6'	8002430

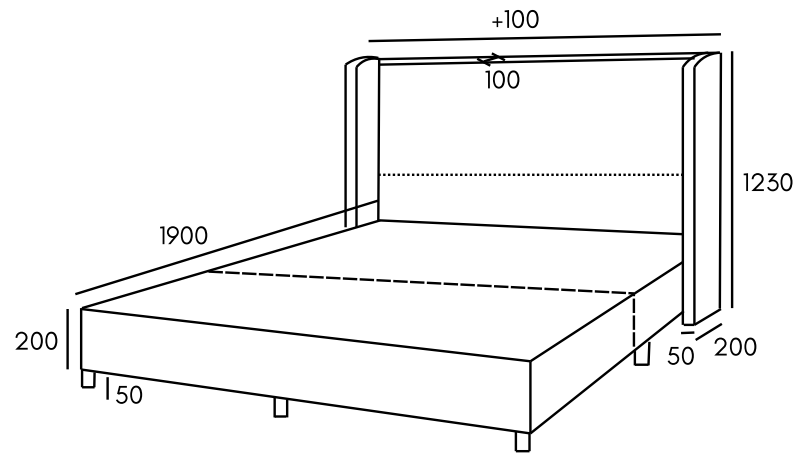


Regal

Bed frame



3'	8002190
3'6"	8002250
5'	8002250
6'	8002610

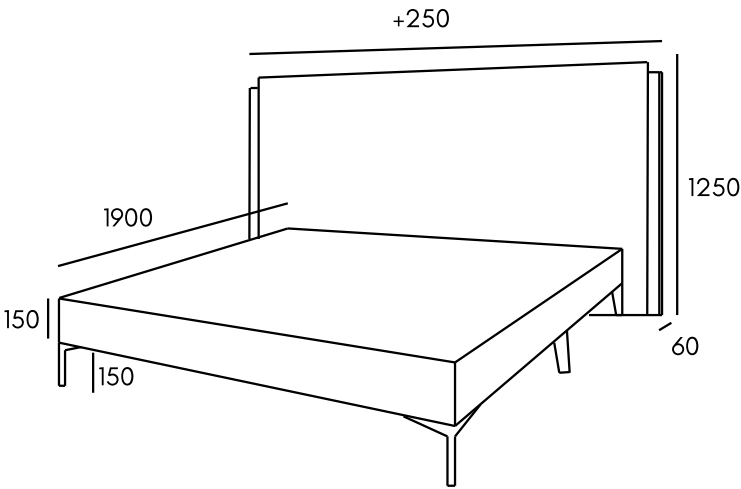


Atlas

Bed frame



ZAZU QUARTZ GREY / J2299-2

3'	8002070
3'6"	8002130
5'	8002130
6'	8002490

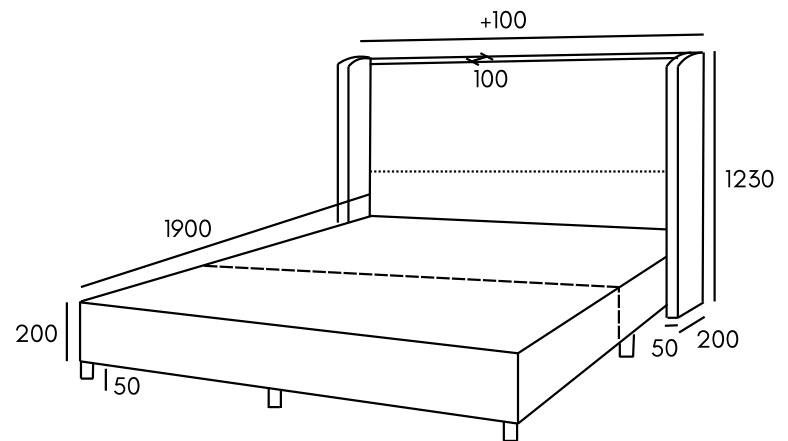


Shiela

Bed frame



3'	8002190
3'6"	8002250
5'	8002250
6'	8002610

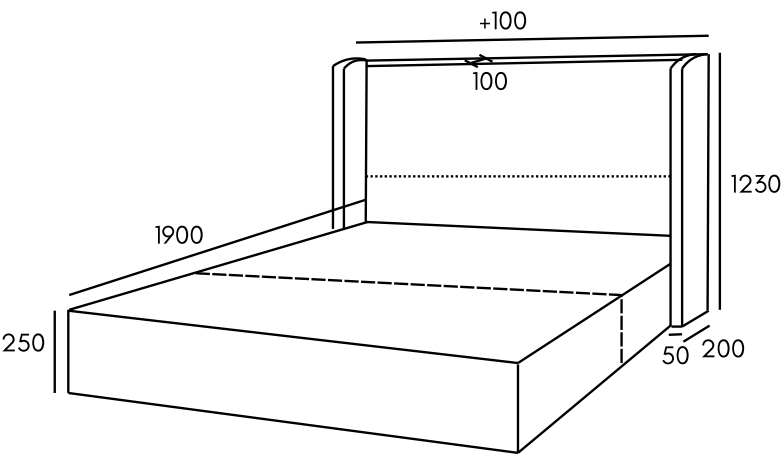


Enzo

Bed frame



3'	8002190
3'6"	8002250
5'	8002250
6'	8002610

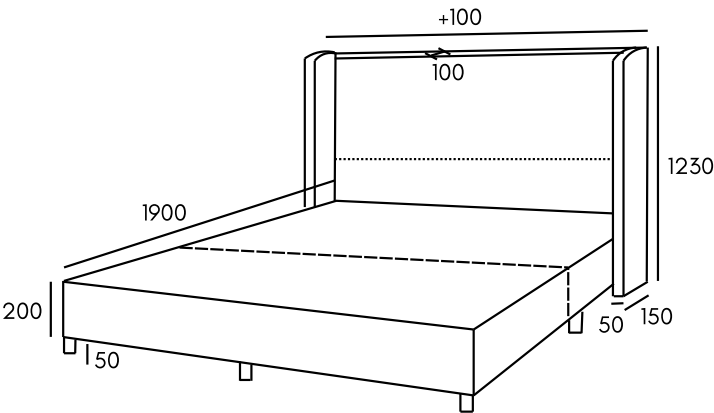


Havana

Bed frame



D22132-5 / HOLLAND 6856

3'	8001890
3'6"	8001950
5'	8001950
6'	8002310

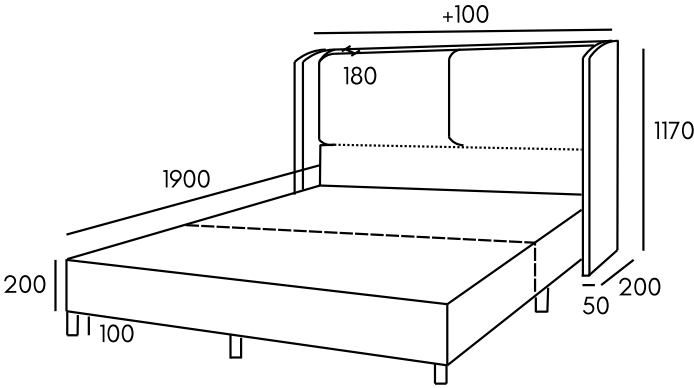


Aster

Bed frame



3'	8002010
3'6"	8002070
5'	8002070
6'	8002430

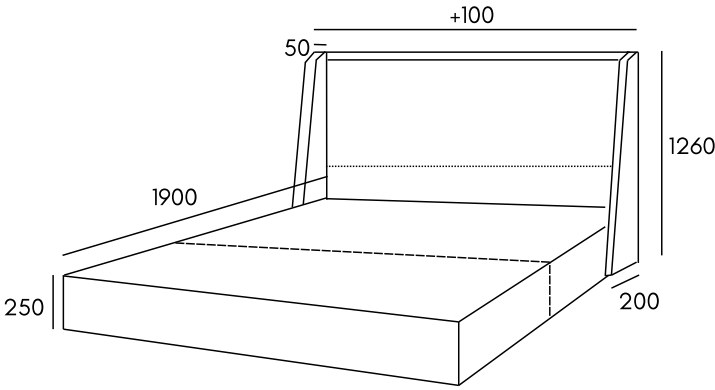


Chester

Bed frame



HOLLAND 6803

3'	8001980
3'6"	8002040
5'	8002040
6'	8002400

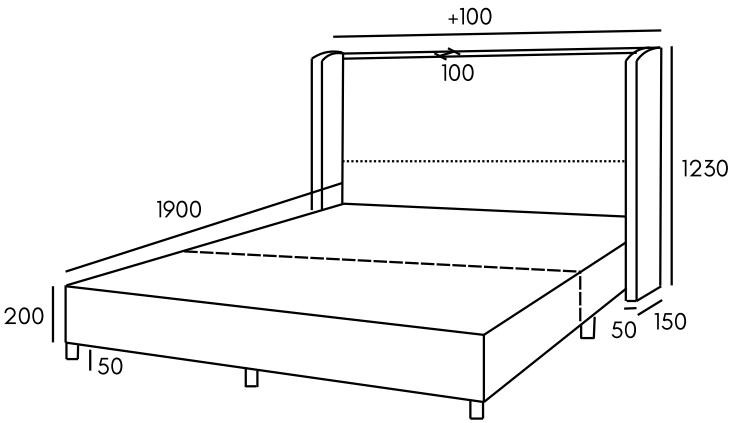


Olivia

Bed frame



MAZORA 3204

3'	8002100
3'6"	8002160
5'	8002160
6'	8002520

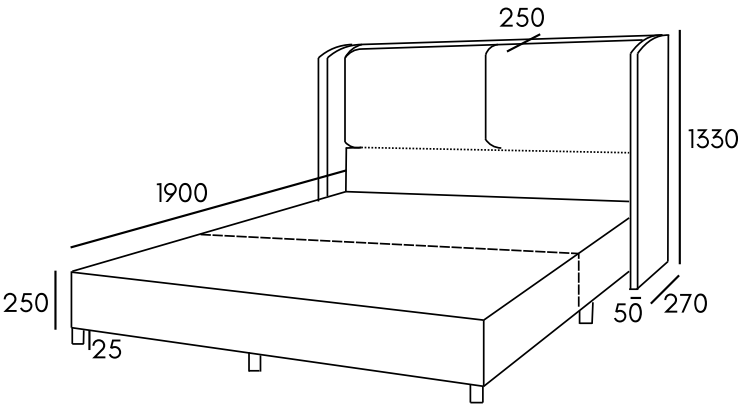


Polo

Bed frame



3'	8002100
3'6"	8002160
5'	8002160
6'	8002520

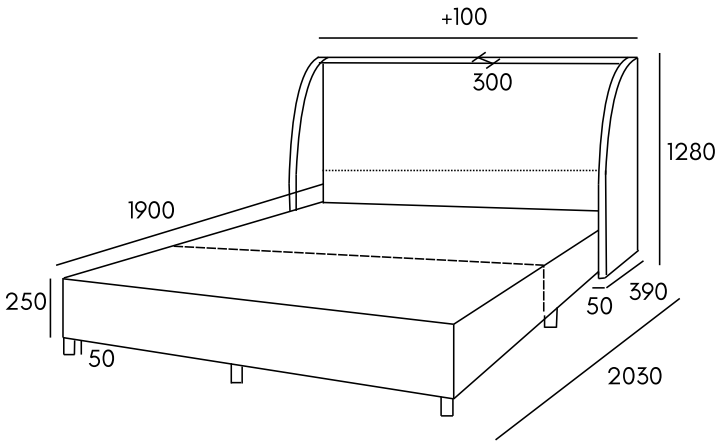


Astrid

Bed frame



3'	8002100
3'6"	8002160
5'	8002160
6'	8002520

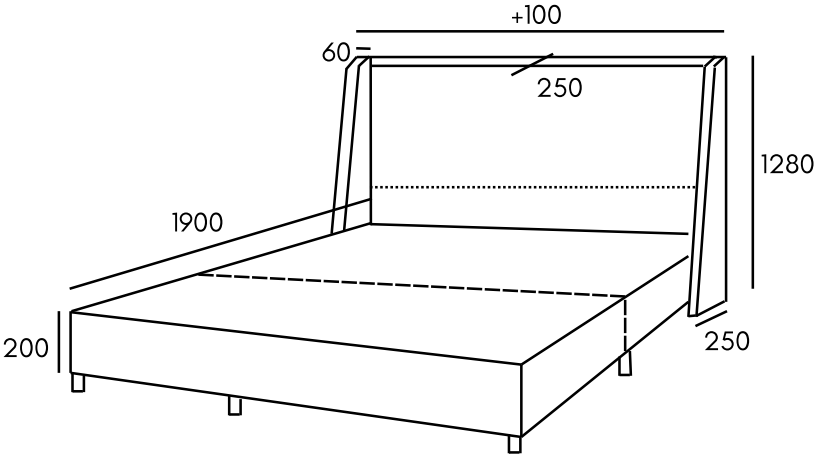


Jude

Bed frame

 FG 66353-5

3'	8002100
3'6"	8002160
5'	8002160
6'	8002520

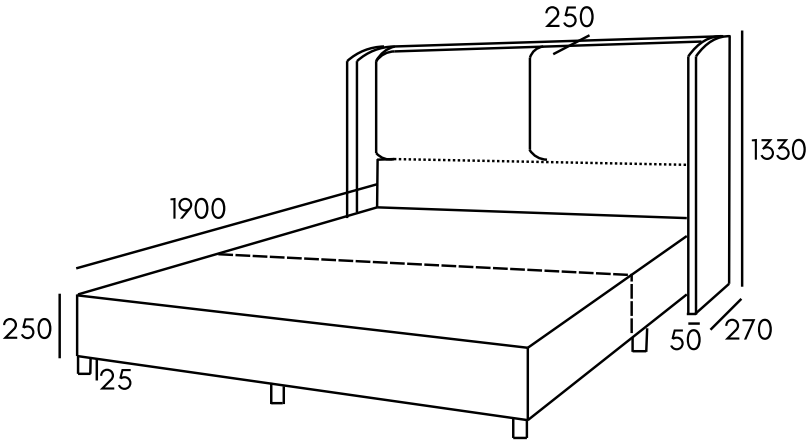


Rocca

Bed frame



3'	8002100
3'6"	8002160
5'	8002160
6'	8002520

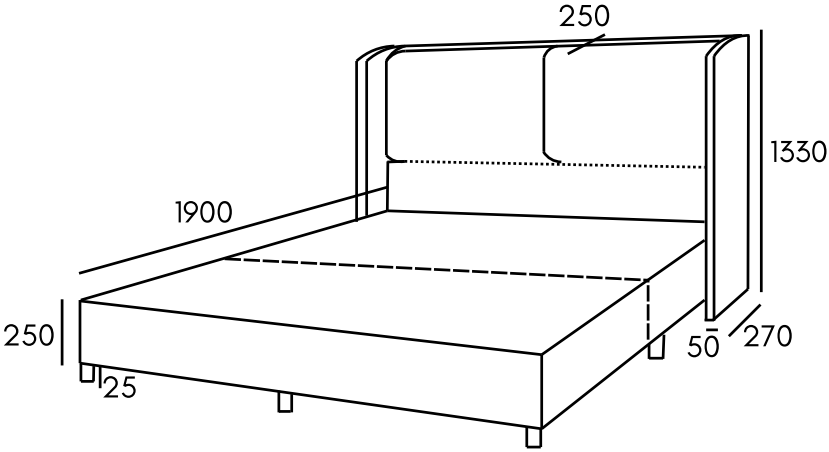


Sofia

Bed frame



3'	8001350	8001470
3'6"	8001410	8001530
5'	8001410	8001530
6'	8001770	8001890

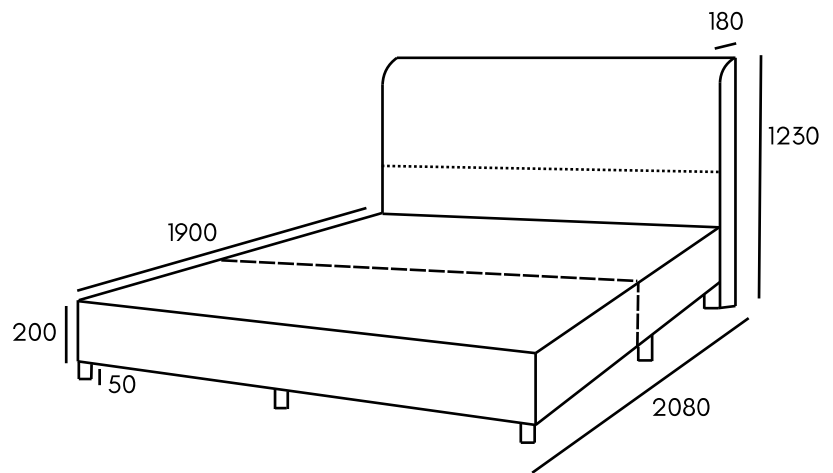


Dallas

Bed frame

 D22132-5 / 6856

3'	8002010
3'6"	8002070
5'	8002070
6'	8002430

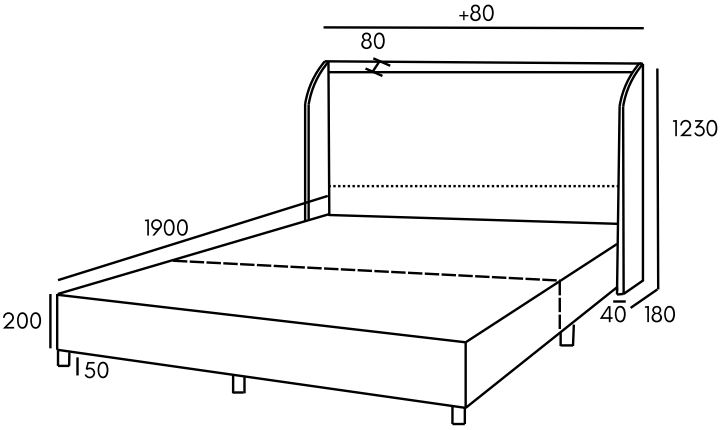


Dominic

Bed frame



3'	8001590
3'6"	8001650
5'	8001650
6'	8002010

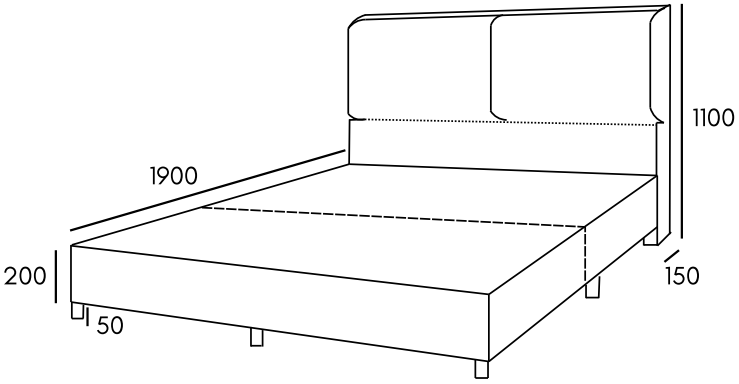


Conrad

Bed frame



CT001 / ZAZU QUARTZ GREY

3'	8001710
3'6"	8001770
5'	8001770
6'	8002130

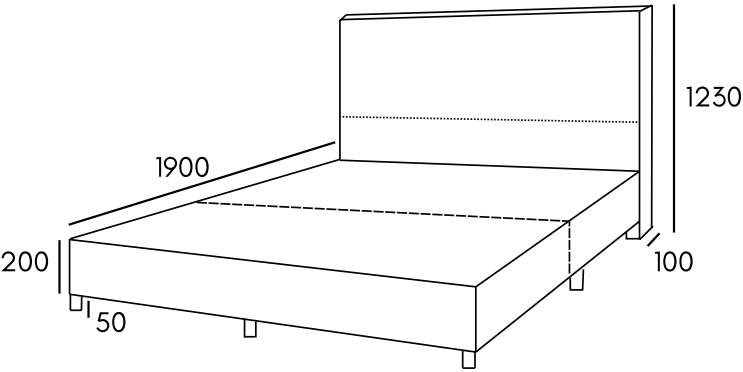


Denver

Bed frame



3'	8002700
3'6"	8002760
5'	8002760
6'	8003120

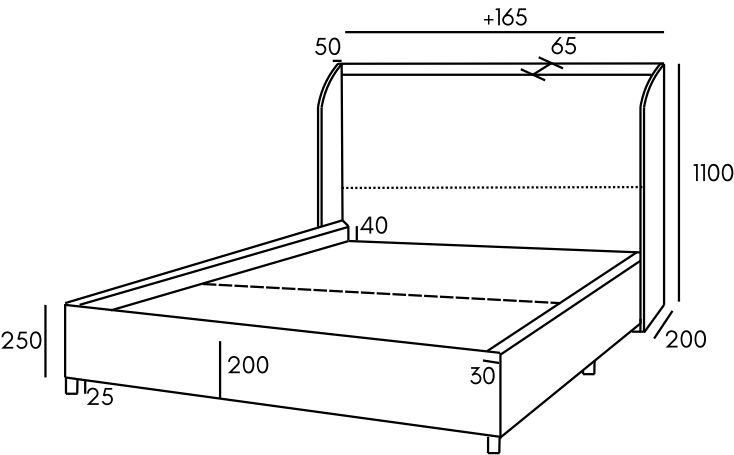


Arnold

Bed frame



ZAZU QUARTZ GREY / 6840

3'	8001620
3'6"	8001680
5'	8001680
6'	8002040

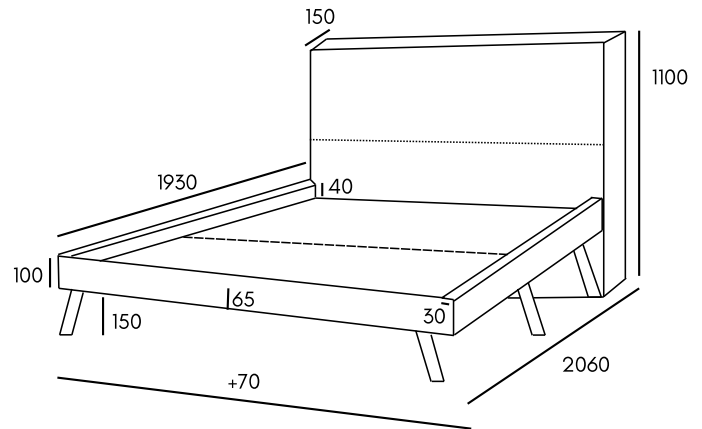


Evan

Bed frame



TM162

3'	8001440
3'6"	8001500
5'	8001500
6'	8001860

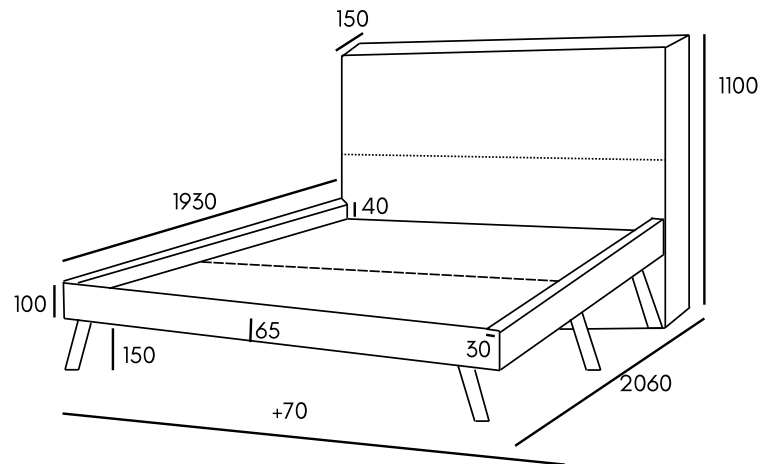


Lewis

Bed frame



3'	8002010
3'6"	8002070
5'	8002070
6'	8002430

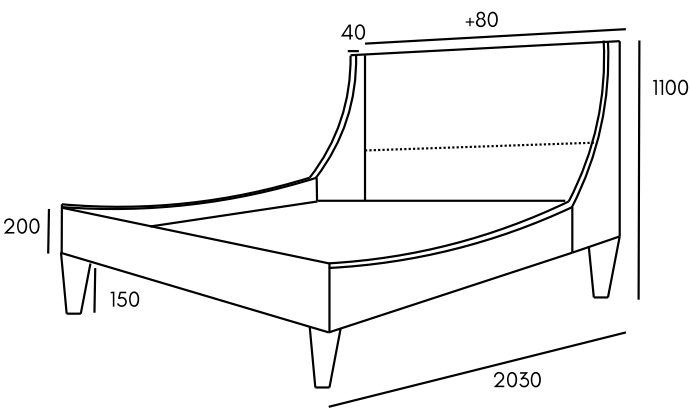


Mitoma

Bed frame



MM905

3'	8002010
3'6"	8002070
5'	8002070
6'	8002430

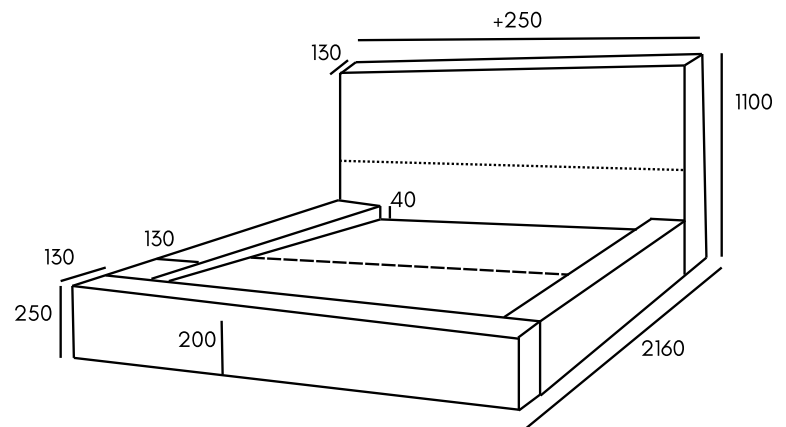


Ivy



OT002

Bed frame

3'	8001590
3'6"	8001650
5'	8001650
6'	8002010

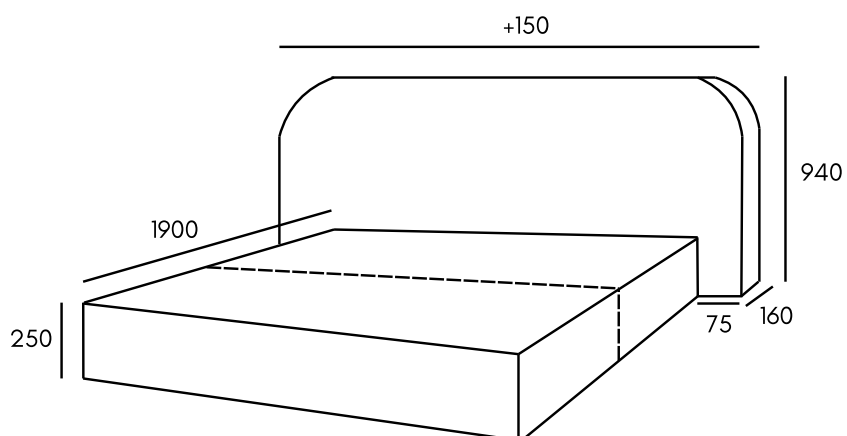


Lyon

Bed frame



3'	8001380
3'6"	8001440
5'	8001440
6'	8001800

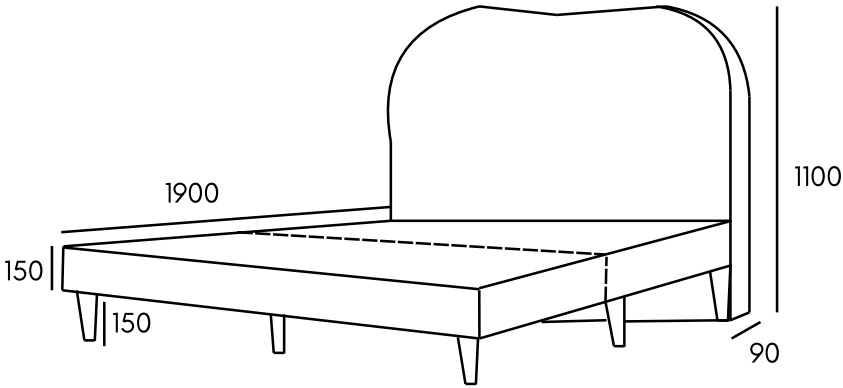


Nolan

Bed frame



3'	8001590
3'6"	8001650
5'	8001650
6'	8002010

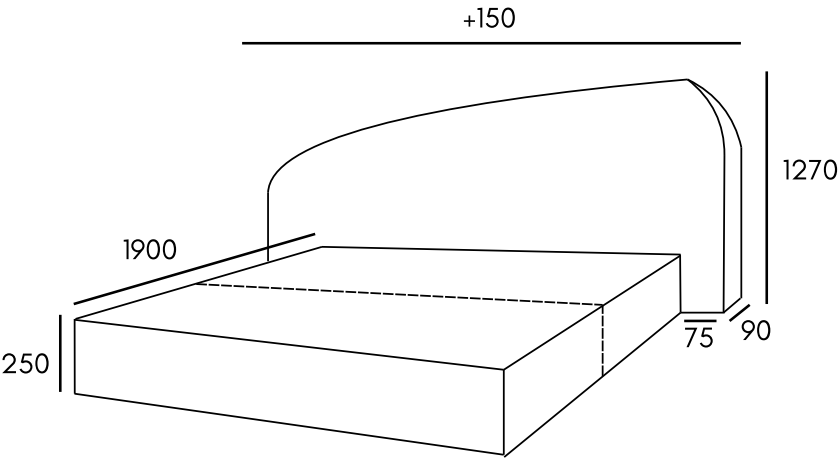


Remy

Bed frame



3'	8001380
3'6"	8001440
5'	8001440
6'	8001800

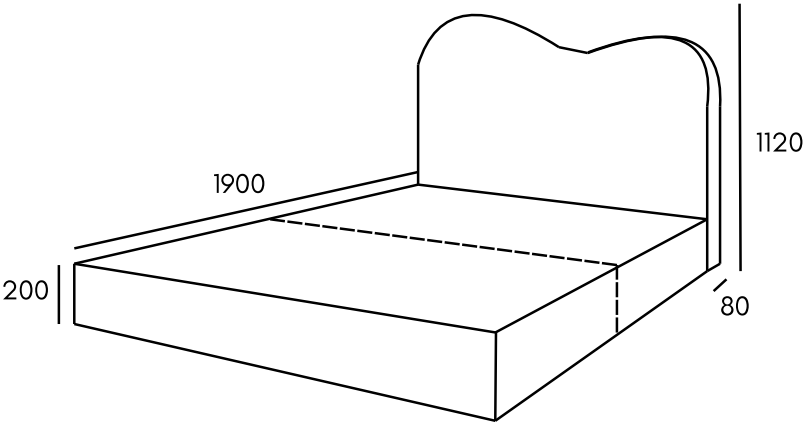


Mira

Bed frame



3'	8001380
3'6"	8001440
5'	8001440
6'	8001800

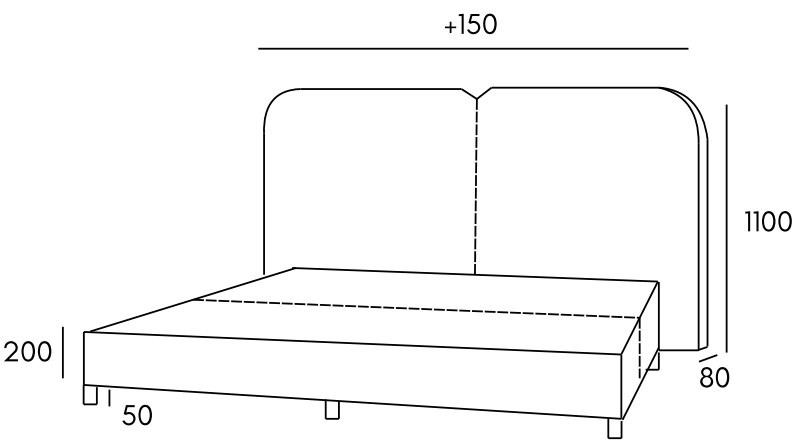


Grace

Bed frame



3'	8001590
3'6"	8001650
5'	8001650
6'	8002010

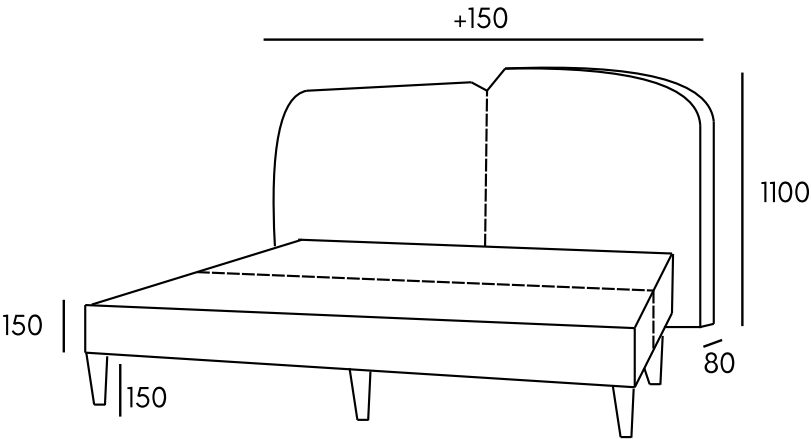


Arden

Bed frame



LAMBOO 06

3'	8001980
3'6"	8002040
5'	8002040
6'	8002400

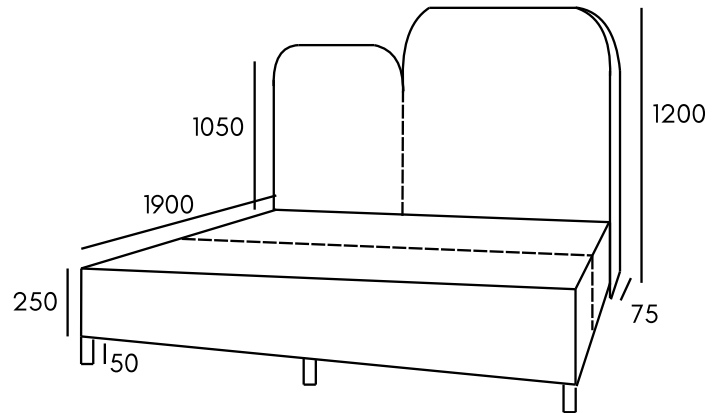


Bellamy

Bed frame



CT001

3'	8001380
3'6"	8001440
5'	8001440
6'	8001800

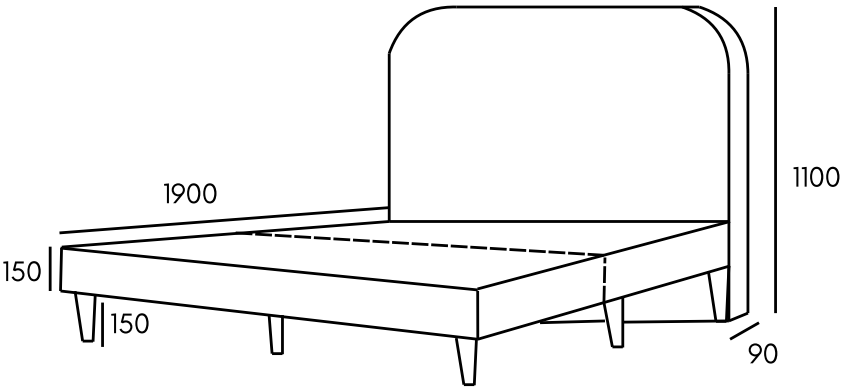


Lydia

Bed frame



H3221-6

3'	8001320
3'6"	8001380
5'	8001380
6'	8001740

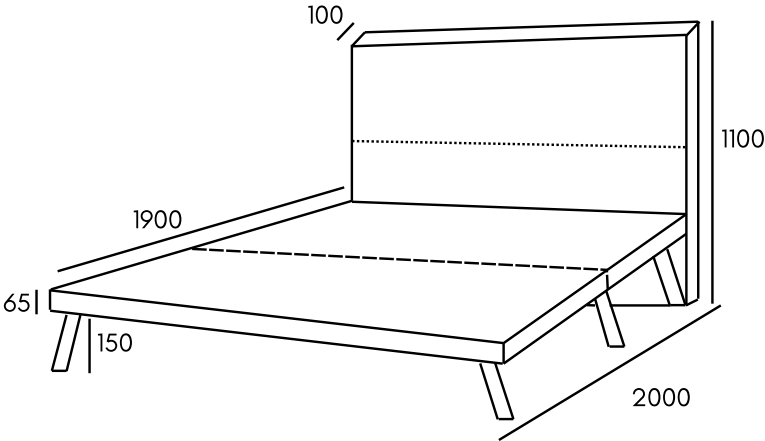


Panama

Bed frame



3'	8001320
3'6"	8001380
5'	8001380
6'	8001740

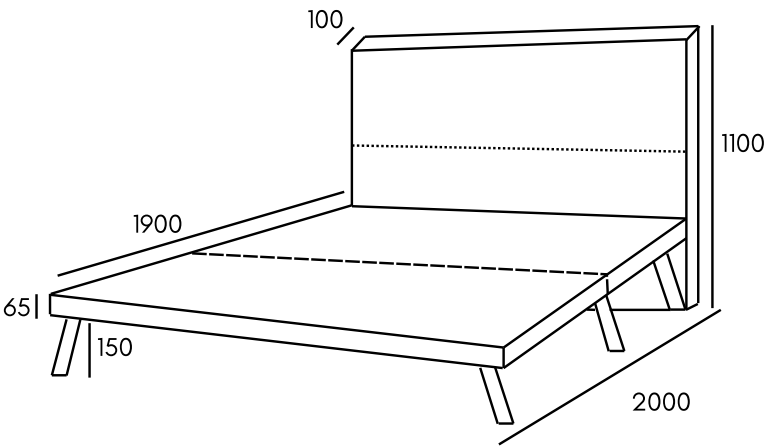


Jayden

Bed frame



SFAT 8

3'	8001320
3'6"	8001380
5'	8001380
6'	8001740

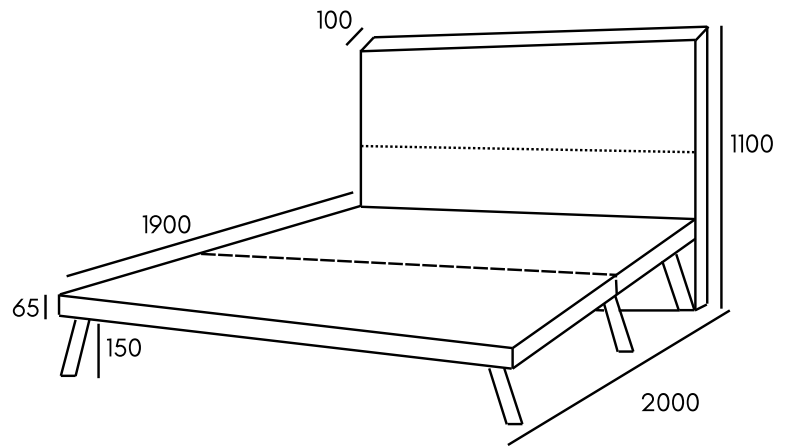


Malmo

Bed frame



MAZORA 3204

3'	8001320
3'6"	8001380
5'	8001380
6'	8001740

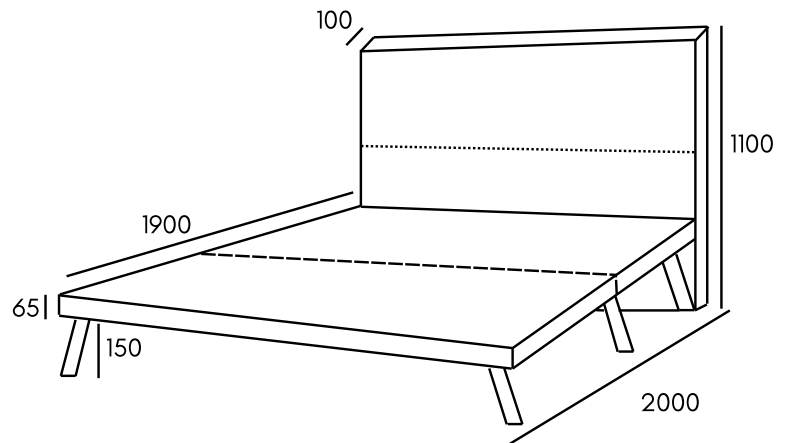


Luna

Bed frame



3'	8001320
3'6"	8001380
5'	8001380
6'	8001740

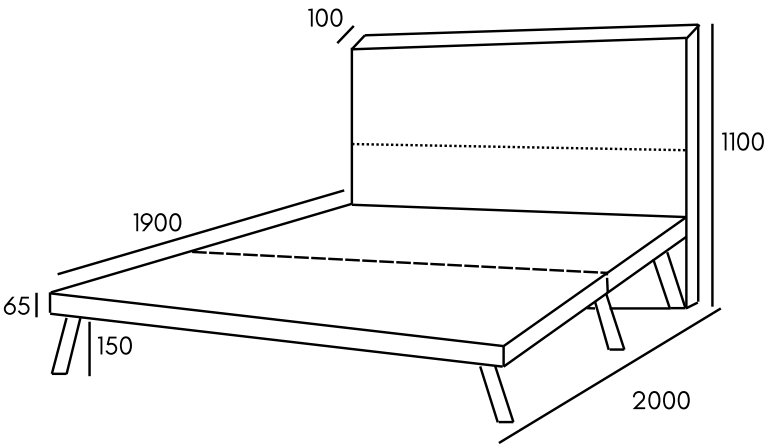


Thomas

Bed frame



VERANDO 23

3'	8001320
3'6"	8001380
5'	8001380
6'	8001740

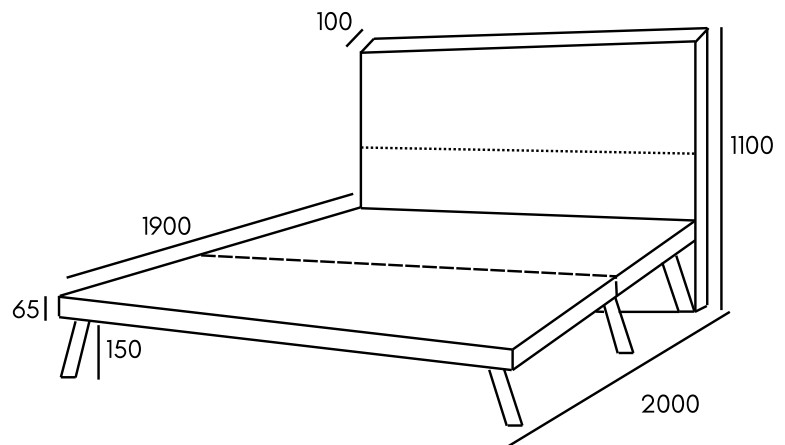


Daisy

Bed frame



3'	8001320
3'6"	8001380
5'	8001380
6'	8001740

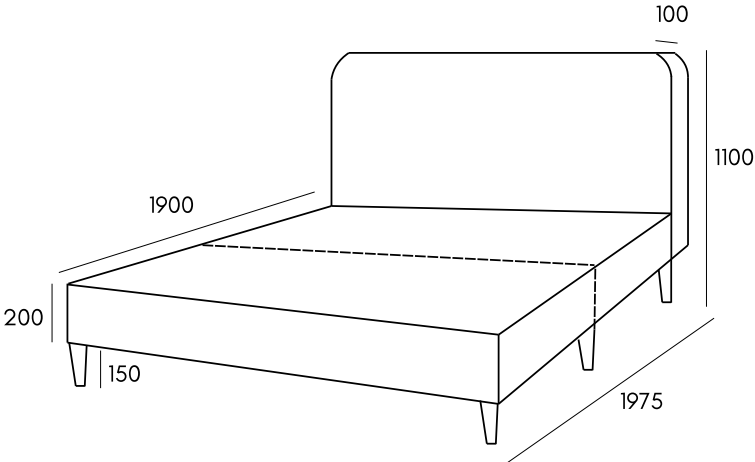


Cleo

Bed frame



3'	8001320
3'6"	8001380
5'	8001380
6'	8001740

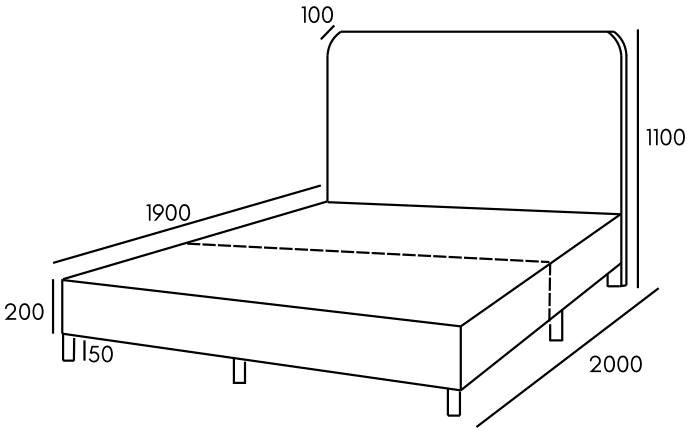


Helen

Bed frame



3'	8001320
3'6"	8001380
5'	8001380
6'	8001740

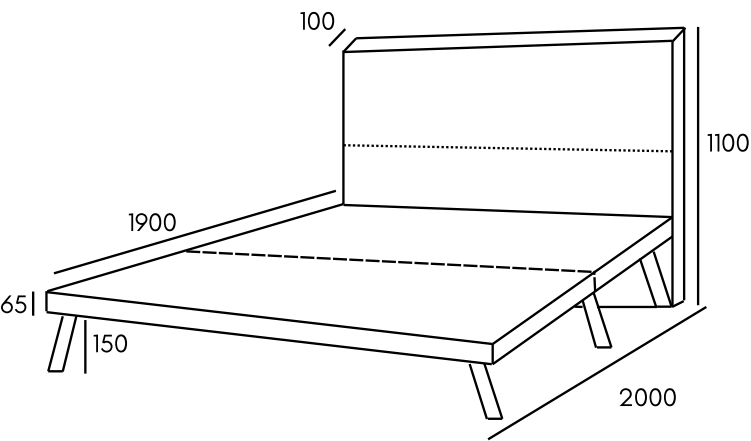


Antonio

Bed frame



CT005

3'	8001710
3'6"	8001770
5'	8001770
6'	8002130

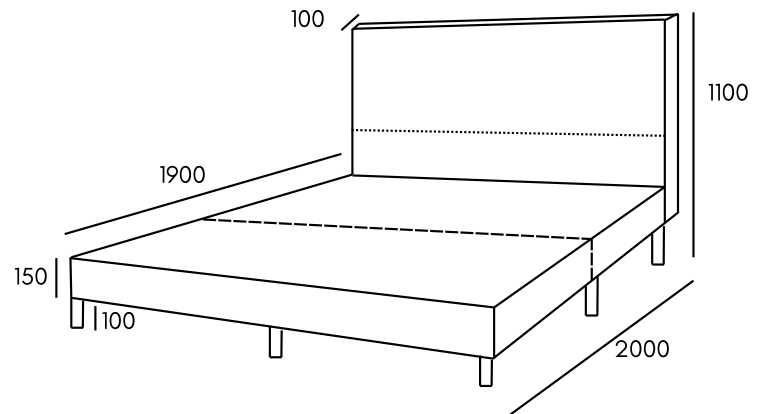


Miranda

Bed frame



VERANDO 14

3'	8001590
3'6"	8001650
5'	8001650
6'	8002010

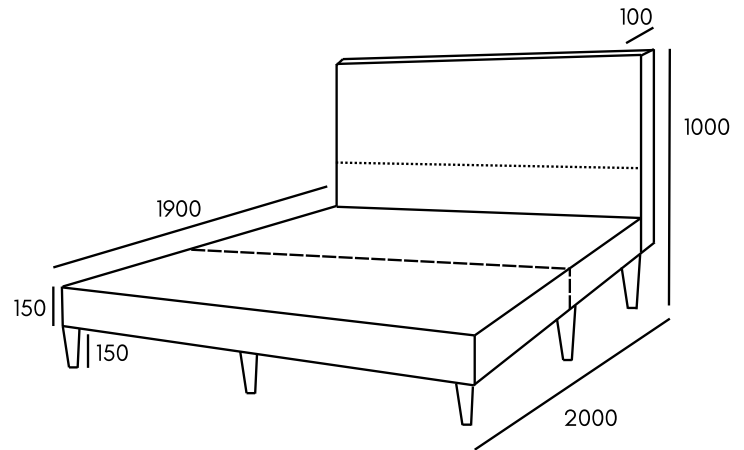


Howard

Bed frame

 VERANDO 14

3'	8001110	8001230
3'6"	8001170	8001290
5'	8001170	8001290
6'	8001530	8001650

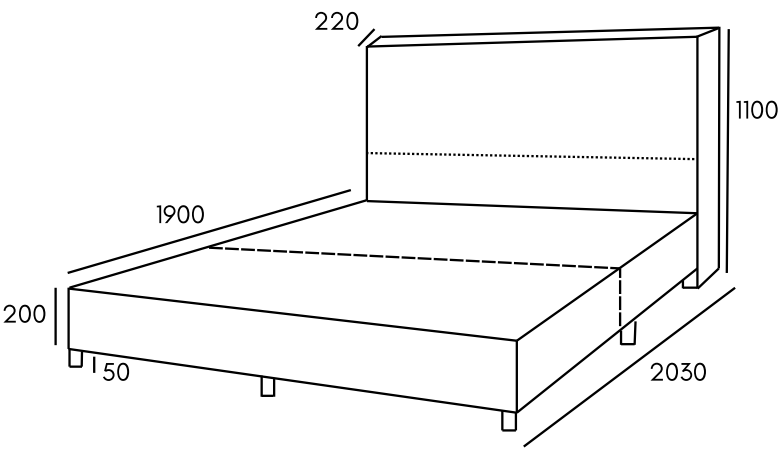


Vion

Bed frame



8877-3

3'	8001110	8001230
3'6"	8001170	8001290
5'	8001170	8001290
6'	8001530	8001650

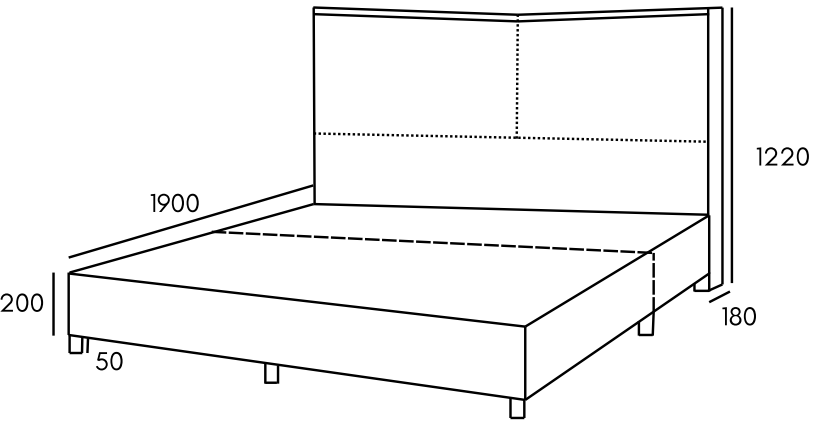


Dawson

Bed frame



CTE006

3'	8001110	8001230
3'6"	8001170	8001290
5'	8001170	8001290
6'	8001530	8001650

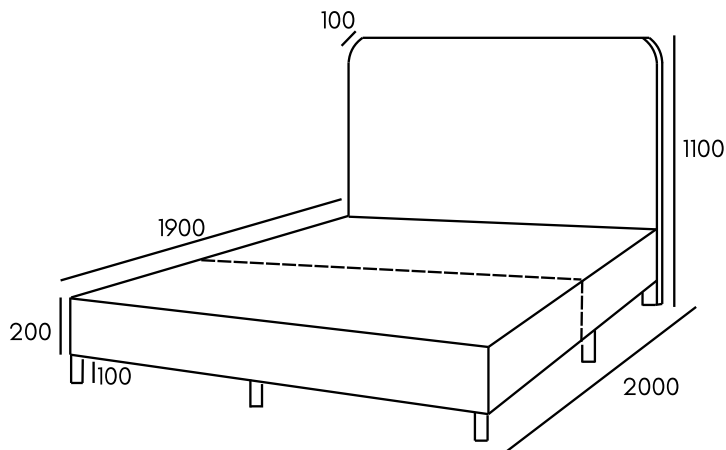


Chandler

Bed frame



CT009

3'	8001110	8001230
3'6"	8001170	8001290
5'	8001170	8001290
6'	8001530	8001650

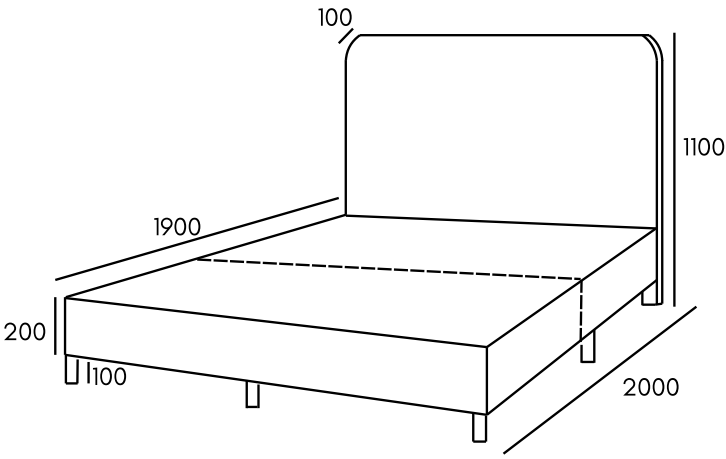


Matteo

Bed frame



3'	8001110	8001230
3'6"	8001170	8001290
5'	8001170	8001290
6'	8001530	8001650

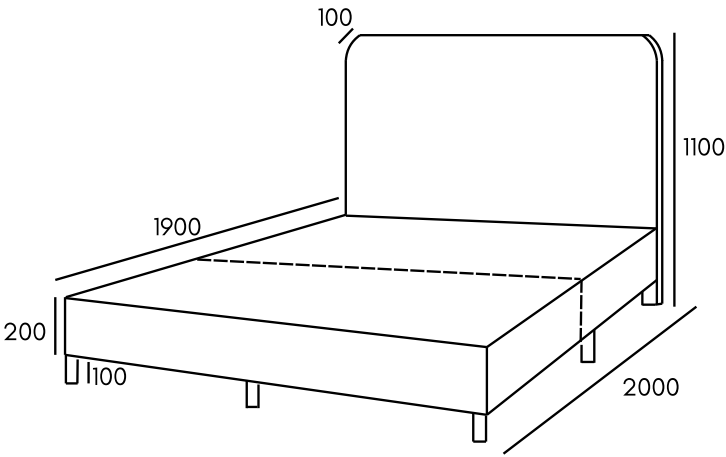


Palma

Bed frame



H3221-1

3'	8001200
3'6"	8001260
5'	8001260
6'	8001620

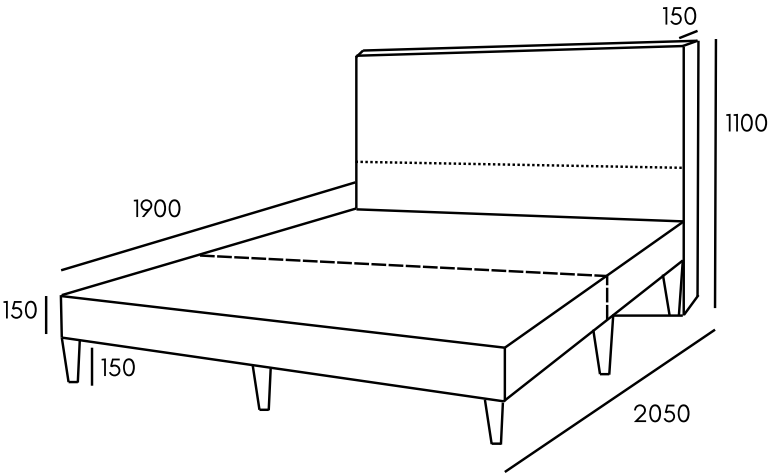


Diva

Bed frame

 MAZORA 3209

3'	8001020	8001140
3'6"	8001080	8001200
5'	8001080	8001200
6'	8001440	8001560

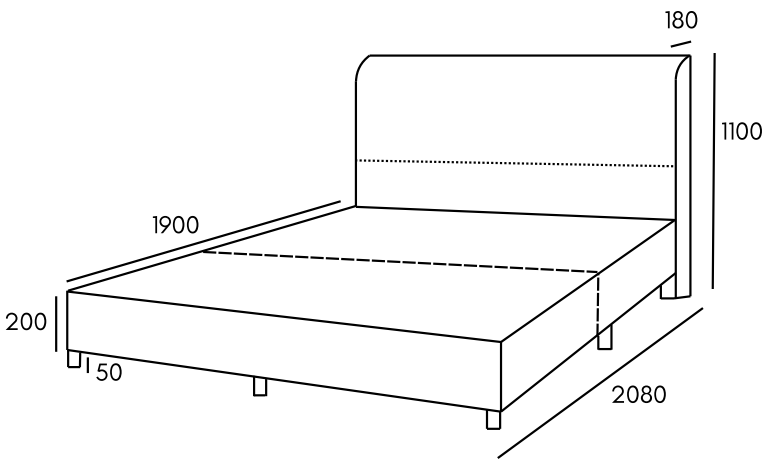


Milan

Bed frame



3'	800810	800930
3'6"	800870	800990
5'	800870	800990
6'	8001230	8001350

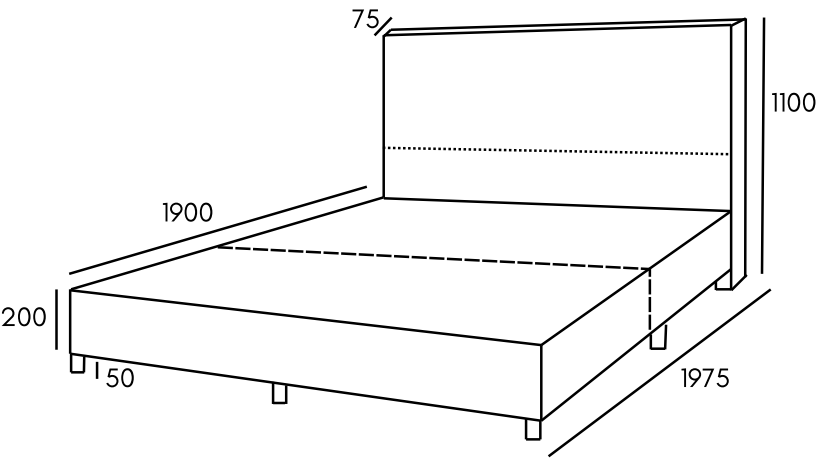


Rome

Bed frame



3'	800810	800930
3'6"	800870	800990
5'	800870	800990
6'	8001230	8001350

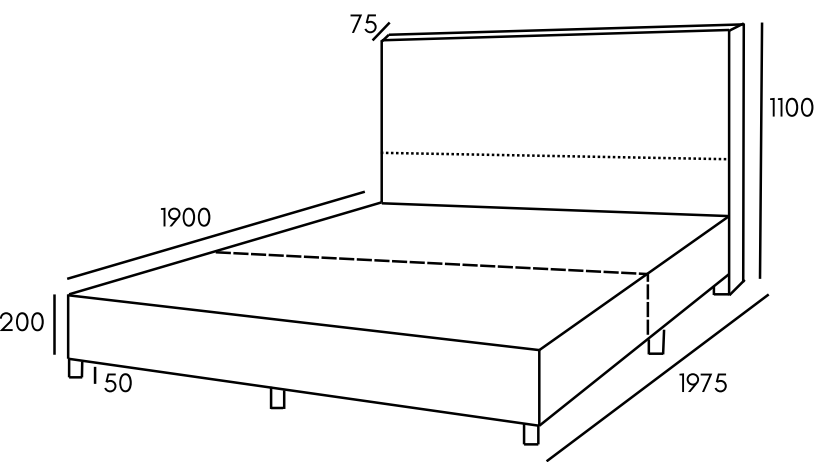


Luca

Bed frame



3'	800915	8001035
3'6"	800975	8001095
5'	800975	8001095
6'	8001335	8001455

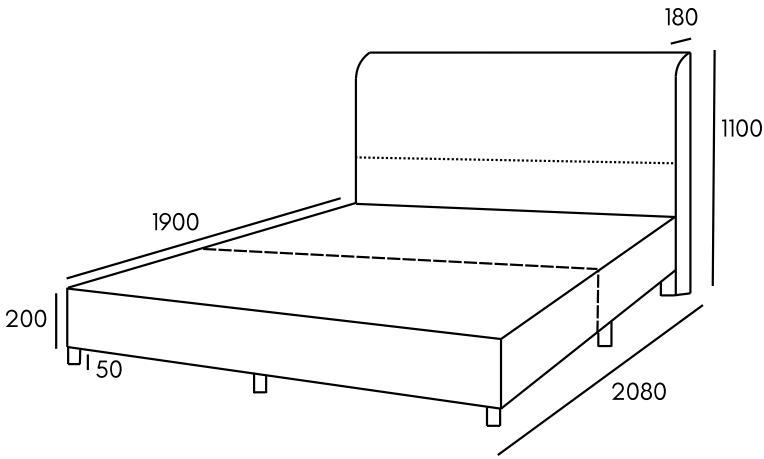


Porter

Bed frame

 MAZORA 3204

3'	8001050	8001170
3'6"	8001110	8001230
5'	8001110	8001230
6'	8001470	8001590

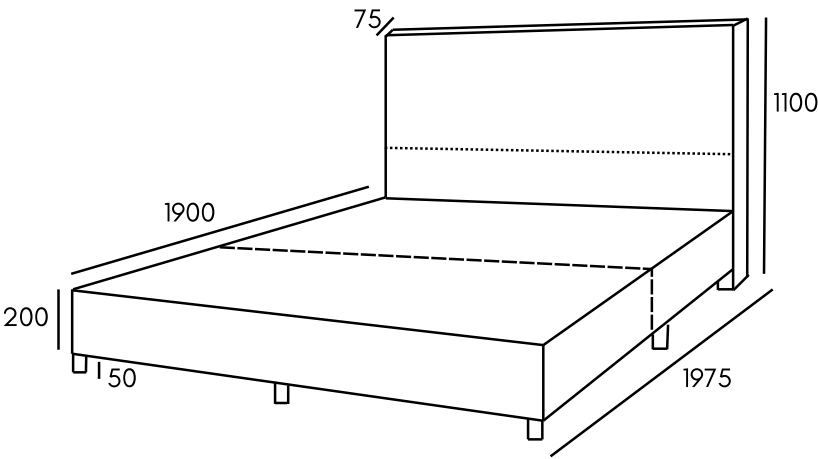


Aurora

Bed frame



3'	800915	8001035
3'6"	800975	8001095
5'	800975	8001095
6'	8001335	8001455

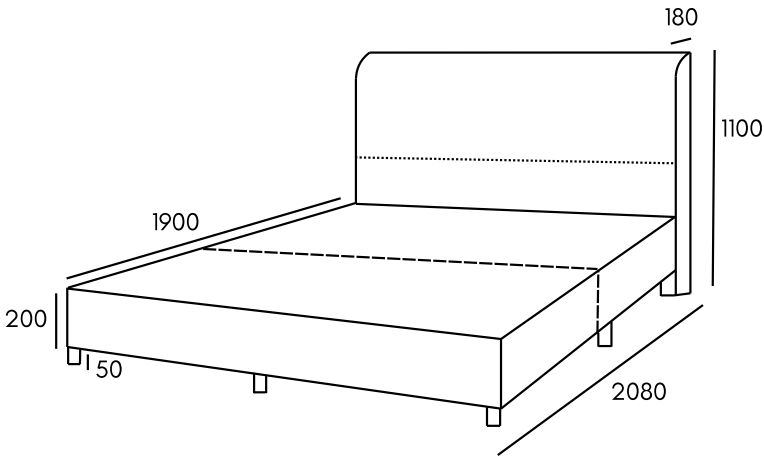


Pamela

Bed frame



3'	800915	8001035
3'6"	800975	8001095
5'	800975	8001095
6'	8001335	8001455

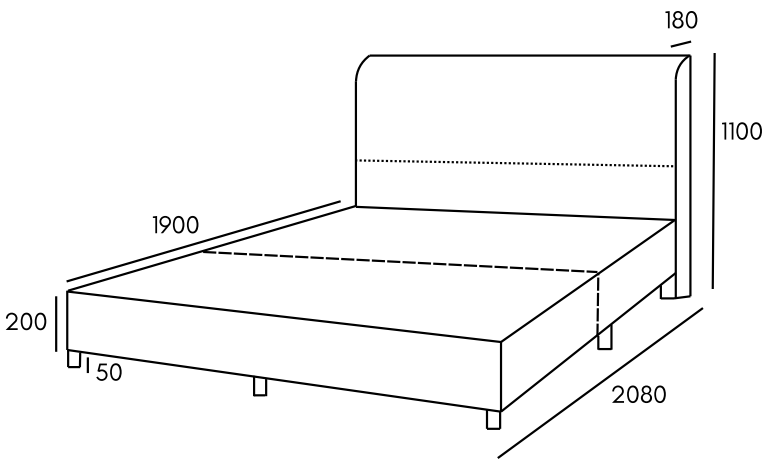


Morgan

Bed frame



3'	800915	8001035
3'6"	800975	8001095
5'	800975	8001095
6'	8001335	8001455

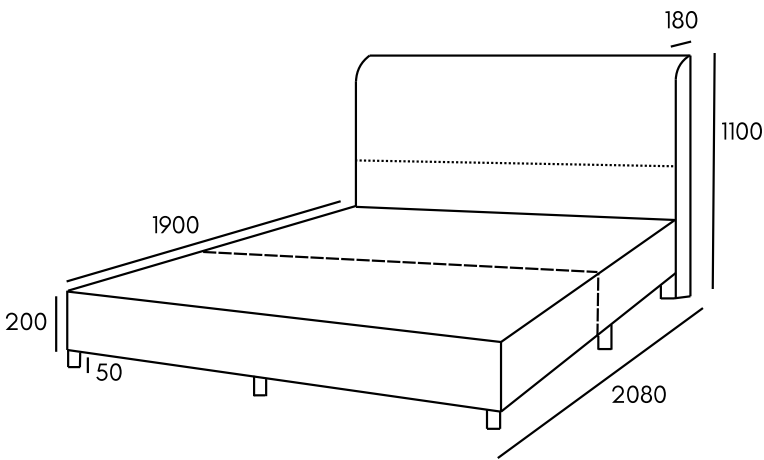


Romeo

Bed frame

 VERANDO 14/26

3'	8001080	8001200
3'6"	8001140	8001260
5'	8001140	8001260
6'	8001500	8001620

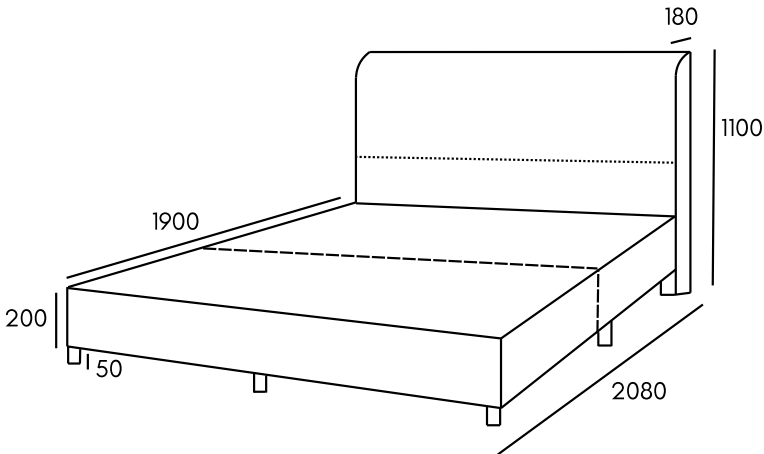


Nathan

Bed frame



3'	8001050	8001170
3'6"	8001110	8001230
5'	8001110	8001230
6'	8001470	8001590

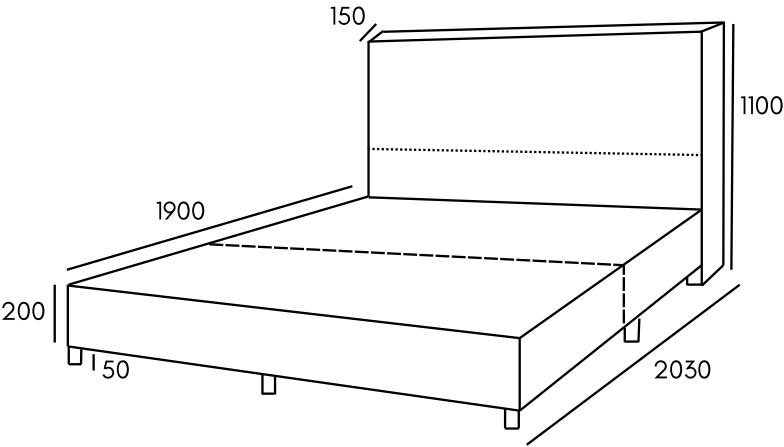


Holly

Bed frame



3'	800930	8001050
3'6"	800990	8001110
5'	800990	8001110
6'	8001350	8001470

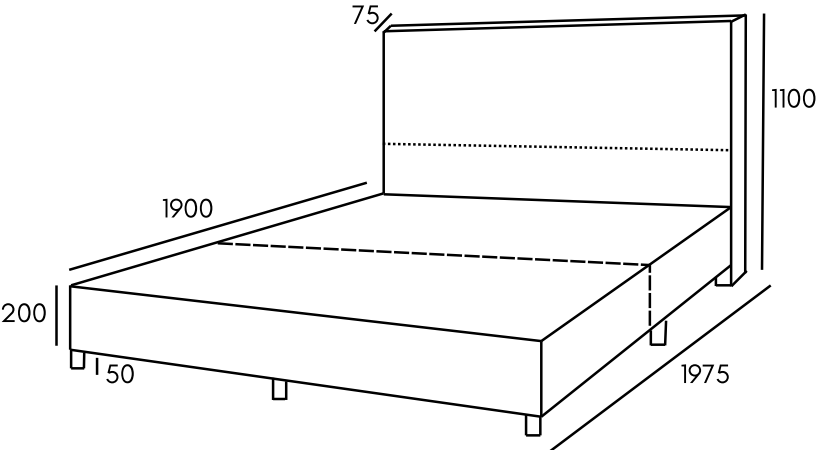


Iris

Bed frame



HOLLAND 6856 / 6826

3'	8001830	8001950
3'6"	8001890	8002010
5'	8001890	8002010
6'	8002250	8002370

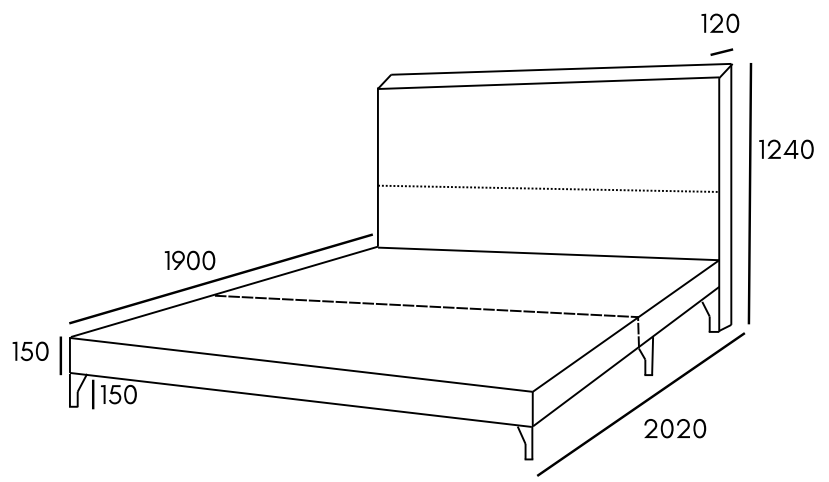


Ella

Bed frame



3'	8001020	8001140
3'6"	8001080	8001200
5'	8001080	8001200
6'	8001440	8001560

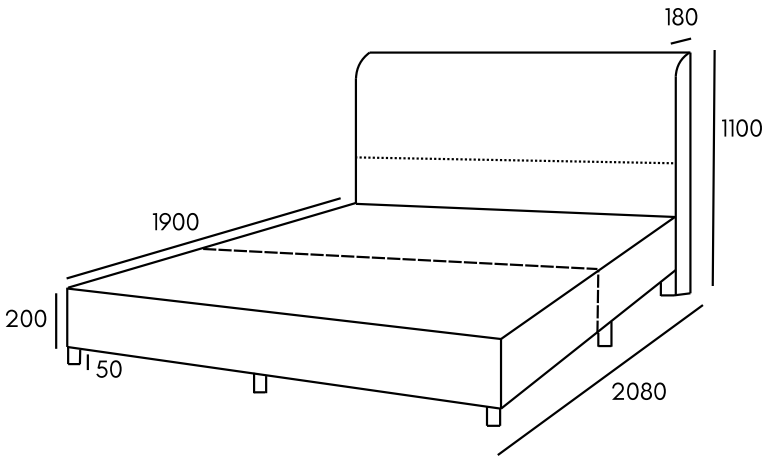


Mason

Bed frame





3'	8001020	8001140
3'6"	8001080	8001200
5'	8001080	8001200
6'	8001440	8001560

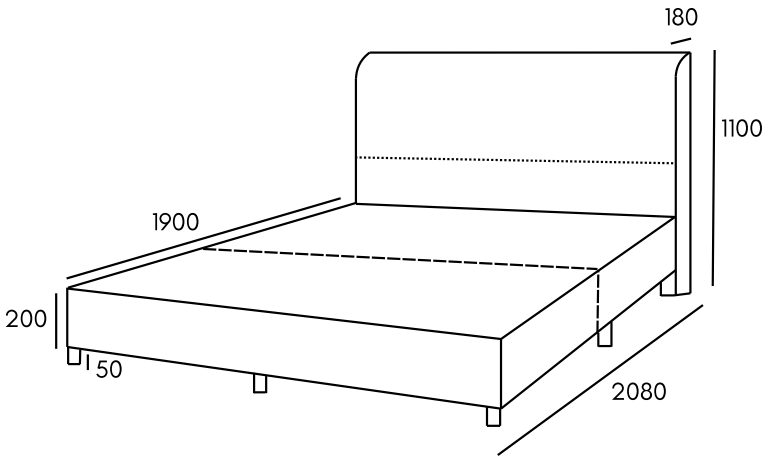

Drawer

10" Divan with 8" drawer
Drawer dimension: 580w x 460D (mm)


800450

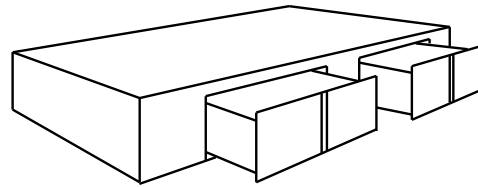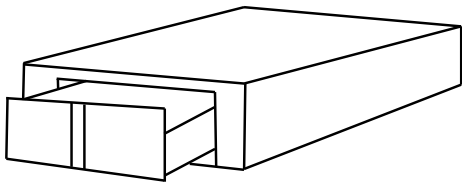

Storage

Size	Add on (With Headboard)	Storage only
3'	8001380	8001830
3'6"	8001530	8001980
5'	8001800	8002250
6'	8002760	8003210



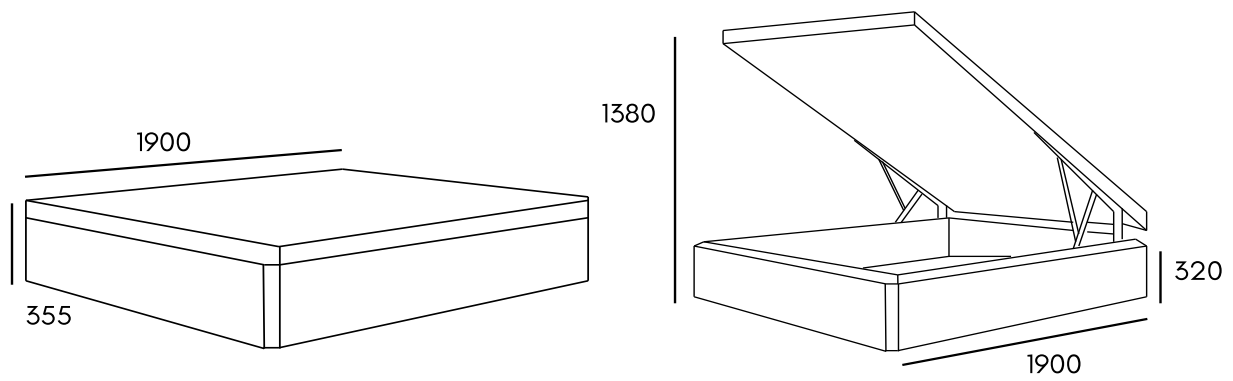

6' Storage with 4 gas lift

Divan only

(8'' Divan with leg)





3'	800720	800840
3'6"	800780	800900
5'	800780	800900
6'	8001080	8001200

Add on Thickness: +80060/ inch



Divan round edge +800180

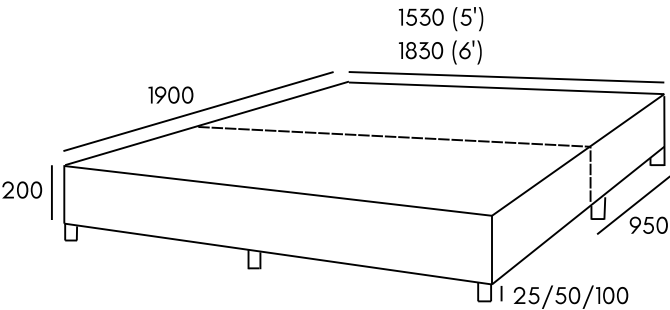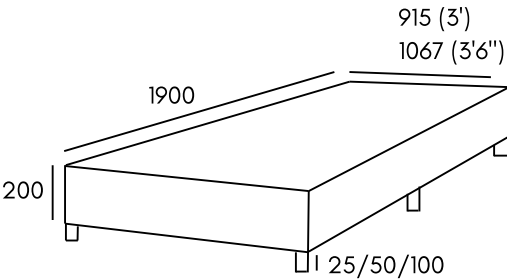

Divan only


(6", with 6" Leg)



3'	800960	8001080
3'6"	8001020	8001140
5'	8001020	8001140
6'	8001320	8001440

Divan only

(Mattress Slot in)

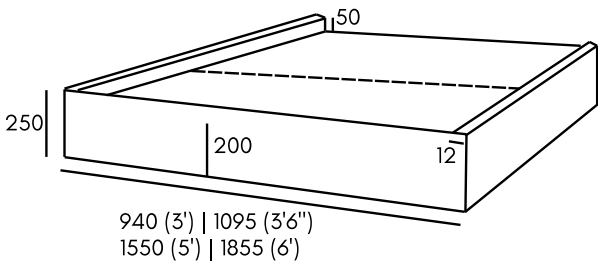


3'	8001170	8001290
3'6"	8001230	8001350
5'	8001230	8001350
6'	8001530	8001650

Cassey

Day Bed w/ Drawer

OT002

3'	8002250
3'6"	8002550

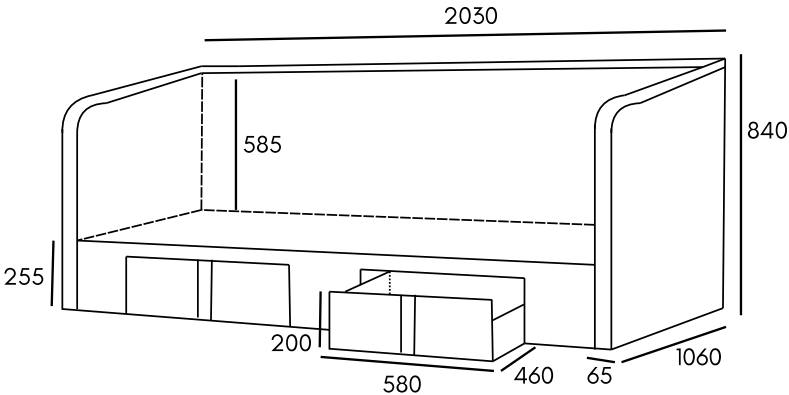


Cassey

Day bed w/ pullout

 OT002

3' X 3'	8001770
3'6" X 3'	8002070
3'6" X 3'6"	8002070

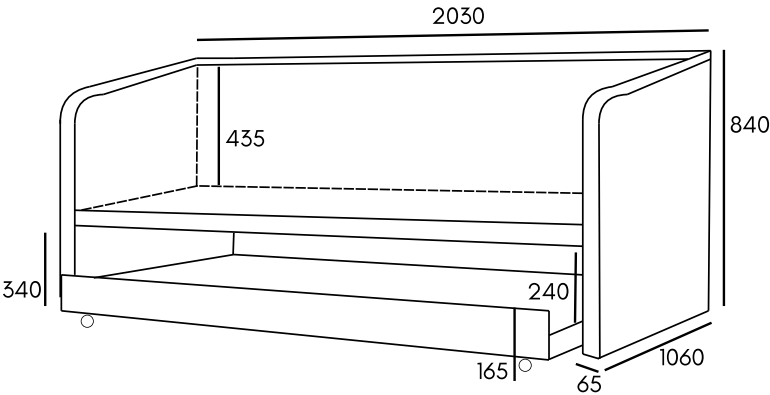


Jarret

Day Bed w/ pullout



3' x 3'	8001950
3'6" x 3'	8002250
3'6" x 3'6"	8002250

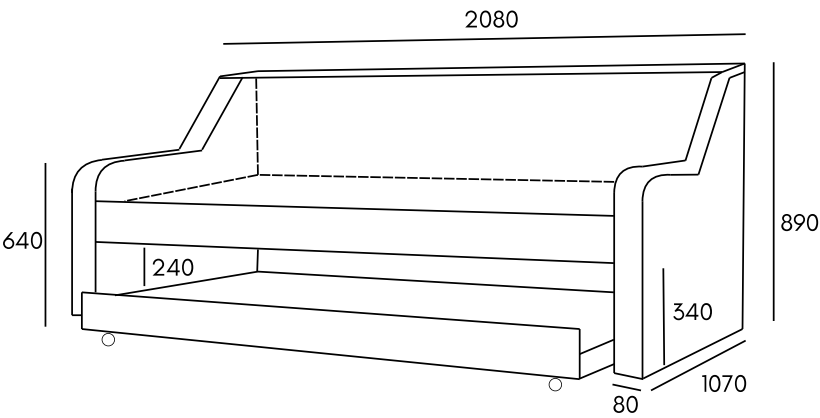


Triplo

Pullout Bed



CT010

3' x 3'	8004500
---------	---------

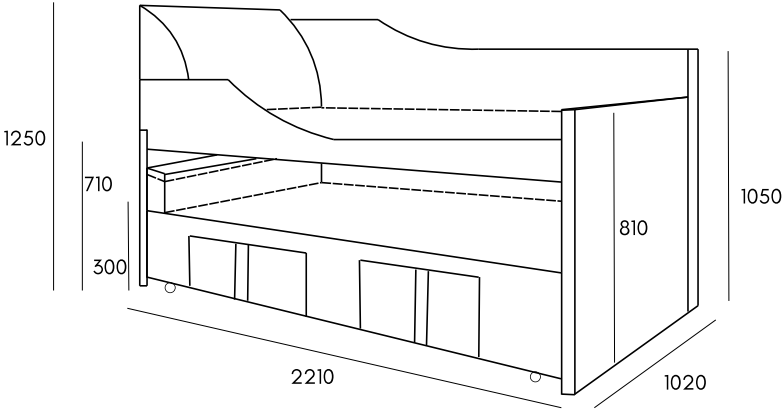


Kayden

Children bed



KS11

3'	8003900
3'6"	8004500

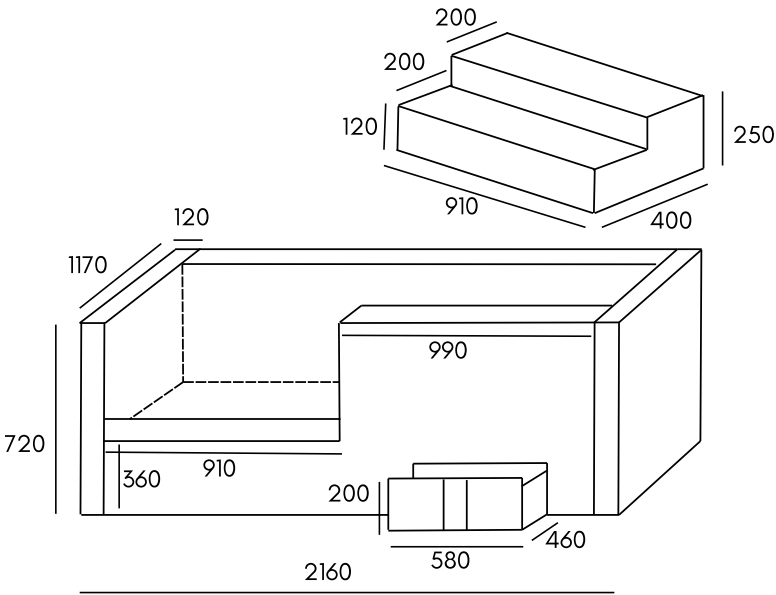


Nathan

Pullout Bed




5' x 3'	8002640
5' x 3'6"	8002700
5' x 5'	8002850

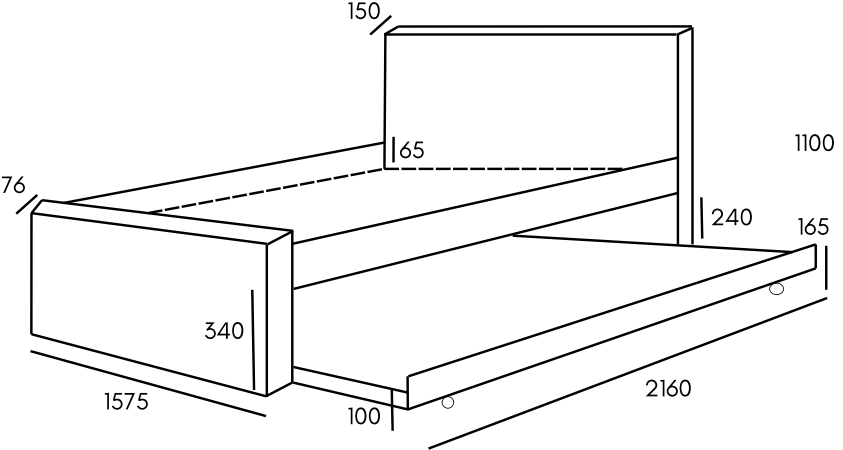


Ella

Pullout Bed



3' x 3'	8001770	8001890
3'6" x 3'	8001830	8001950
3'6" x 3'6"	8001830	8001950

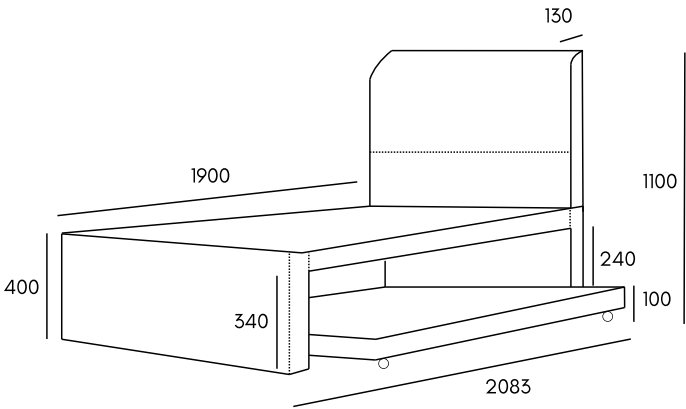


Joey

Pullout Bed

 VERANDO 28

3' x 3'	8001770	8001890
3'6" x 3'	8001830	8001950
3'6" x 3'6"	8001830	8001950

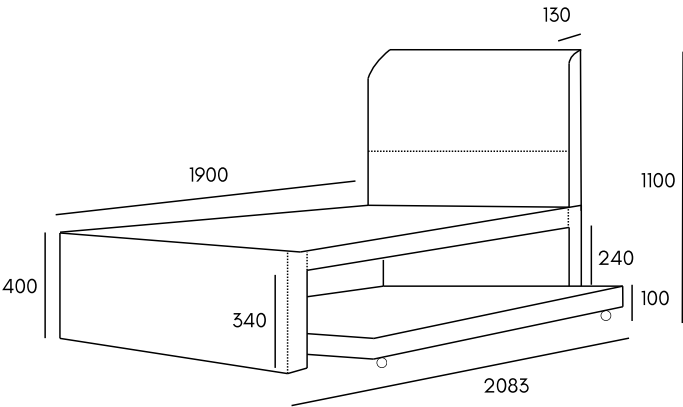


Malmo

Pullout Bed



3' x 3'	8002010
3'6" x 3'	8002070
3'6" x 3'6"	8002070

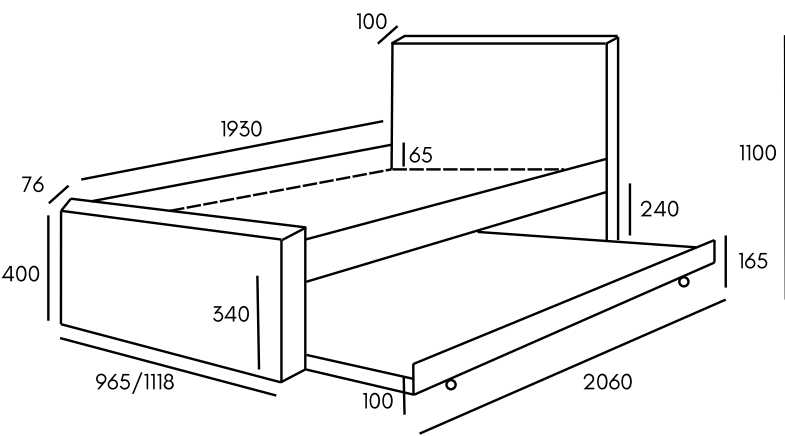


June

Bed frame



3'	8001650
3'6"	8001770

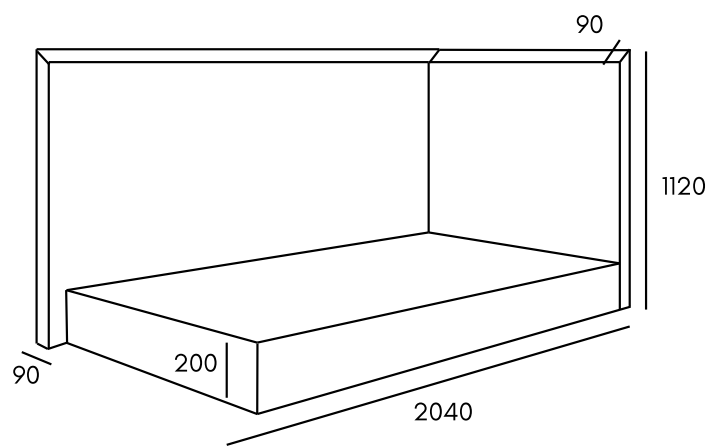


Wade

Bed frame



3'	8002430
3'6"	8002550

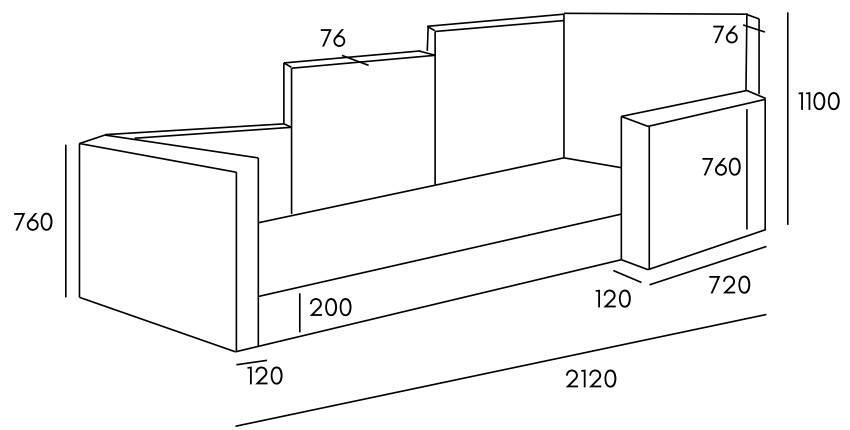


Teddy

Pullout Bed



OT003

3'	8002010
3'6"	8002070
5'	8002070

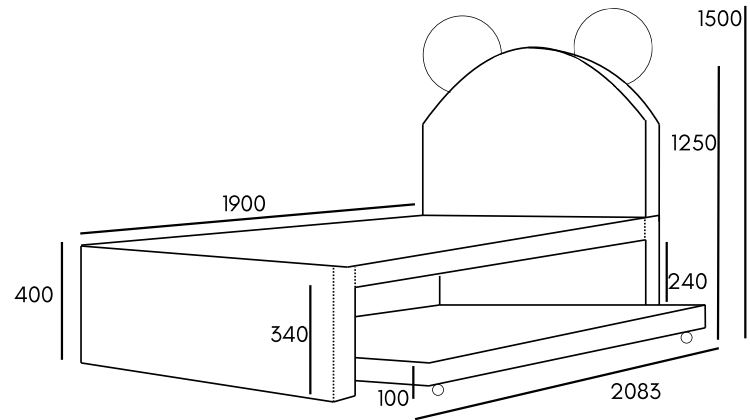


Bunny

Pullout Bed with Drawer



3' x 3'	8003300
3'6" x 3'	80034450
3'6" x 3'6"	8003450

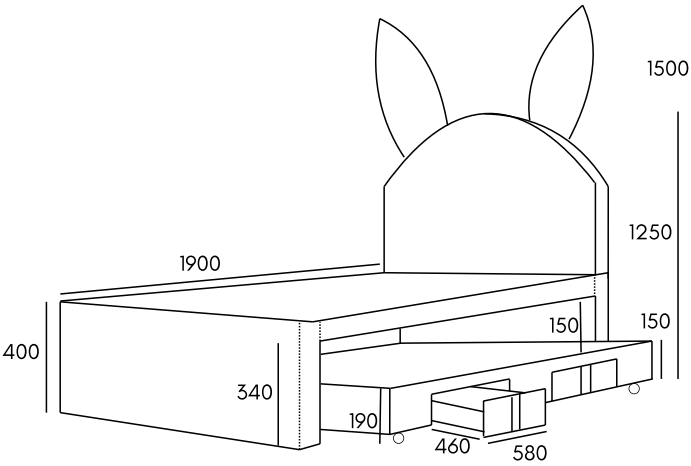


Fred

Pullout Bed



OT003

3' x 3'	8002550
3'6" x 3'	8002700
3'6" x 3'6"	8002700

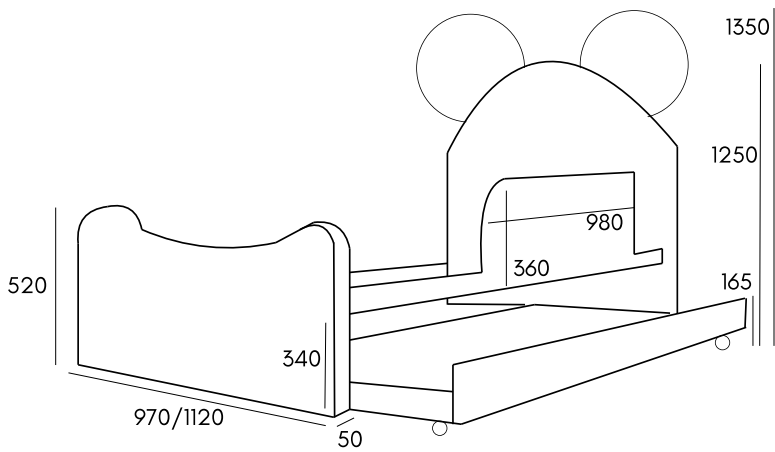



Lumos

Bed frame



Headboard: 1100H x 100D (mm)
Base: 200H w/ 50H Leg (mm)

3'	8001350
3'6"	8001410



Emma

Bed frame

Headboard: 1100H x 100D (mm)
Base: 200H w/ 50 Leg (mm)



3'	8001350
3'6"	8001410



Lora

Bed frame

Headboard: 1100H x 100D (mm)
Base: 200H w/ 50 Leg (mm)





Hana

Lounge Chair



8002550

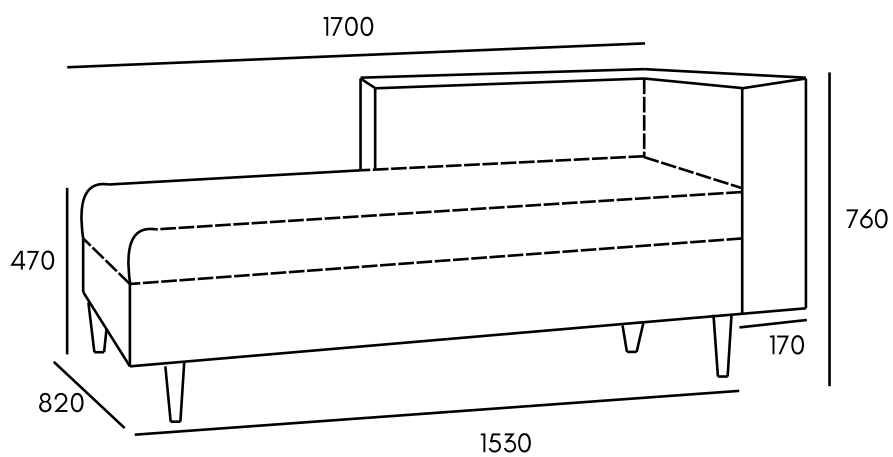

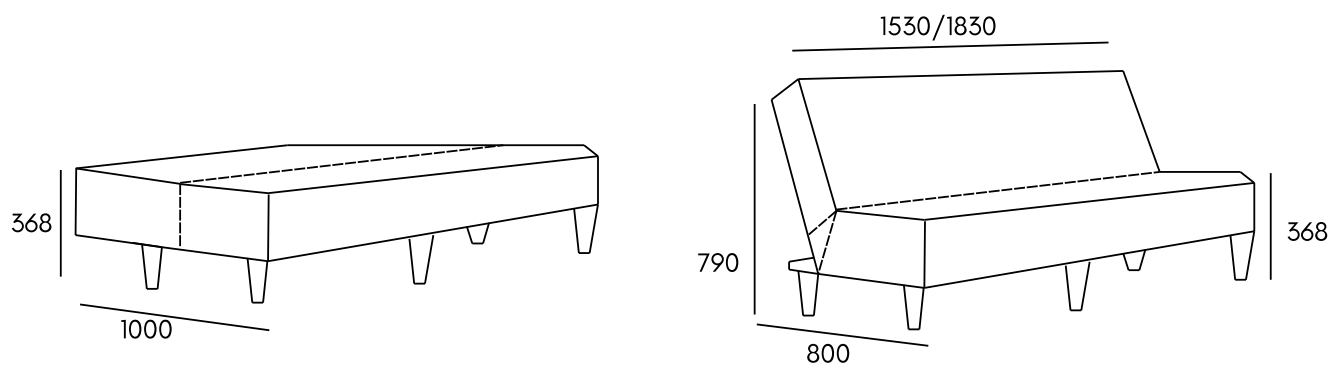


Rossi



HOLLAND 6840

Sofa Bed

5'	8001290
6'	8001740


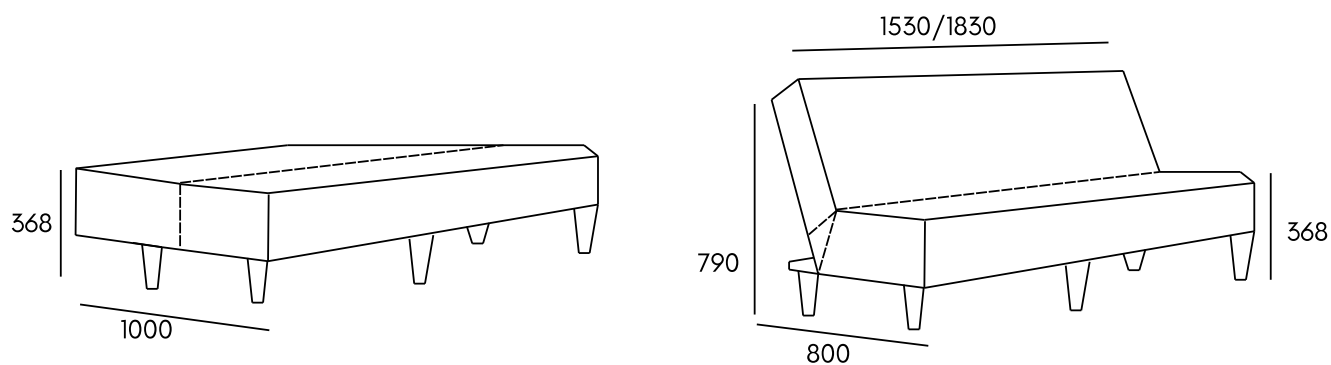


Vienna

Sofa Bed



5'	8001290
6'	8001740

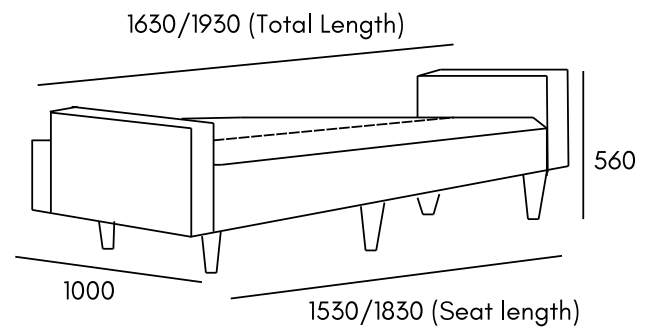
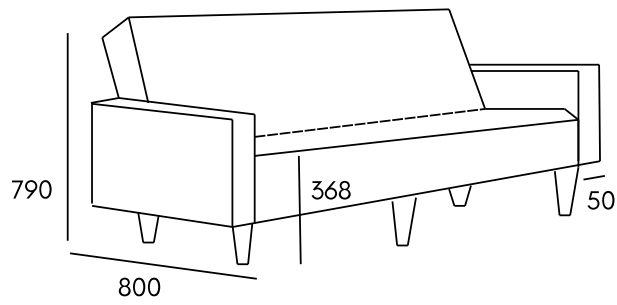


Lauren

Sofa Bed



5'	8001620
6'	8002070

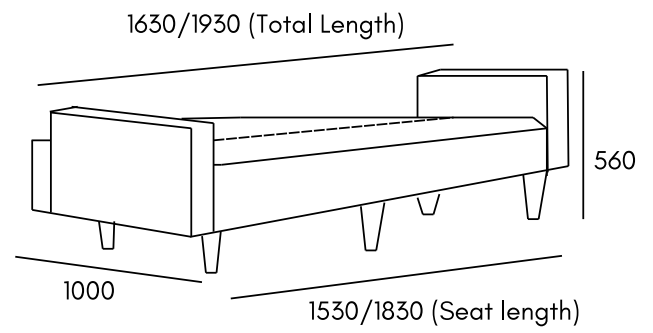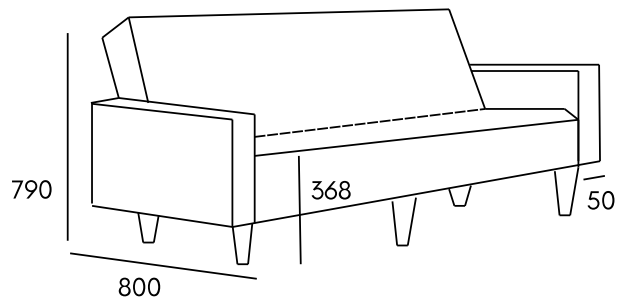

Henry

Sofa Bed



MAZORA 3209

5'	8001770
6'	8002220


Joyce

Relax Chair



D22132-5 & HOLLAND 6856

8002070

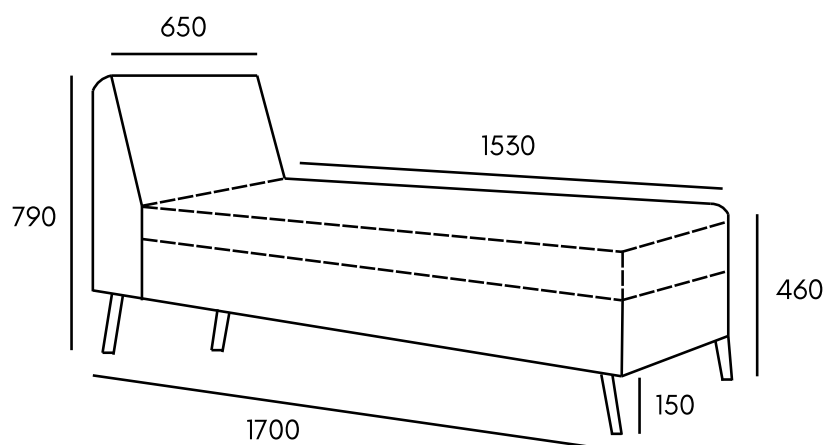


Rio

Lounge Chair

017-1 & 017-10

8001770

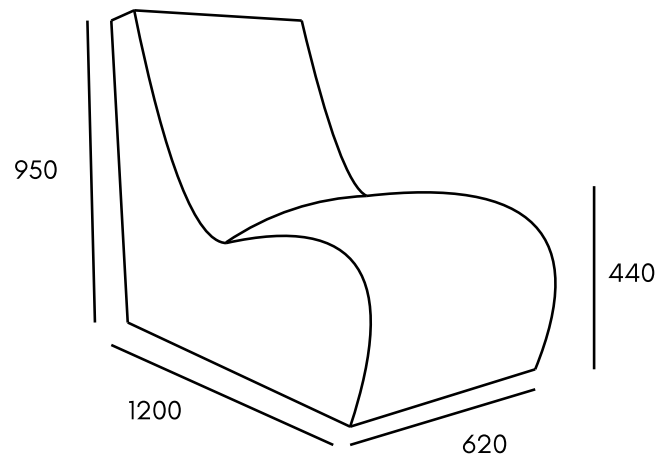


Elizabeth

Lounge Chair



8002250

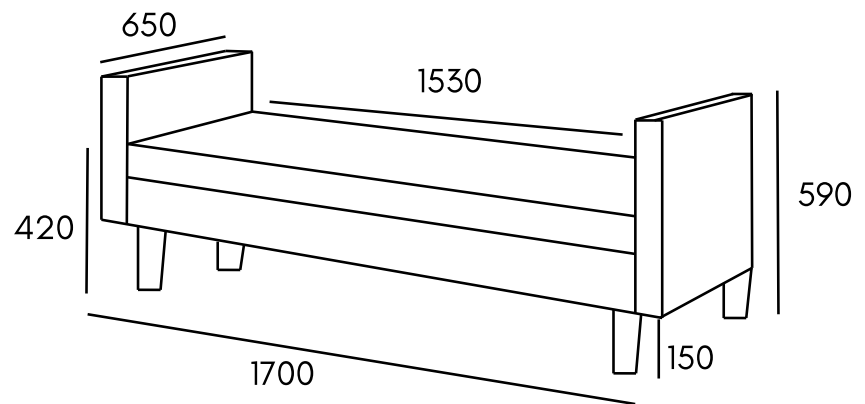



Orlando

Stool

840H x 635W x 690D x 420SH (mm)

8001170



Hugo

Side table



460H x 650W x 450D (mm)

800750



Sandy

Bench



480H x 1300W x 550D

8001170



Warren

Side Table



560L x 420D x 570H

800750





Zurich

Ottoman



1230W x 390H x 460D

800750



Oslo

Ottoman



1230W x 390H x 460D

800750



Mika

Ottoman



1230W x 360H x 460D

800750



Pebble

Ottoman

 8823-07

430H x 1830W x 760D (mm)

8001950



Cura

Ottoman

 LG001

420H x 1250W x 460D (mm)

8001170



3'6"	800780
5'	8001050
6'	8001260

Oscar

Ottoman



390H x 510D



Verona

Ottoman



400H x 1220W x 590D (mm)

8001170



Lisbon

Lounge



550H x 1560W x 540D x 420SH

8001350



Hazel

Lounge



430H x 450D x 800L

8001050/pc

Crafted with intention
Designed for life

Beyond
Bedding

Lot PT 18398, Jalan Raba PKNS,
42700 Banting, Selangor

+60 11- 3755 6576