

Wooden Toy Car Garage Assembly Guide



Materials Needed

- Super glue or any preferred wood glue
- Masking tape (to secure parts during assembly)

Helpful Tips Before You Begin

- When gluing parts, try to apply adhesive on the underside so it remains hidden.
- It is strongly recommended to do a dry fit first—assemble without glue to ensure everything goes together smoothly. Use masking tape if necessary during this step.


Step-by-Step Assembly Instructions

1. Assemble the Main Structure

- Insert the six large walls into the backboard.




- Place the five small walls in between the large ones. You can use one of the driveway pieces to help keep them aligned and in place.

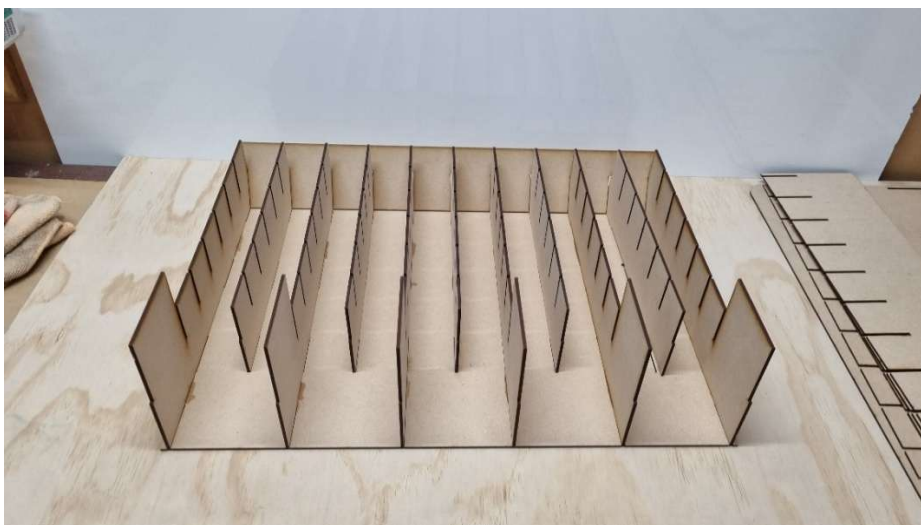

2. Add the Driveway Sections

- There are four straight driveway sections—two wider and two narrower. The narrower sections are for the top two rows, leaving a gap at the back for the name plate.
- Slide the straight driveway sections into place, then fit the larger L-shaped sections in between them.

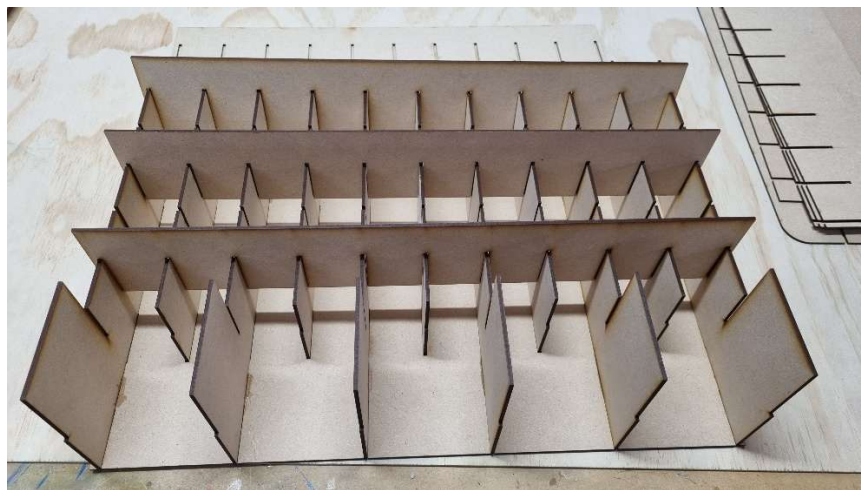

3. Install Ramp Supports and Name Plate

- Take the ramp driveway supports and slot them into the corresponding locations on the ramp driveways and base.



- Place the name section into the designated slots on top. Slide it down so it fits neatly between the rooftop and the top row of parking bays.



4. Position the Ramps

- There are six ramps provided. Arrange them in any configuration to suit your toddler's preferences. Note that the smallest ramp is designed to connect the ground level to level 1 only.



5. Final Notes

We hope your assembly has gone smoothly and that your toddler enjoys many hours of imaginative play with their new garage.

If you have any issues, please feel free to reach out using the contact details below. If you are happy with your purchase, consider leaving a review on the BOYS GIFTS Facebook page or on our website.

Graham Landrum

0417998696

boysgifts@outlook.com

<https://boysgifts.au/>