



INSTALLATION GUIDE



The Hammock Bath: 3 designs in 3 styles

3 DESIGNS

MIRAGE (fre-standing model)

OASIS (hanging model between your own walls)

HAVEN (hanging model between powder coat steel frames supplied)

3 STYLES

SLIMLINE : original design

MARK II : deep soaking tub

Acrylic (just released)

4 COLORS

ALABASTER (matt white)

DOVE (matt light grey)

EBONY (matt black)

FLOWER (alabaster on the inside hand painted motif on the outside)

2 SIZES

2 metres x 1 metre (78.75" x 39.37")

1.8 metres x 0.9 metres (70.86" x 34.43")

The 4 colours available



Alabaster (matt white)



Dove (matt grey)



Ebony (matt black)



Flower is hand painted motif on the outside and Alabaster (matt white) on the inside




During production of the Flower hand painted motif



For your upcoming project, we can hand paint your custom design to suit your hotel or resort theme.

Mark II Hammock Bath

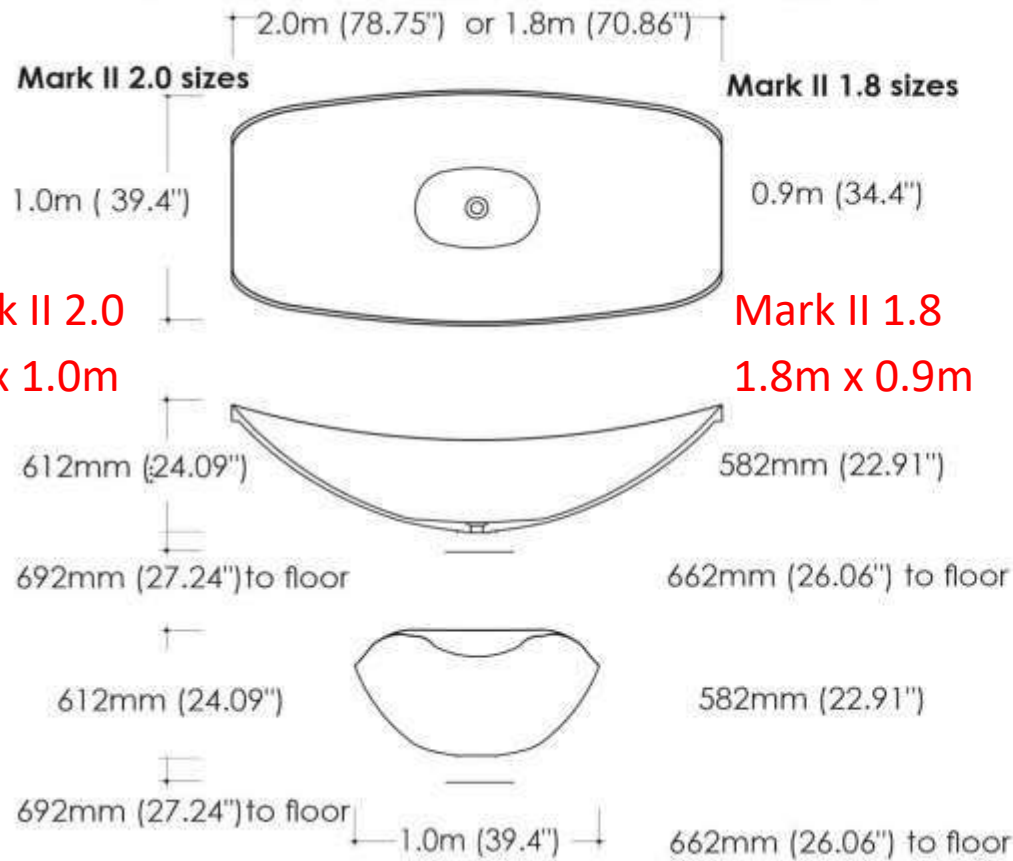

The Haven Mark II includes a curved brace located on the rear side (as viewed above) which is only needed when installed on a timber floor.


Haven Mark II
 curved steel brace rear view



Alabaster (A)



Dove (D)




Ebony (E)



Flower (F)

Slimline Hammock Bath

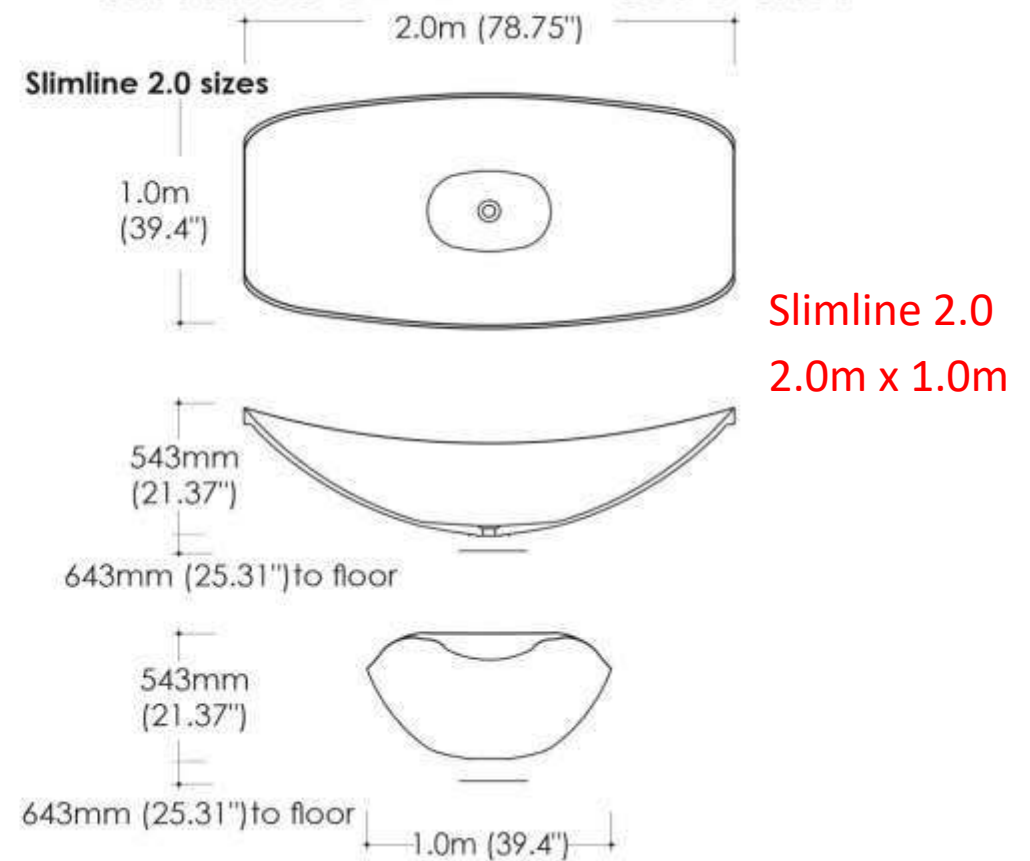

The main difference between the Mark II 2.0 & Slimline 2.0 models are The Mark II's bathing depth is 137mm (5.4") deeper than The Slimline


4 Colours

HAMMOCK BASIN

2 sizes : HB528 & HB660

HB528 -528mm x 320mm

HB660 -660mm x 400mm

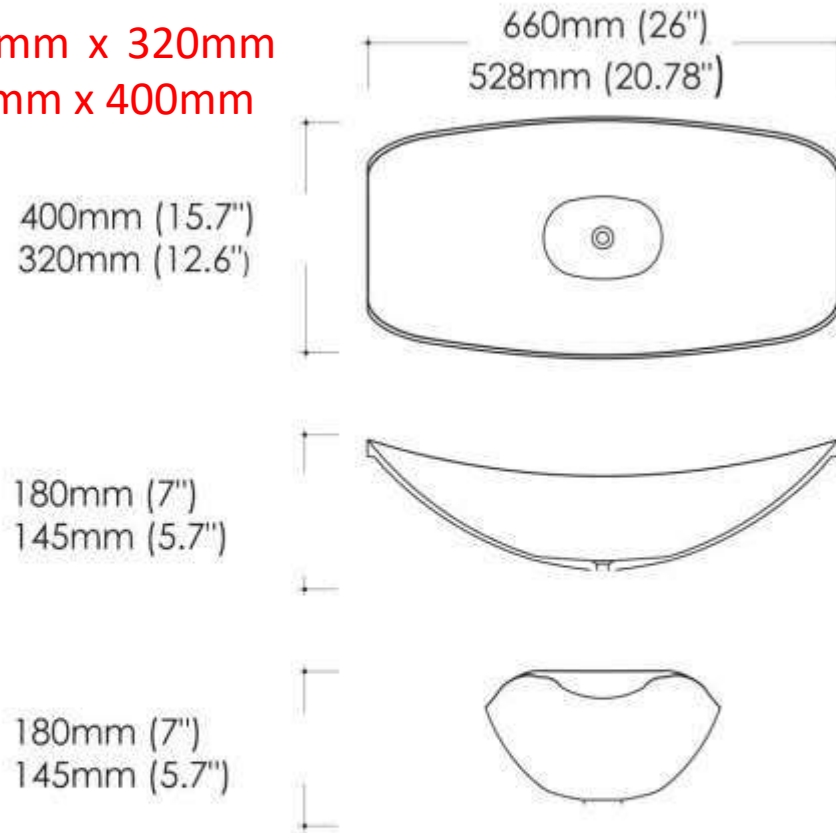

4 Colours



Alabaster (A)



Dove (D)



Ebony (E)



Flower (F)



DRAINING THE HAMMOCK BATH

The **Mirage** waste is connected as per any standard free-standing tub.

The **Oasis & Haven** wastes are connected in a few methods:

1. via a hard pipe connection and can be covered by 2 semi circle covers provided
2. locate a drain directly under the waste outlet with a small sump pit directly under it
3. drain the water from the bath directly onto the tiled floor and have the tiles fall towards a linear drain.



THE OASIS / HAVEN

Draining via a hard pipe
connection from the bath outlet





THE OASIS

Draining directly onto the tiles and have a slight fall from the tiles to a linear drain



THE HAVEN / OASIS

Draining to a square grate located under the bath outlet with a small sump pit under the floor



Drain located under the outlet of the bath



Sump located under the floor

THE MIRAGE HAMMOCK BATH INSTALLATION

The Mirage Hammock Bath is installed just as any fre-standing bathtub. A flexible bath waste is supplied. Once the plumbing is connected the pedestal base is silicone in position.




THE OASIS HAMMOCK BATH INSTALLATION

The OasisHammockBath hangs between 2 walls you provide (usually brick or concrete). Supplied are 2 x stainless steel brackets to connect to the wall using dyna bolts. The Oasis Hammock Bath sits on the ledge of the stainless steel brackets. The builder builds the brick or concrete walls.



Stainless steel brackets supplied

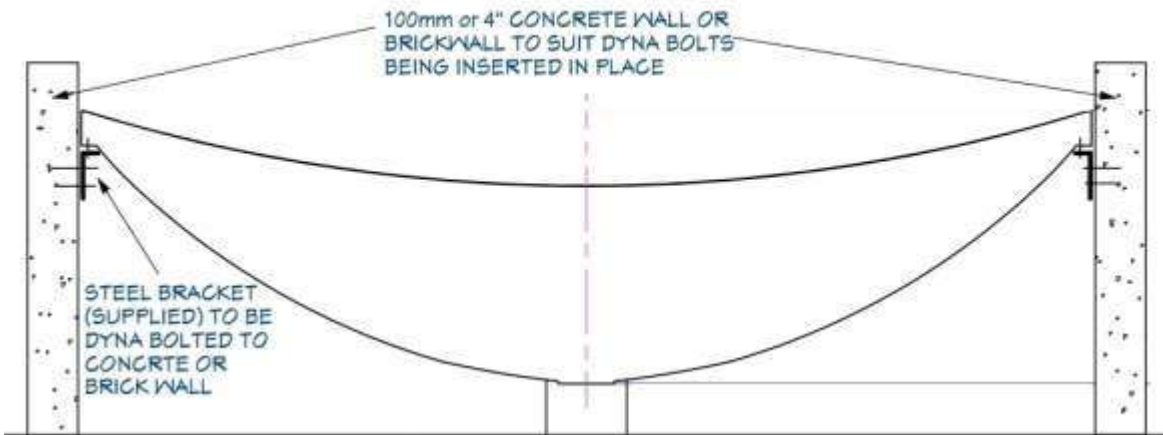

OASIS SLIMLINE OR MARK II INSTALLATION

This is a fixed to wall installation

1. Build a double brick or concrete wall that is stable and strong enough to support the bathtub.
2. This may need to be checked by your engineer. The bathtub weighs approximately 150 kg plus approximately 150 litres of water + 2 possibly 2 people.
3. The walls will need to be either 1.8 metres or 2 metres apart (depending on the design and style you choose) plus any wall thickness you may want to include. For example tiles or stone.
4. If you choose tiles or stone to go over your wall then the finished surfaces should be 1.8 metres or 2 metres apart + allow 1mm each side for tolerance.
5. Remove bath from crate carefully, usually by removing the top cover then with a hammer or claw bar remove one side.
6. Have the bath close to where you want to install it
7. Place bath on a 80mm high support for the Mark II designs or 100mm support for the Slimline design, this can be small pieces of timber 20mm each to add up to the height needed on top of each other enough to go under the centre of the outlet of the bath to lift it slightly off the floor during installation process
8. Remove the stainless steel brackets that are currently delivered with the bath.
9. Measure the underside of the ledge on the bath where the stainless steel bracket fits and then dyna bolt the stainless steel brackets level (double check that the brackets are level) to the brick or concrete wall you have built to suit.
10. Check and tighten all bolts
11. Under the bath we provide 2 semi circle covers which should be installed to cover the fixed waste pipe. These may need to be cut to suit if you have lowered the height at all.

THE HAVEN HAMMOCK BATH INSTALLATION

The Haven Hammock Bath hangs between two black powder coated steel frames provided.

The Haven includes a curved steel brace which hangs between the steel frames on the rear side of the Hammock Bath out of view.

These steel frames are dyna bolted to a concrete slab and stainless steel brackets supplied are fixed to these frames and the Hammock Bath sits on the ledge of the stainless steel brackets. If the Haven is installed on a timber floor or is installed or just free standing and not dyna bolted to a concrete slab the curved steel brace is required. The curved steel brace is also black powder coat and is barely visible being located on the rear side of the Hammock Bath.



Stainless steel brackets attached
To black powder coat steel frame



Curved steel brace only required for a
timber floor or free standing installation
Located on the rear side and barely visible
from the front



Base of steel frame where dyna bolts
Are installed into the concrete floor.
Also showing are the plastic covers



Curved brace
connected
to steel frame



Black powder
coat upright steel
frame supplied

THE HAMMOCK BATH COLLECTION

MIRAGE ACRYLIC

HBA1.8A mirage alabaster
HBA1.8E mirage ebony
HBA2.0A mirage alabaster
HBA2.0E mirage ebony

MIRAGE SLIMLINE

HBM2.0A alabaster
HBM2.0D dove
HBM2.0E ebony
HBM2.0F flower

MIRAGE MARK II

HBM1.8A M II alabaster
HBM1.8D M II dove
HBM1.8E M II ebony
HBM1.8F M II flower
HBM2.0A M II alabaster
HBM2.0D M II dove
HBM2.0E M II ebony
HBM2.0F M II flower



OASIS SLIMLINE

HBO2.0A alabaster
HBO2.0D dove
HBO2.0E ebony
HBO2.0F flower

OASIS MARK II

HBO1.8A M II alabaster
HBO1.8D M II dove
HBO1.8E M II ebony
HBO1.8F M II flower
HBO2.0A M II alabaster
HBO2.0D M II dove
HBO2.0E M II ebony
HBO2.0F M II flower

HAVEN ACRYLIC

HBA1.8A haven alabaster
HBA1.8E haven ebony
HBA2.0A haven alabaster
HBA2.0E haven
ebony

HAVEN SLIMLINE

HBH2.0A alabaster
HBH2.0D dove
HBH2.0E ebony
HBH2.0F flower

HAVEN MARK II

HBH1.8A M II alabaster
HBH1.8D M II dove
HBH1.8E M II ebony
HBH1.8F M II flower
HBH2.0A M II alabaster
HBH2.0D M II dove
HBH2.0E M II ebony
HBH2.0F M II flower