
BA010-BA017



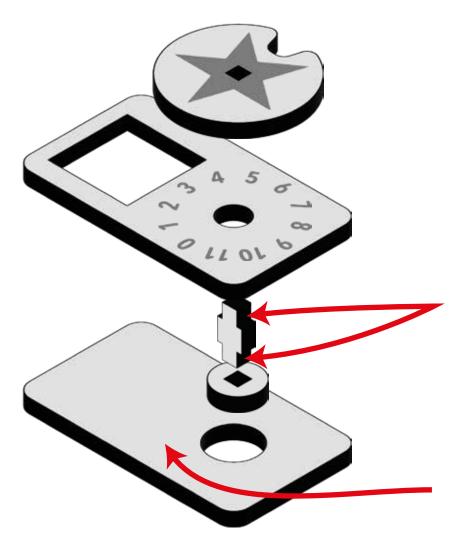

This kit will contain soot. Before assembly clean it using some cloth or paper kitchen roll. If you don't like the smoky patina, use a bit of water while cleaning. Do not soak the material.

PVA glue can be applied, but if you notice a snug fit it may be better to leave it at that. It gives the option to tighten or loosen the tension on the mechanism to your liking.

A minimum amout of PVA glue should be applied. Beware of over application. This will cause the mechanism to fail.