

Instruction sheet SW002



Use PVA glue





Using glue is optional




Do not use glue

PVA Glue should be used sparingly. Beading should be avoided. Apply glue using a brush. Give the glue 1 hour time to dry after completing step 2 to 12.

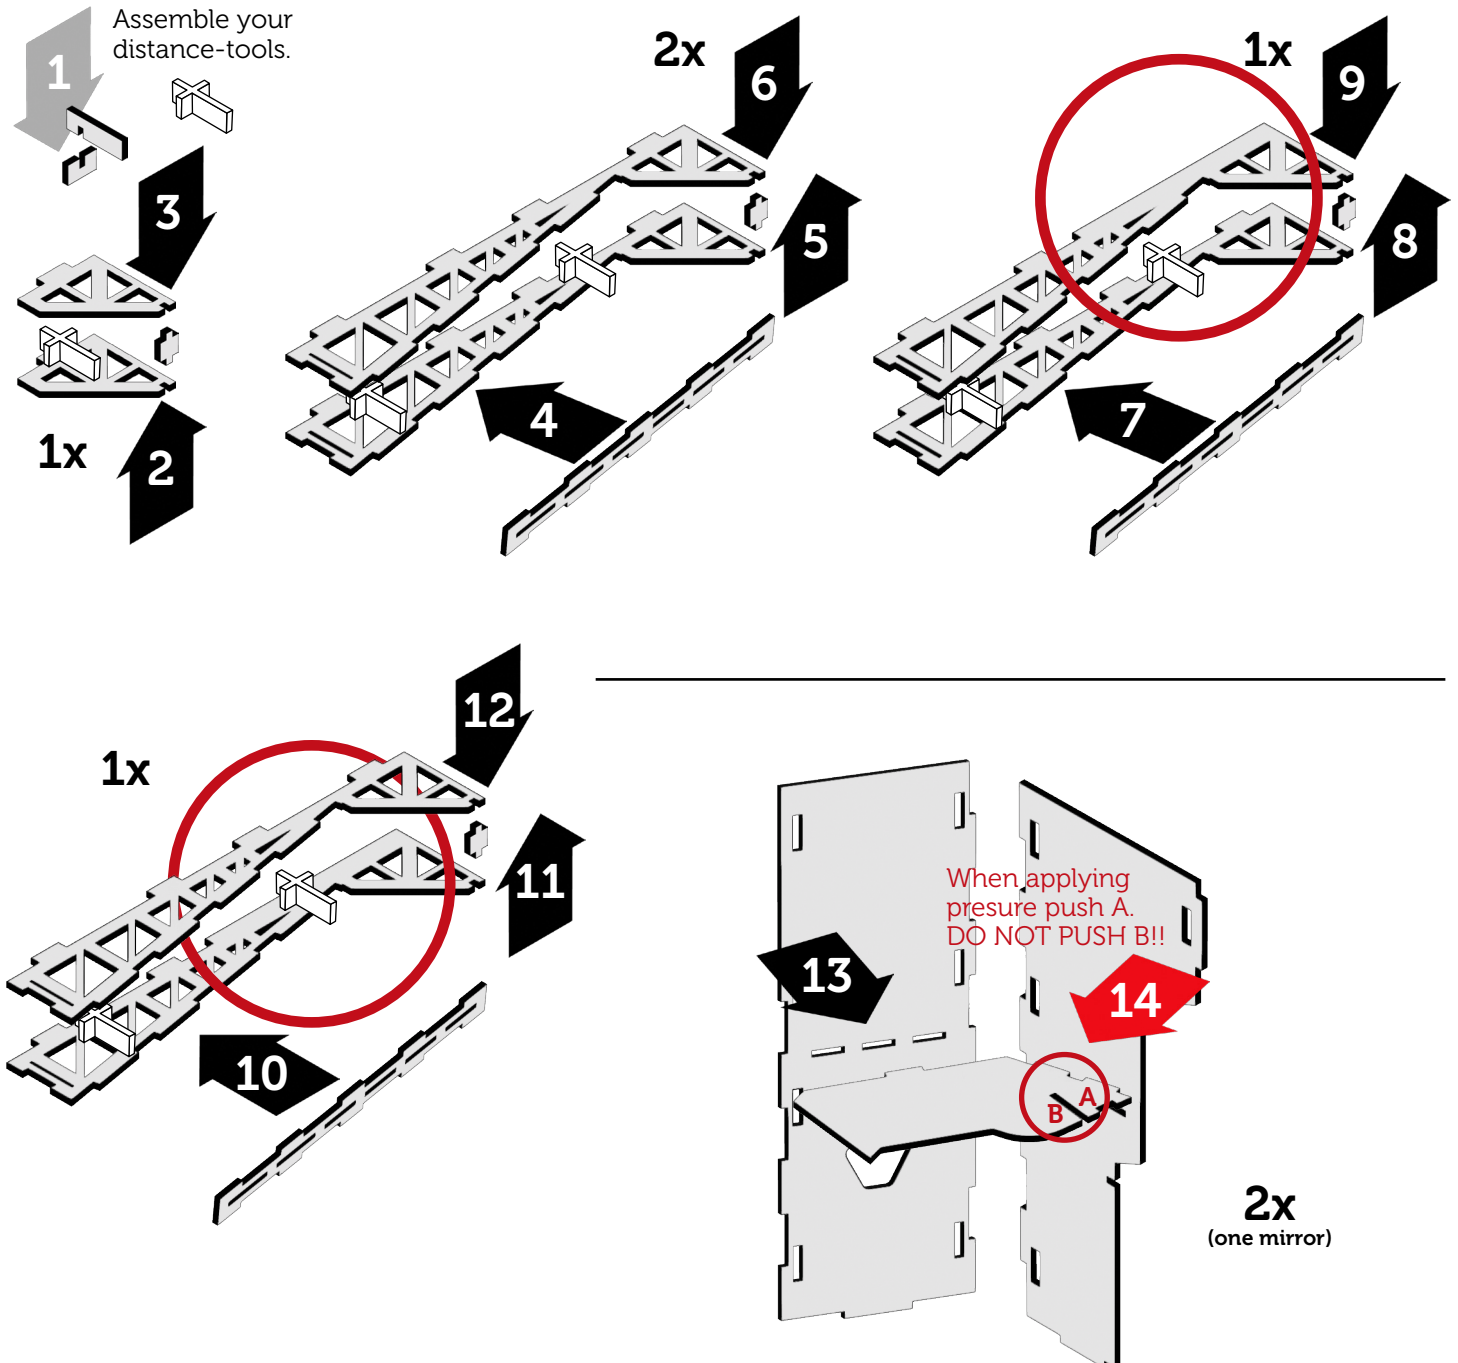

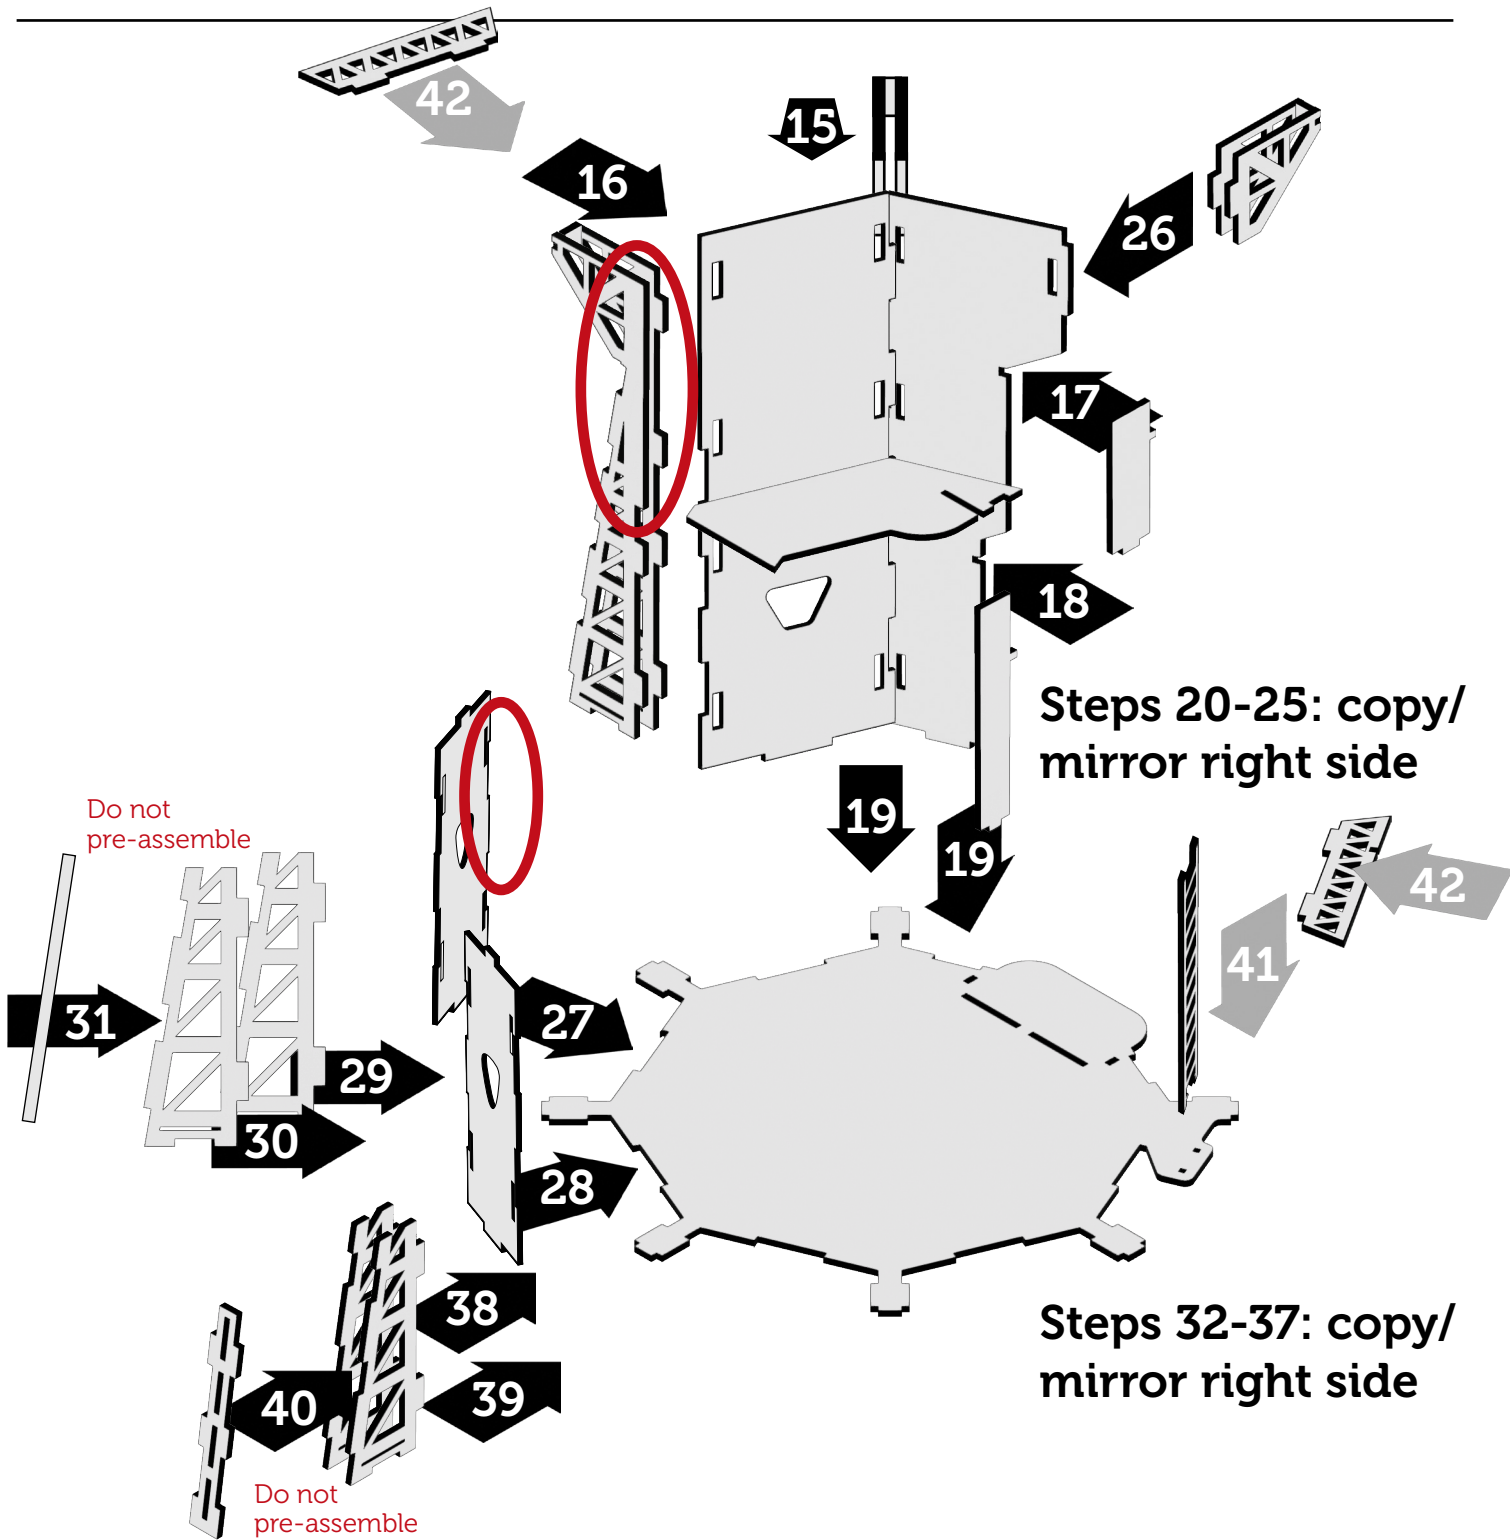

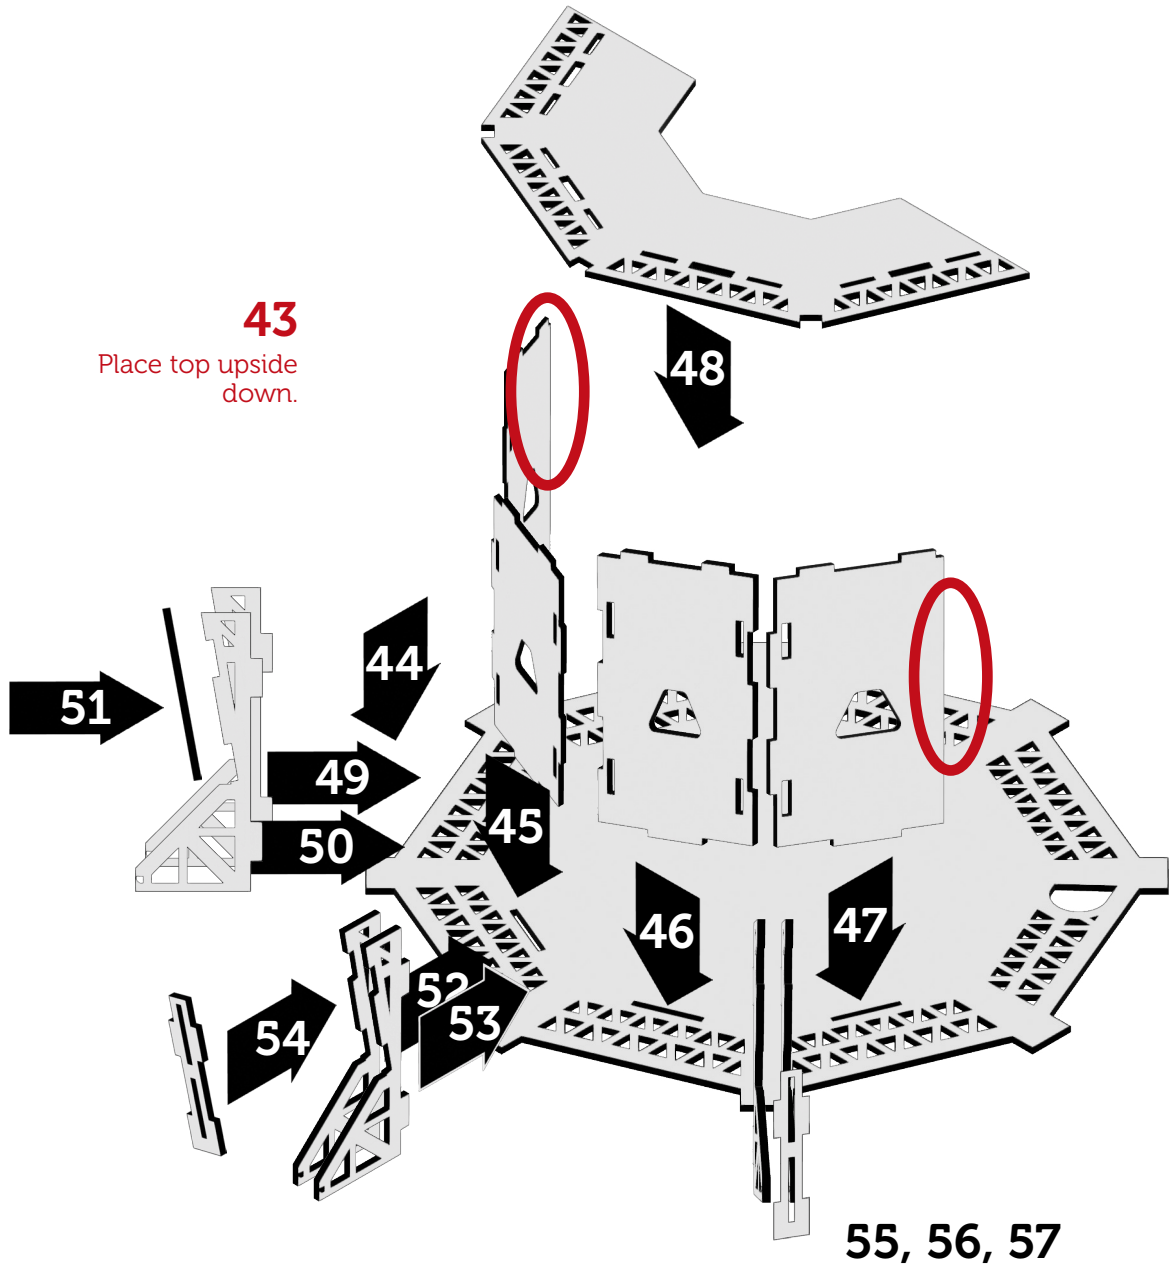

2x

