

St. Lily

MONTELENA COLLECTION



yugos upholstery



Turquoise 210



Turquoise 210 Details




Oyster 140



Oyster 140 Details




Mustard 050

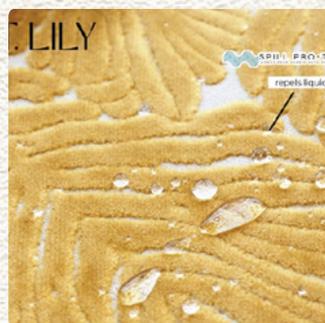

Mustard 050 Details



Smoke 160

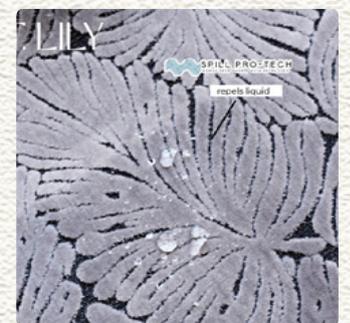

Smoke 160 Details

FABRICS CARE INSTRUCTIONS



yugos upholstery

DO / LAKUKAN

- Vacuum regularly to remove dust and dirt.
Vakum secara rutin untuk mengangkat debu dan kotoran.
- Clean spills immediately.
Segera bersihkan bila terkena cairan.
- Blot, don't rub.
Tepuk lembut dengan kain bersih, jangan digosok.
- Use mild water-based detergent.
Gunakan deterjen lembut berbahan dasar air.
- Test cleaner on a hidden area first.
Uji pembersih pada area tersembunyi terlebih dahulu.
- Use a soft cloth, brush, or sponge with gentle motion.
Gunakan kain, sikat, atau spons lembut secara perlahan.
- Keep away from direct sunlight and heat sources.
Jauhkan dari sinar matahari dan sumber panas langsung.

FABRICS CARE INSTRUCTIONS



yugos upholstery

DONT'S / JANGAN LAKUKAN

- Do not use hot water.
Jangan gunakan air panas.
- Do not use bleach or harsh chemicals.
Jangan gunakan pemutih atau bahan kimia keras.
- Do not scrub aggressively.
Jangan digosok terlalu keras.
- Do not oversaturate with liquid.
Jangan gunakan cairan pembersih berlebihan.



TECHNICAL SPECIFICATION:

COMPOSITION (AATCCC 20/ 20 A)	POLYESTER 50.58% ACRYLIC 49.42%
WEIGHT (gr/m2)	477
WIDTH (cm)	144
TENSILE STRENGTH (EN ISO 13934 - 1)	WARP : 2,000 N WEFT : 2,100 N
TEAR STRENGTH (EN ISO 13937 - 2)	WARP : 100 N WEFT : 110 N
SEAM SLIPPAGE (prEN ISO 13932 - 2)	WARP : 4 MM WEFT : 4 MM
ABRASION (BS EN 14465:2003 Annex A)	18.000 RUBS
COLOR FASTNESS (Rubbing) (EN ISO 105 - X 12)	DRY & WET: 4-5 GRADE
COLOR FASTNESS (LIGHT) (ISO 105 : B02)	5 GRADE
WATER REPELLENCY : Spray Test (AATCC Test Method 22-2005)	80
FLAMMABILITY TEST (BS EN 1021 - 1 : 2014) Smouldering cigarette (Test in Combination with UBM Foam 32kg/m ²)	PASS

ST. LILY

MODERN CLASSIC VELVET A TOUCH OF POSH

 SPILL PRO-TECH
WORRY FREE FABRIC WITH EXTRA LIFE