



pulsar
NS200

pulsar
AS200

pulsar
NS200



Mobil Super
4T Ultra

www.auteco.com.co
Línea gratuita nacional: 018000 520090



auteco

IRC *LLANTAS* *TECNOLOGÍA JAPONESA*



**Los Expertos en motos
las usan y recomiendan:**

 **BAJAJ**
Distinctly Ahead

 **auteco**
www.auteco.com.co

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
PULSAR 200 NS, PULSAR AS 200, PULSAR RS 200	DELANTERA	100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18	10020077
		100/80-17		RX01	PISTERA	100/80-17-RX01-TL	10003160
		110/70-17		RX01	PISTERA	41070-1117-RX01/18	10020095
	TRASERA	130/70-17	IRC	RX01	PISTERA	41070-1317-RX01/18	10020115
PULSAR 220	DELANTERA	90/90X17	IRC	NF45	PISTERA TUBE LESS	41070-9017-NF45/18	10020217
				NF52TL	PISTERA TUBE LESS	90/90-17-NF52-TL	10029297
				NF42	PISTERA TUBE LESS	41070-9017-NF42/18	10020214
				NF46	PISTERA TUBE LESS	41070-9017-NF46/18	10020220
	TRASERA	110/70-17	IRC	RX01	PISTERA TUBE LESS	41070-1117-RX01/18	10020095
		130/70-17		RX01	PISTERA TUBE LESS	41070-1317-RX01/18	10020115
AVENGER 220	DELANTERA	120/80X17	IRC	NR57TL	PISTERA TUBE LESS	120/80-17-NR57-TL	10007401
	TRASERA	90/90X17		NF45	PISTERA	41070-9017-NF45/18	10020217
PULSAR 200, PULSAR 180 UG	DELANTERA	130/90X15	IRC	NR66	SPORT	130/90-15-NR66-TT	10008722
		2.75X17		NF53	PISTERA	41070-2717-NR53/18	10020143
		90/80X17		NR73	PISTERA	90/80-17-NR73-TT	10029270
		90/90X17		NF53	PISTERA	41070-9017-NF53/18	10020223
		100/80-17		NR73	PISTERA	41070-1017-NR73/18	10020077
		110/70-17		RX01	PISTERA	41070-1117-RX01/18	10020095
	TRASERA	130/70-17	IRC	RX01	PISTERA	41070-1317-RX01/18	10020115

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
PULSAR 135	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18	10020143
		90/80-17		NR73TT	PISTERA	90/80-17-NR73-TT	10029270
	TRASERA	110/80-17	IRC	NR53	PISTERA	41070-1117-NR53/18	10020089
		100/80X17		NR64	PISTERA	41070-1117-NR64/18	10020092
PULSAR 150	DELANTERA	90/90-17	IRC	NR73	PISTERA	41070-1017-NR73/18	10020077
	TRASERA	110/80-17		NF53	PISTERA TUBE LESS	90/90-17-NF53-TL	10029301
PULSAR NS 150, PULSAR AS 150	DELANTERA	90/80-17	IRC	NR48TL	PISTERA TUBE LESS	110/80-17-NR48-TL	10003355
	TRASERA	110/80-17		NR77UZ	PISTERA	90/80-17-NR77UZ-TL	10029272
PULSAR 180 (CLASSIC, DTS-i)	DELANTERA	2.75X18	IRC	NR48TL	PISTERA	110/80-17-NR48-TL	10003355
				NR21	SPORT	41070-2718-NR21/18	10020146
	TRASERA	3.00X18	IRC	NR53	PISTERA	41070-2718-NR53/18	10020149
				GP1	TRIAL ROMBO	41070-3018-GP1/18	10020171
DISCOVER 125 ST DISCOVER 125 DISCOVER 100 DISCOVER 135 KS/ES DISCOVER DTSI PULSAR 180 DTS-i TEC,BLACK, PULSAR II	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18	10020143
		90/80-17		NR73TT	PISTERA	90/80-17-NR73-TT	10029270
	TRASERA	3.00X17	IRC	GP1	TRIAL ROMBO	41070-3017-GP1/18	10020163
				NR1	SPORT	41070-3017-NR1/18	10020166
		100/80-17		NR73	PISTERA	41070-1017-NR73/18	10020077
		80/90-17		NR78YL	PISTERA	80/90-17-NR78Y-TT	10027758

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
DISCOVER 100M, DISCOVER 110	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	90/80-17-NR73-TT	10029270
	TRASERA	100/80X17		NR73	PISTERA	100/80-17-NR73-TT	10020077
DISCOVER 150ST-F	DELANTERA	100/80-17	IRC	NR73S	PISTERA	100/80-17-NR73S-TL	10003158
	TRASERA	80/90-17		NR73	PISTERA	80/90-17-NR73S-TL	10027755
PLATINO 125 5S, PLATINO 125, PLATINO CT, PLATINO 100 SPORT, PLATINO 110, XCD 125	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	90/80-17-NR73-TT	10029270
		2.75X17		NR53	PISTERA	41070-2717-NR53/18	10020143
				GP1	TRIAL ROMBO	41070-2717-GP1/18	10020137
	TRASERA	100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18	10020077
		3.00X17		GP1	TRIAL ROMBO	41070-3017-GP1/18	10020163
				NR1	SPORT	41070-3017-NR1/18	10020166
BOXER CON RIN 17" BOXER BM 150, BOXER CT 100, BOXER BM 100	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	41070-9017-NR73TT/18	10029270
		90/90-17		NR53	PISTERA	41070-2717-NR53/18	10020143
		2.75X17		NR53	PISTERA	41070-2717-NR53/18	10020143
				GP1	TRIAL ROMBO	41070-2717-GP1/18	10020137
	TRASERA	100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18	10020077
		3.00X17		GP1	TRIAL ROMBO	41070-3017-GP1/18	10020163
				NR1	SPORT	41070-3017-NR1/18	10020166
BOXER BM 100 CLASSIC ES	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18	10020143
	TRASERA	3.00X17		NR1	SPORT	41070-3017-NR1/18	10020166
BOXER CON RIN 18" 4T, UG, K-TEC	DELANTERA	2.50X18		NR53	PISTERA	41070-2518-NR53/18	10020134
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18	10020171
				NR53	PISTERA	41070-3018-NR53/18	10020174

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
BOXER CON RIN 18" (S1D) CALIBER 115 WIND 125	DELANTERA	2.75X18	IRC	NR21	SPORT	41070-2718-NR21/18	10020146
				NR53	PISTERA	41070-2718-NR53/18	10020149
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18	10020171
				NR53	PISTERA	41070-3018-NR53/18	10020174
AVANTI	DELANTERA	2.50X17	IRC	TR1	TRIAL ROMBO	41070-2517-TR1/18	10020132
	TRASERA	2.75X17	IRC	NR2	SPORT	41070-2717-NR2/18	10020140
				NR53	PISTERA	41070-2717-NR53/18	10020143
				GP1	TRIAL ROMBO	41070-2717-GP1/18	10020137
PLUS, CLASSIC, LEGEND	DELANTERA	3.50X10	IRC	MB-27	SPORT	41070-3510-27/18	10020183
	TRASERA						

Advierta lo que le dicen las llantas mientras conduce:

- Si su respuesta a la dirección es lenta o si en las curvas y en el frenado la respuesta es pesada, es muy probable que sus llantas estén desinfladas.
- Vibración o tambaleo durante la conducción, puede significar que la presión en las llantas es mayor a la recomendada, o que ha ocurrido un daño en la llanta y la falla es inminente.
- La llanta puede vibrar a ciertas velocidades debido al desbalanceo, en este caso su desgaste será muy acelerado.

**RECUERDE SIEMPRE REVISAR LA PRESIÓN DE AIRE EN SUS LLANTAS
ANTES DE COMENZAR A RODAR**

PREFACIO

Es nuestro placer presentarles a ustedes el Catálogo de Partes.

Este Catálogo ha sido especialmente diseñado para ayudarle en la selección de las partes correctas con el fin de mantener el vehículo en las mejores condiciones.

Los repuestos originales están sujetos a un exigente estándar de control de calidad, por lo tanto es necesario que usted sólo use repuestos originales.

En nuestro constante esfuerzo para mejorar la eficiencia y desempeño de su vehículo, las especificaciones, diagramas y número de partes pueden cambiar sin previo aviso. Consecuentemente las descripciones de los repuestos en este Catálogo pueden no ser las finales y definitivas.

Las alteraciones y modificaciones que ocurren en la impresión de este Catálogo, serán informadas a nuestra red, a través de circulares de Servicio o en nuestra página **web: www.auteco.com.co** accediendo al link **repuestos**. Es requisito que usted actualice su Catálogo y haga las correcciones necesarias, una vez reciba dichas circulares. Lo anterior le asegurará un rápido y adecuado despacho de sus partes, pues las órdenes están siendo diligenciadas con las referencias más actualizadas.

En caso de necesitar asistencia técnica, comunicarse con el Distribuidor Autorizado o llamar al Departamento de Servicios Auteco.



DIRECTORIO TELEFÓNICO - UN REPUESTOS Y ACCESORIOS

ÁREA COMERCIAL Y ASESORES DE VENTAS

NOMBRE	CARGO	ZONA	CELULAR	CORREO ELECTRÓNICO
Alvaro Enrique Carreño Gomez	ASESOR COMERCIAL	Magdalena Medio	314 701 17 85	acarreno@auteco.com.co
Andres Julian Giraldo Osorio	ASESOR COMERCIAL	Risaralda y Armenia	301 375 43 57	ajgiraldo@auteco.com.co
Carlos Humberto Tobon Restrepo	ASESOR COMERCIAL	Area Metropolitana Norte	310 447 36 11	ctobon@auteco.com.co
Carlos Javier Uribe Duran	ASESOR COMERCIAL	Cucuta	321 799 79 28	cjuribe@auteco.com.co
Carlos Mario Salazar	ASESOR COMERCIAL	Sucre	310 414 88 45	csalazar@auteco.com.co
David Andres Riaño Vidales	ASESOR COMERCIAL	Zona Norte Bogota	321 803 29 57	driano@auteco.com.co
Eliecer Zamora Vasquez	ASESOR COMERCIAL	Cali y Cauca	313 584 47 13	ezamora@auteco.com.co
Elkin Gallego Rios	ASESOR COMERCIAL	Antioquia Sur y Chocó	310 436 25 98	egallego@auteco.com.co
Gustavo Adolfo Cantillo Castillo	ASESOR COMERCIAL	Atlántico	313 584 21 93	gcantillo@auteco.com.co
Hackerman Jose Agamez Duque	ASESOR COMERCIAL	Sucre	321 701 19 23	hagamez@auteco.com.co
Hector Emilio Moncayo Rodriguez	ASESOR COMERCIAL	Nariño y Putumayo	321 799 79 48	hmoncayo@auteco.com.co
Hernan Alonso Pedraza Garcia	ASESOR COMERCIAL	Pueblos de Cundinamarca	314 812 64 53	hpedraza@auteco.com.co
Ivano Alexy Villota Arteaga	ASESOR COMERCIAL	Sur del Huila y Caqueta	313 767 78 43	ivillota@auteco.com.co
Jaime Alfonso Villalba Olier	ASESOR COMERCIAL	Bolivar	313 584 72 62	jvillalba@auteco.com.co
John Jairo Lopez Chavarriaga	ASESOR COMERCIAL	Antioquia Norte y Uraba	310 444 22 15	jlopez@auteco.com.co
Julio Mario Monterroza Gomez	ASESOR COMERCIAL	Magdalena	313 585 60 28	jmonterroza@auteco.com.co
Karen Lorena Candanoza Jurado	ASESOR COMERCIAL	Zona Norte Bogota	313 585 35 61	kcandanoza@auteco.com.co
Marlon Santiago Blandon Vargas	ASESOR COMERCIAL	Cordoba y Bajo Cauca	310 373 90 19	msblandon@auteco.com.co
Miguel Angel Guerrero Estupiñan	ASESOR COMERCIAL	Norte del Valle y Buenaventura	314 772 07 98	mguerrero@auteco.com.co
Miguel Arturo Osorio Ruiz	ASESOR COMERCIAL	Cesar y Guajira	321 799 78 87	mosorio@auteco.com.co
Miller Fabian Acosta	ASESOR COMERCIAL	Zona Centro Bogota	313 585 98 37	macosta@auteco.com.co
Milton Cesar Olaya Carvajal	ASESOR COMERCIAL	Neiva y Norte Huila	310 436 27 42	molaya@auteco.com.co
Nestor Raul Adarve Rendon	ASESOR COMERCIAL	Area Metropolitana Sur	310 436 26 89	nadarve@auteco.com.co
Rubén Dario Campo Cárdena	ASESOR COMERCIAL	Caldas y Norte de Risaralda	321 799 79 06	rcampo@auteco.com.co
Uberney Ortiz Velez	ASESOR COMERCIAL	Casanare, Vichada, Boyaca	313 672 73 37	uortiz@auteco.com.co
William de Jesus Gutierrez Herrera	ASESOR COMERCIAL	Meta	310 407 40 72	wgutierrez@auteco.com.co
Wilson Sabogal Miranda	ASESOR COMERCIAL	Bucaramanga y Area Metropolitana	300 542 85 48	wsabogal@auteco.com.co
Herica Linares Riaño	ASESOR COMERCIAL BAJAJ	Zona Sur Bogota	301 247 71 10	hlinares@auteco.com.co
Jorge Mario Gil Rios	ASESOR COMERCIAL BAJAJ	Medellin	313 672 73 53	jgil@auteco.com.co
Jorge Mario Maya Velez	ASESOR COMERCIAL BAJAJ	Medellin	312 258 93 84	jmayaya@auteco.com.co
Meryce Alejandra Cortazar Pachon	ASESOR COMERCIAL BAJAJ	Cali	320 732 97 60	mcortazar@auteco.com.co
Pilar Katherine Garcia Tique	ASESOR COMERCIAL BAJAJ	Zona Sur Bogota	300 541 93 34	pgarcia@auteco.com.co
Raul de Jesus Foronda	ASESOR COMERCIAL BAJAJ	Santa Marta	312 850 45 74	rforonda@auteco.com.co
Richard Andres Muñoz Montenegro	ASESOR COMERCIAL BAJAJ	Popayan	321 799 79 26	rmunoz@auteco.com.co
Yeedsander Guzman Garcia	ASESOR COMERCIAL BAJAJ	Barranquilla	300 542 64 59	yguzman@auteco.com.co
German Alfredo Vivas Ortiz	ASESOR COMERCIAL BOUTIQUE	Bogota	321 799 79 30	gvivas@auteco.com.co
Erwin Alexis Carlosama Tobar	ASESOR COMERCIAL BOUTIQUE	Cali	321 640 49 72	ecarlosama@auteco.com.co
Gonzalo Adolfo Saldarriaga Sepulveda	ASESOR COMERCIAL BOUTIQUE	Medellin	310 406 88 74	gsaldarriaga@auteco.com.co
Franz Caballero Castro	DESARROLLADOR UN RPTOS Y ACCS	BARRANQUILLA	301 375 25 32	fcaballero@auteco.com.co
Gustavo Adolfo Corrales Correa	DESARROLLADOR UN RPTOS Y ACCS	CALI	300 634 67 59	gcorrales@auteco.com.co
Jhon Jahiver Salamanca Latorre	DESARROLLADOR UN RPTOS Y ACCS	BOGOTA	300 542 87 56	jsalamanca@auteco.com.co
Gilberto Eduardo Ocampo	GERENTE REGIONAL ZONA SUR	GERENTE REGIONAL ZONA SUR	311 382 85 14	ecampo@auteco.com.co
Jhon Alexander Estrada Bello	GERENTE REGIONAL ZONA NORTE	GERENTE REGIONAL ZONA NORTE	311 737 37 48	jestrada@auteco.com.co
Jose Giovanni Suarez Martinez	GERENTE REGIONAL ZONA CENTRO	GERENTE REGIONAL ZONA CENTRO	320 766 49 45	jsuarez@auteco.com.co
Juan Guillermo Ospina Rodriguez	GERENTE COMERCIAL BAJAJ		313 767 78 36	jgospina@auteco.com.co
Laura Ocampo	COORDINADORA ALTA GAMA		320 682 09 64	locampo@auteco.com.co

SERVICIO AL CLIENTE

LÍNEA ÚNICA DE SERVICIO AL CLIENTE CANAL

(4) 444 81 90 

UNIDAD DE REPUESTOS y ACCESORIOS • FAX OFICINAS: 373 03 75

ATENCIÓN EN:	NOMBRE	E-MAIL	TELÉFONO	FAX
SERVICIO A CONCESIONARIO Y MAYORISTAS	JHONATHAN ZAPATA	servicioadistribuidoresymayoristas@auteco.com.co	(4) 444 81 90 OPCION (2)	
SERVICIO PAGO ANTICIPADO	DORIS CARMONA	serviciopagoanticipadorptos@auteco.com.co		(4) 373 83 94
COORDINADOR SERVICIO POSTVENTA	LUIS G. RODRIGUEZ	lrodriguez@auteco.com.co		
DEVOLUCIONES - RECLAMOS	JULIAN RODRIGUEZ	devolucionesrptos@auteco.com.co		
MOTO FUERA DE RUTA	JONI HOLGUIN	motofueraderuta@auteco.com.co		
LÍNEA DE ATENCIÓN AL CLIENTE				
POSCONSUMO BATERIAS	YUDY DUQUE	yduque@auteco.com.co	3004243097	(4) 277 5117
CARTERA		cartera@auteco.com.co		(4) 306 81 54
VENTA MOTOS		pedidosmotos@auteco.com.co		(4) 372 62 95

AUTOTECNICA COLOMBIANA S.A.S (AUTECO S.A.S) SEDE PRINCIPAL Cra. 42 N° 45-77 Itagüí Ant. - PBX: (4)306 81 81
Atención a clientes finales: LÍNEA GRATUITA NACIONAL - 01 8000 52 00 90

ÍNDICE

FIGURA Nº	DESCRIPCIÓN	PÁG. Nº	FIGURA Nº	DESCRIPCIÓN	PÁG. Nº
1	TAPA CULATA	1	34	CALIPER DELANTERO	42
2	SISTEMA SAI	2	35	RUEDA TRASERA	43
3	CULATA	3	36	BOMBA FRENO TRASERO	44 - 45
4	VÁLVULAS	4	37	PEDAL FRENO	46
5	EJE DE LEVAS / TENSOR CADENILLA	5	38	MANUBRIO	47 - 48
6	CILINDRO / PISTÓN	6	39	SUSPENSIÓN DELANTERA	49 - 50
7	CIGÜEÑAL	7	40	CUBIERTAS RADIADOR	51
8	TRANSMISIÓN	8 - 9	41	COMPLEMENTOS CUBIERTAS TANQUE (PULSAR 200NS-NS200 BS-IV)	52
9	SELECTOR DE CAMBIOS	10	42	COMPLEMENTOS CUBIERTAS TANQUE GASOLINA (PULSAR AS200)	53
10	EJE DE CAMBIOS	11	43	TANQUE DE GASOLINA / GRIFO GASOLINA	54 - 55
11	CARCASA DERECHA	12 - 13	44	COMPLEMENTOS TAPAS LATERALES / CUBIERTA SILLÍN	56
12	CARCASA IZQUIERDA	14 - 15	45	VELOCÍMETRO	57
13	BOMBA DE AGUA / PIÑÓN BALANCEADOR	16	46	CABLES	58
14	BOMBA DE ACEITE	17	47	GUARDACADENA / GUARDABARRO TRASERO (PULSAR 200NS-NS200 BS-IV)	59
15	RADIADOR	18 - 19	48	FAROLA / CARENAGE (PULSAR 200NS - NS200 BS-IV)	60 - 61
16	CUBIERTA CLUTCH	20 - 21	49	FAROLA / CARENAGE (PULSAR AS200)	62
17	CUBIERTA VOLANTE	22	50	DIRECCIONALES	63
18	CLUTCH	23	51	STOP (PULSAR 200NS - NS200 BS-IV)	64
19	CARBURADOR (PULSAR NS200 - PULSAR AS200)	24	52	STOP / GUARDABARRO (PULSAR AS200)	65
19A	CARBURADOR (PULSAR NS200 BS-IV)	25	53	EQUIPO ELÉCTRICO	66 - 67
20	FILTRO DE AIRE	26	54	SOPORTE CUBIERTAS MOTOR (NS200 BS-IV)	68
21	SILENCIADOR	27	55	HERRAMIENTAS / ACCESORIOS	69
22	MOTOR DE ARRANQUE / PLATO DE BOBINAS	28	56	CUBIERTAS (PULSAR 200NS - NS200 BS-IV)	70
23	C.D.I. / BOBINAS	29	57	CUBIERTAS (PULSAR 200AS)	71
24	SILLÍN	30	58	CALCOMANÍAS (PULSAR 200NS)	72
25	SOPORTES DE MOTOR	31	59	CALCOMANÍAS (PULSAR AS200)	73
26	CHASIS	32	60	CALCOMANÍAS Y ACCESORIOS (PULSAR 200NS PRO - NS200 BS-IV PRO 1ª EDICIÓN)	74 - 75
27	BRAZO OSCILANTE / AMORTIGUADOR	33	61	CALCOMANÍAS Y ACCESORIOS PULSAR MANIA (PULSAR 200NS - NS200 BS-IV)	76 - 78
28	REPOSAPIÉ CONDUCTOR	34 - 35	62	CALCOMANÍAS Y ACCESORIOS COPA PULSAR (PULSAR 200NS - NS200 BS-IV)	79 - 80
29	GUARDABARRO DELANTERO	36 - 37	63	CALCOMANÍAS (PULSAR 200NS BS-IV 1ª EDICIÓN)	81 - 82
30	GATO CENTRAL / GATO LATERAL	38	64	CALCOMANÍAS (PULSAR 200NS BS-IV 2ª EDICIÓN)	83 - 84
31	LLANTAS / RINES	39	65	CALCOMANÍAS (NS200 BS-IV PRO 2ª EDICIÓN)	85
32	RUEDA DELANTERA	40		LISTA DE KITS	86 - 87
33	BOMBA FRENO DELANTERO	41		INDICE DE REFERENCIAS	88 - 96

ÍNDICE DE GRÁFICOS

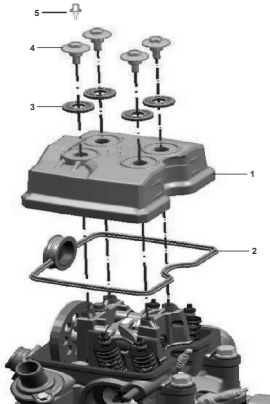


FIGURA N° 1: TAPA CULATA

PÁG. N°.
1

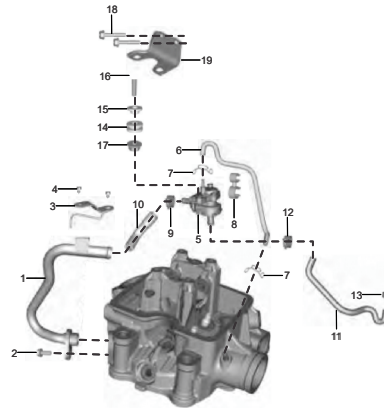


FIGURA N° 2: UNIDAD SAI

PÁG. N°.
2

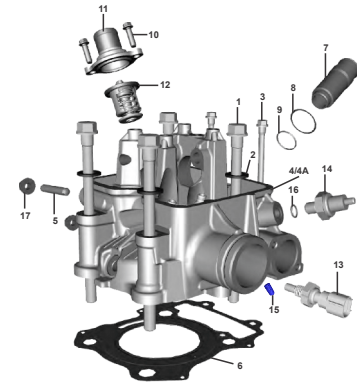


FIGURA N° 3: CULATA

PÁG. N°.
3

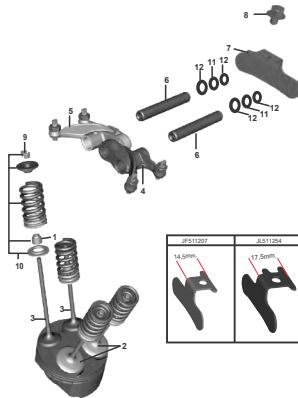


FIGURA N° 4: VÁLVULAS

PÁG. N°.
4

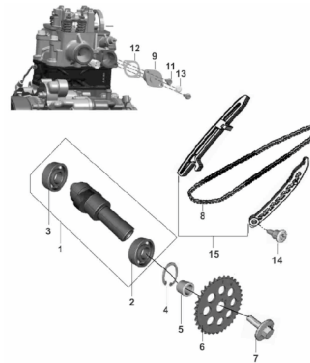


FIGURA N° 5: EJE DE LEVAS /
TENSOR CADENILLA

PÁG. N°.
5

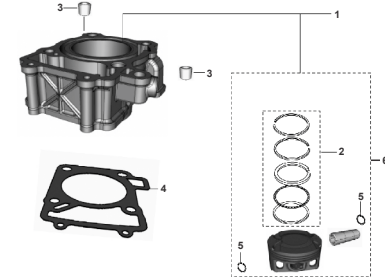
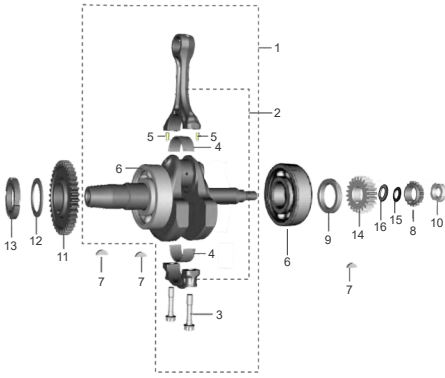
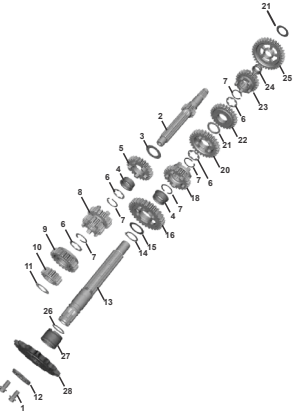
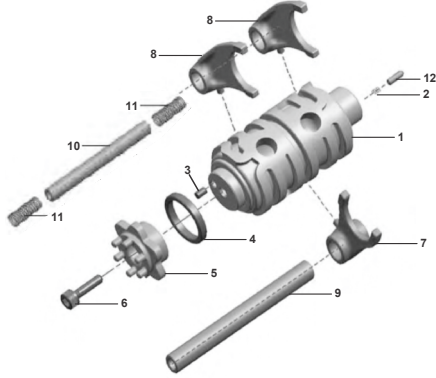
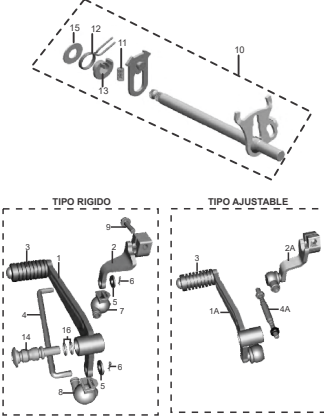
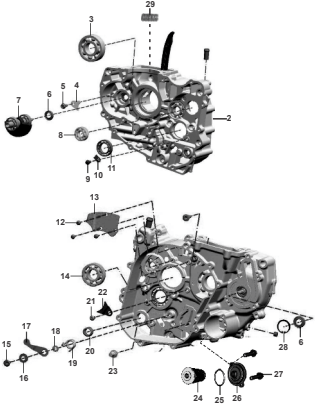
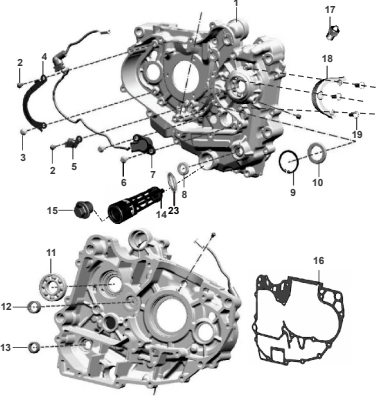


FIGURA N° 6: CILINDRO / PISTÓN

PÁG. N°.
6


ÍNDICE DE GRÁFICOS

	FIGURA N° 7: CIGÜEÑAL	PÁG. N°. 7		FIGURA N° 8: TRANSMISIÓN	PÁG. N°. 8 - 9		FIGURA N° 9: SELECTOR DE CAMBIOS	PÁG. N°. 10
	FIGURA N° 10: EJE DE CAMBIOS	PÁG. N°. 11		FIGURA N° 11: CARCASA DERECHA	PÁG. N°. 12 - 13		FIGURA N° 12: CARCASA IZQUIERDA	PÁG. N°. 14 - 15


An exploded view diagram of a mechanical assembly. The components are numbered as follows: 1 is the main housing or base; 2 is a gear mounted on a shaft; 3 is a small ring or washer; 4 is a pin or screw; 5 is a small cylindrical component; and 6 is a lever or actuator arm. The diagram shows the relative positions and assembly sequence of these parts.

PÁG. N°.


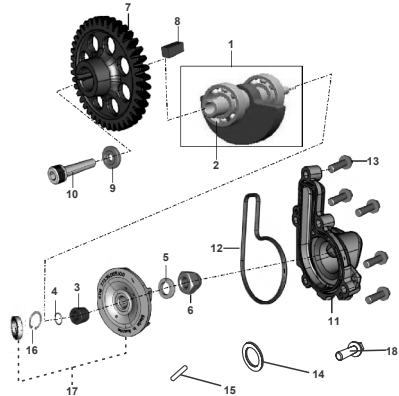
16




PÁG. N°.
17

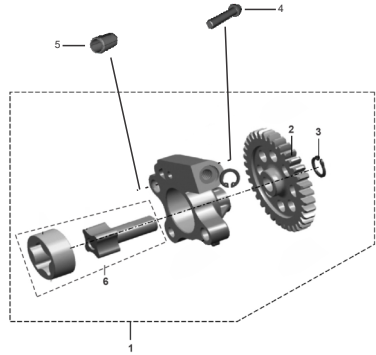


PÁG. N°.
18 - 19

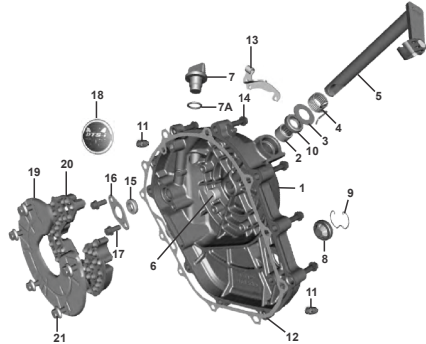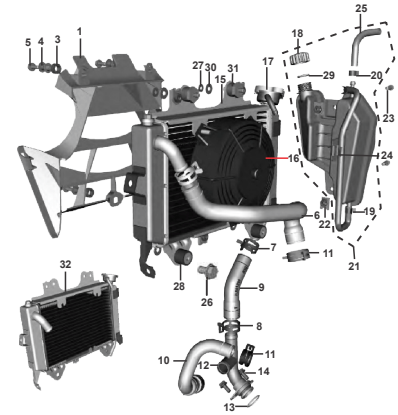

PÁG. N°.
20 - 21

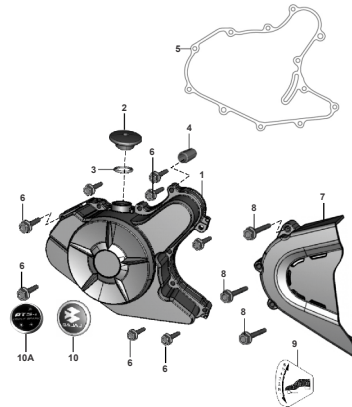


PÁG. N°.
22

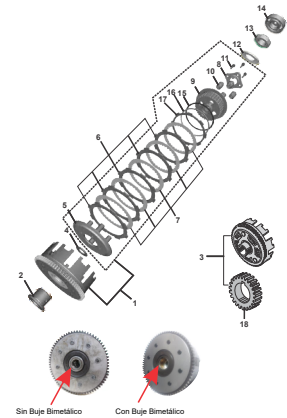


PÁG. N°.
23

ÍNDICE DE GRÁFICOS

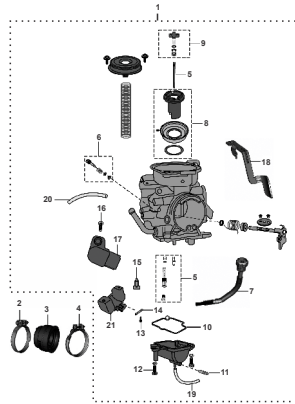

**FIGURA N° 19: CARBURADOR
(PULSAR 200NS - PULSAR AS200)**

**PÁG. N°.
24**

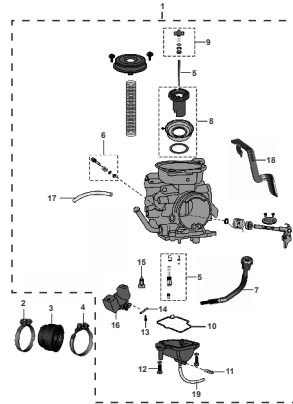

**FIGURA N° 19A: CARBURADOR
(PULSAR NS200 BS-IV)**

**PÁG. N°.
25**

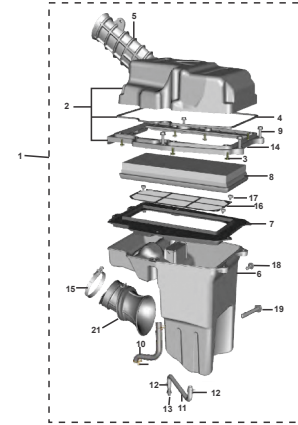


FIGURA N° 20: FILTRO DE AIRE

**PÁG. N°.
26**


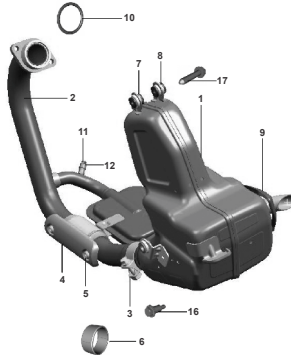


FIGURA N° 21: SILENCIADOR

**PÁG. N°.
27**

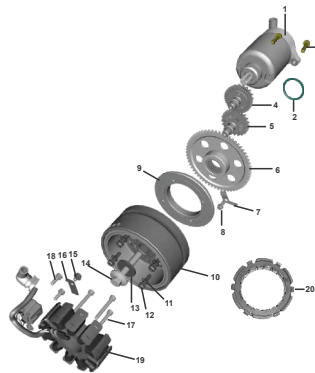

**FIGURA N° 22: MOTOR DE ARRANQUE /
PLATO DE BOBINAS**

**PÁG. N°.
28**

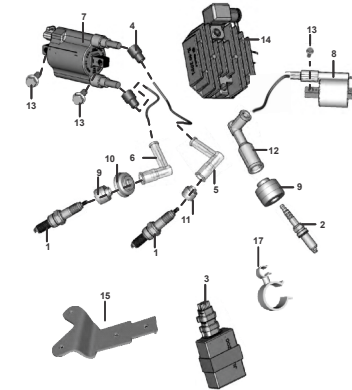


FIGURA N° 23: C.D.I / BOBINAS

**PÁG. N°.
29**

ÍNDICE DE GRÁFICOS

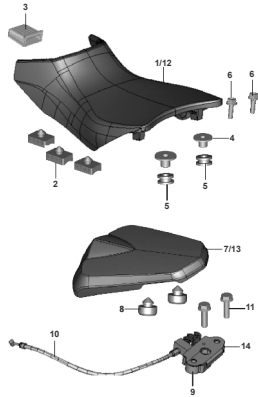


FIGURA N° 24: SILLÍN

PÁG. N°.
30

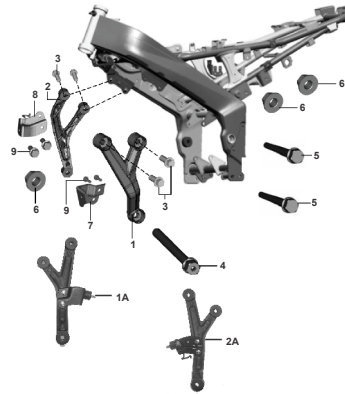


FIGURA N° 25: SOPORTES DE MOTOR

PÁG. N°.
31

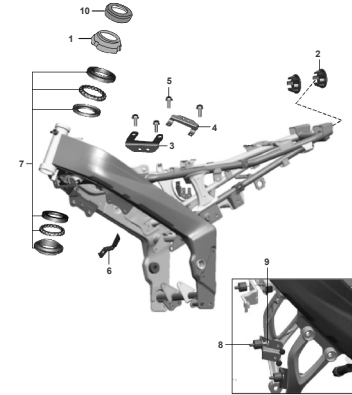


FIGURA N° 26: CHASIS

PÁG. N°.
32

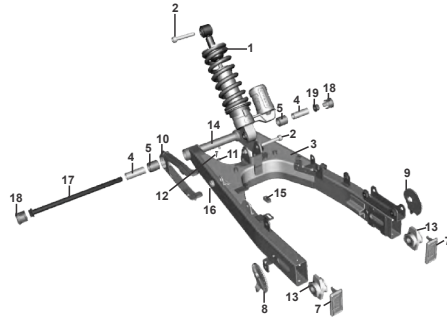


FIGURA N° 27: BRAZO OSCILANTE /
AMORTIGUADOR

PÁG. N°.
33

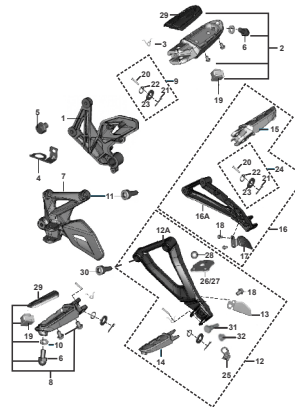


FIGURA N° 28: REPOSAPIÉ CONDUCTOR

PÁG. N°.
34 - 35

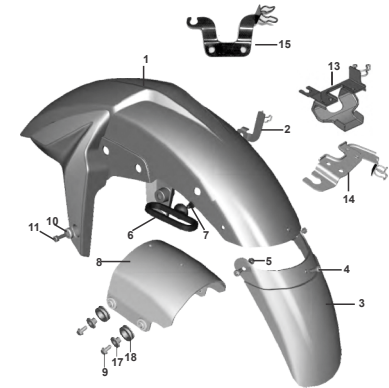


FIGURA N° 29: GUARDABARRO DELANTERO

PÁG. N°.
36 - 37

ÍNDICE DE GRÁFICOS

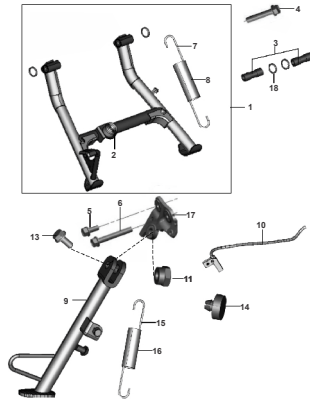


FIGURA N° 30: GATO CENTRAL /
GATO LATERAL

PÁG. N°.
38



FIGURA N° 31: LLANTAS / RINES

PÁG. N°.
39


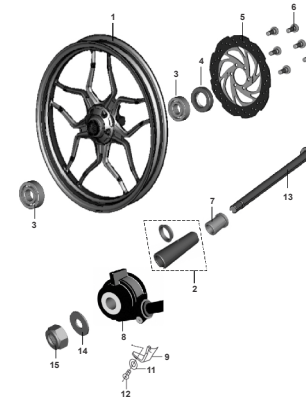


FIGURA N° 32: RUEDA DELANTERA

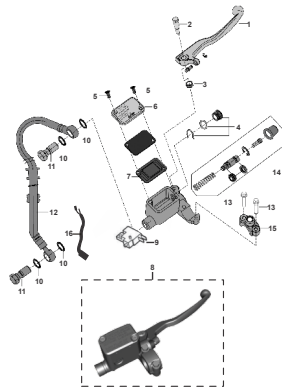PÁG. N°.
40



ÍNDICE DE GRÁFICOS

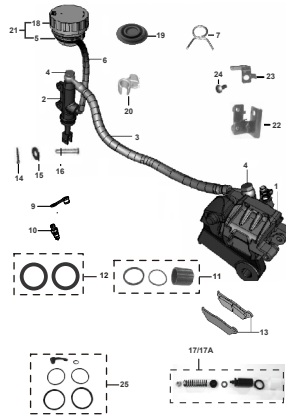


FIGURA N° 36: BOMBA FRENO TRASERO

PÁG. N°.
44 - 45

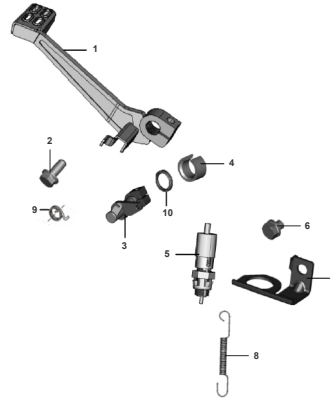


FIGURA N° 37: PEDAL FRENO

PÁG. N°.
46

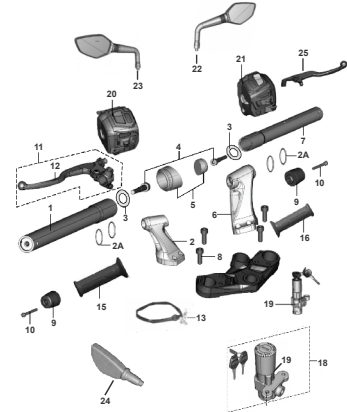


FIGURA N° 38: MANUBRIO

PÁG. N°.
47 - 48

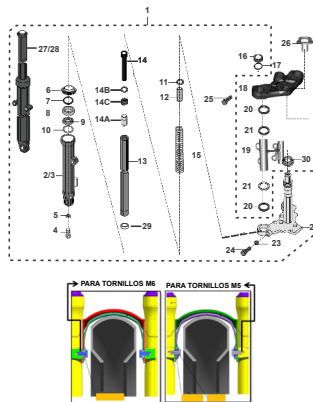


FIGURA N° 39: SUSPENSIÓN DELANTERA

PÁG. N°.
49 - 50

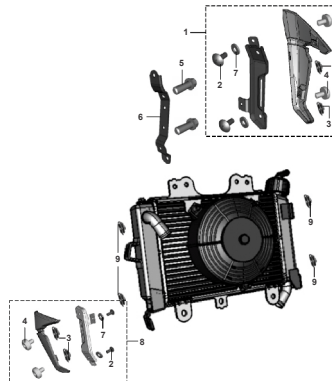
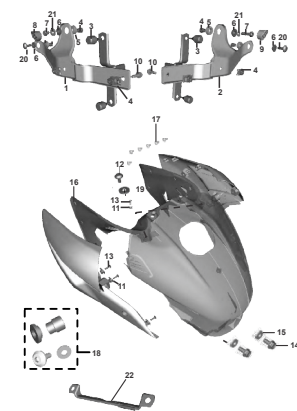


FIGURA N° 40: CUBIERTAS RADIADOR

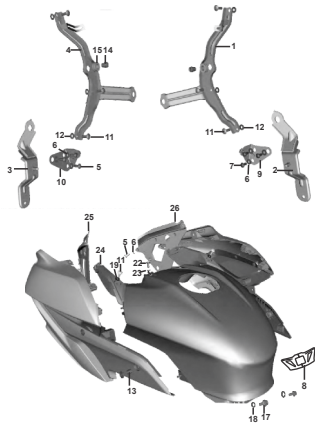
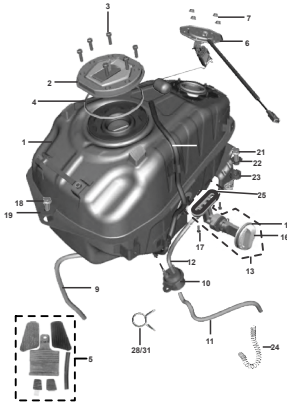
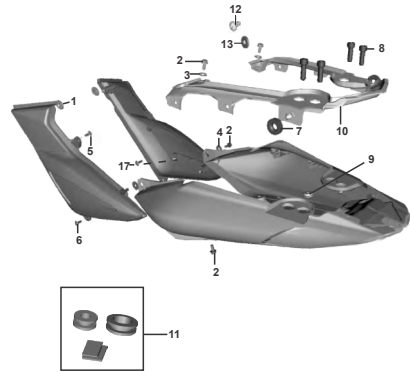
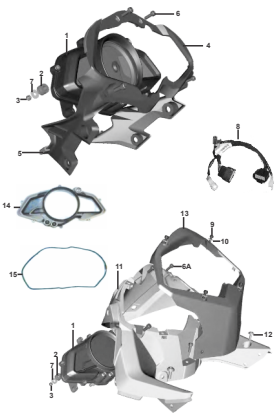
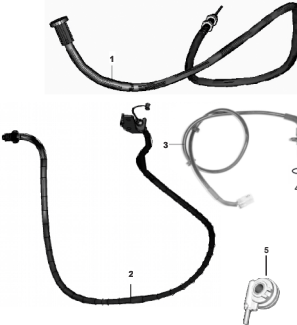
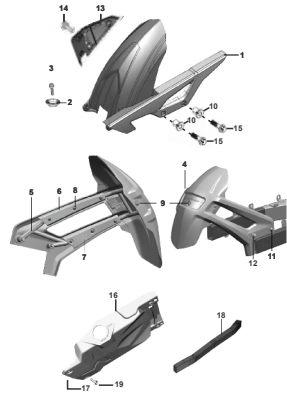
PÁG. N°.
51



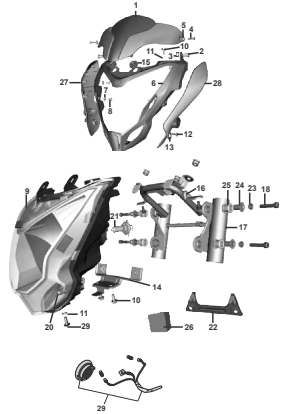
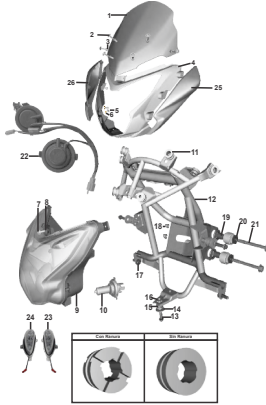
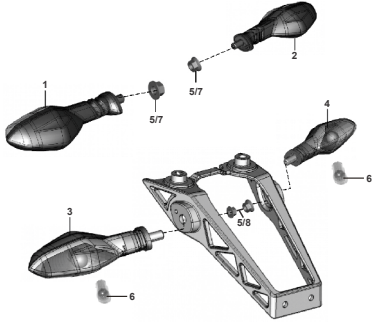
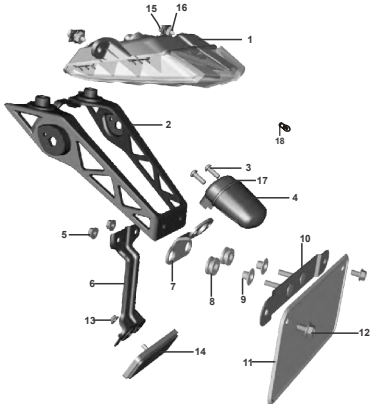
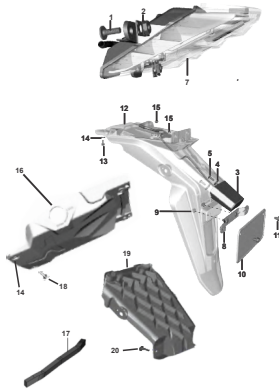
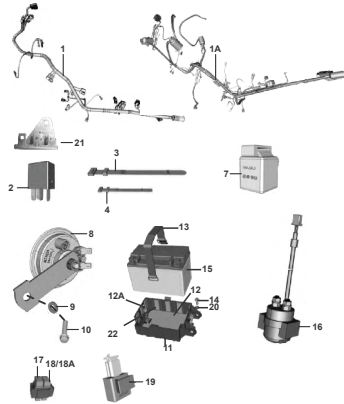
**FIGURA N° 41: COMPLEMENTOS CUBIERTAS
TANQUE GASOLINA (PULSAR NS200-NS200 BS-IV)**

PÁG. N°.
52

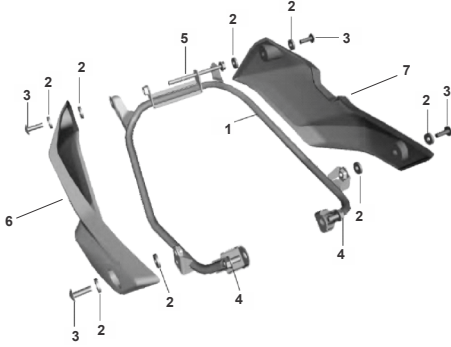
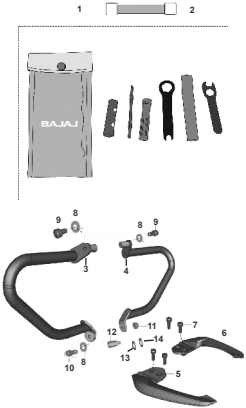
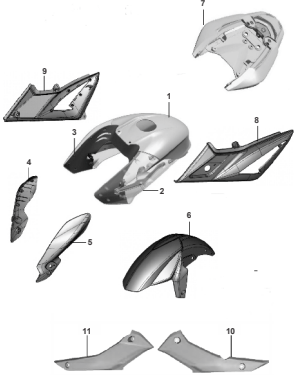
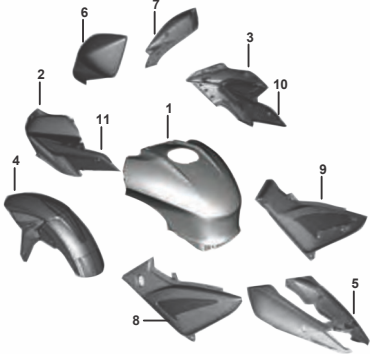
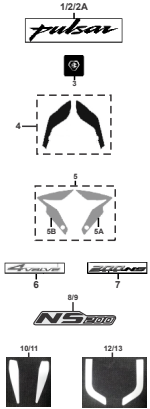
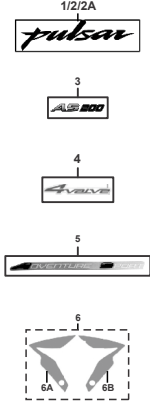
ÍNDICE DE GRÁFICOS

					
FIGURA N° 42: COMPLEMENTOS CUBIERTAS TANQUE GASOLINA (PULSAR AS200)	PÁG. N°. 53	FIGURA N° 43: TANQUE DE GASOLINA / GRIFO GASOLINA	PÁG. N°. 54 - 55	FIGURA N° 44: COMPLEMENTOS TAPAS LATERALES / CUBIERTA SILLÍN	PÁG. N°. 56
					
FIGURA N° 45: VELOCÍMETRO	PÁG. N°. 57	FIGURA N° 46: CABLES	PÁG. N°. 58	FIGURA N° 47: GUARDACADENA / GUARDABARRO TRASERP (PULSAR 200NS-NS200 BS-IV)	PÁG. N°. 59

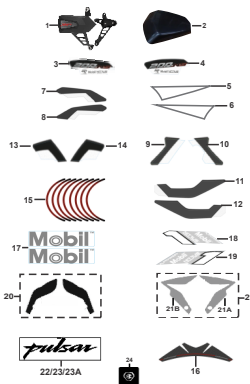
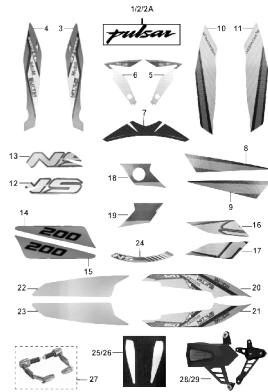
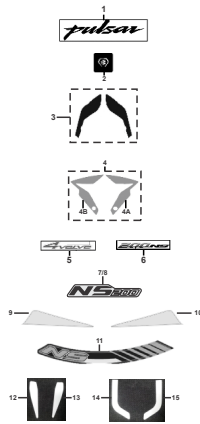
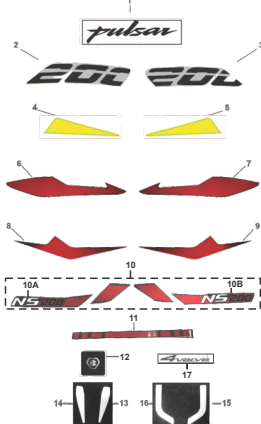
ÍNDICE DE GRÁFICOS

		
FIGURA N° 48: FAROLA / CARENAJE (PULSAR NS200-NS200 BS-IV)	FIGURA N° 49: FAROLA / CARENAJE (PULSAR AS200)	FIGURA N° 50: DIRECCIONALES
		
FIGURA N° 51: STOP (PULSAR NS200-NS200 BS-IV)	FIGURA N° 52: STOP / GUARDABARRO TRASERO (PULSAR AS200)	FIGURA N° 53: EQUIPO ELÉCTRICO

ÍNDICE DE GRÁFICOS

	FIGURA N° 54: SOPORTE CUBIERTAS MOTOR (NS200 BS-IV) PÁG. N°. 68
	FIGURA N° 55: HERRAMIENTAS / ACCESORIOS PÁG. N°. 69
	FIGURA N° 56: CUBIERTAS (PULSAR NS200-NS200 BS-IV) PÁG. N°. 70
	FIGURA N° 57: CUBIERTAS (PULSAR AS200) PÁG. N°. 71
	FIGURA N° 58: CALCOMANÍAS (PULSAR NS200) PÁG. N°. 72
	FIGURA N° 59: CALCOMANÍAS (PULSAR AS200) PÁG. N°. 73

ÍNDICE DE GRÁFICOS

		
FIGURA N° 60: CALCOMANÍAS Y ACCESORIOS (PULSAR 200NS PRO - 200NS BS-IV PRO 1ª EDICIÓN)	FIGURA N° 61: CALCOMANÍAS Y ACCESORIOS PULSARMANIA (PULSAR 200NS - NS200 BS-IV)	FIGURA N° 62: CALCOMANÍAS Y ACCESORIOS COPA PULSAR 200NS (PULSAR 200NS-NS200 BS-IV)
		
FIGURA N° 63: CALCOMANÍAS (NS200 BS-IV 1ª EDICIÓN)	FIGURA N° 64: CALCOMANÍAS (NS200 BS-IV 2ª EDICIÓN)	FIGURA N° 65: CALCOMANÍAS (NS200 BS-IV PRO 2ª EDICIÓN)

This diagram illustrates the assembly of the fuel injection system. The components are numbered as follows:

- 1**: Fuel injection pump body.
- 2**: Fuel distribution rail.
- 3**: Fuel distributor.
- 4**: Fuel injector.
- 5**: Fuel injector pin.

The diagram shows the fuel injection pump (1) at the base, with the fuel distribution rail (2) positioned above it. The fuel distributor (3) is shown being inserted into the pump body. The fuel injectors (4) are shown being inserted into the distributor, with the fuel injector pins (5) being inserted into the injectors.

[illegible]

This exploded view diagram illustrates the assembly of a carburetor. The central component is the carburetor body (5). Key parts and their assembly sequence are indicated by dashed lines and numbers:

- 1**: Main fuel inlet pipe with a clamp (2).
- 3**: Fuel filter (4) and its housing (3).
- 6**: Fuel line with a clamp (7).
- 8**: Jet needle assembly.
- 9**: Jet needle seat.
- 10**: Fuel line with a clamp (7).
- 11**: Fuel line with a clamp (7).
- 12**: Fuel line with a clamp (7).
- 13**: Fuel line with a clamp (7).
- 14**: Jet needle seat.
- 15**: Jet needle.
- 16**: Jet needle seat.
- 17**: Jet needle.
- 18**: Jet needle seat.
- 19**: Jet needle seat.

[illegible]

FIGURA N° 3: CULATA

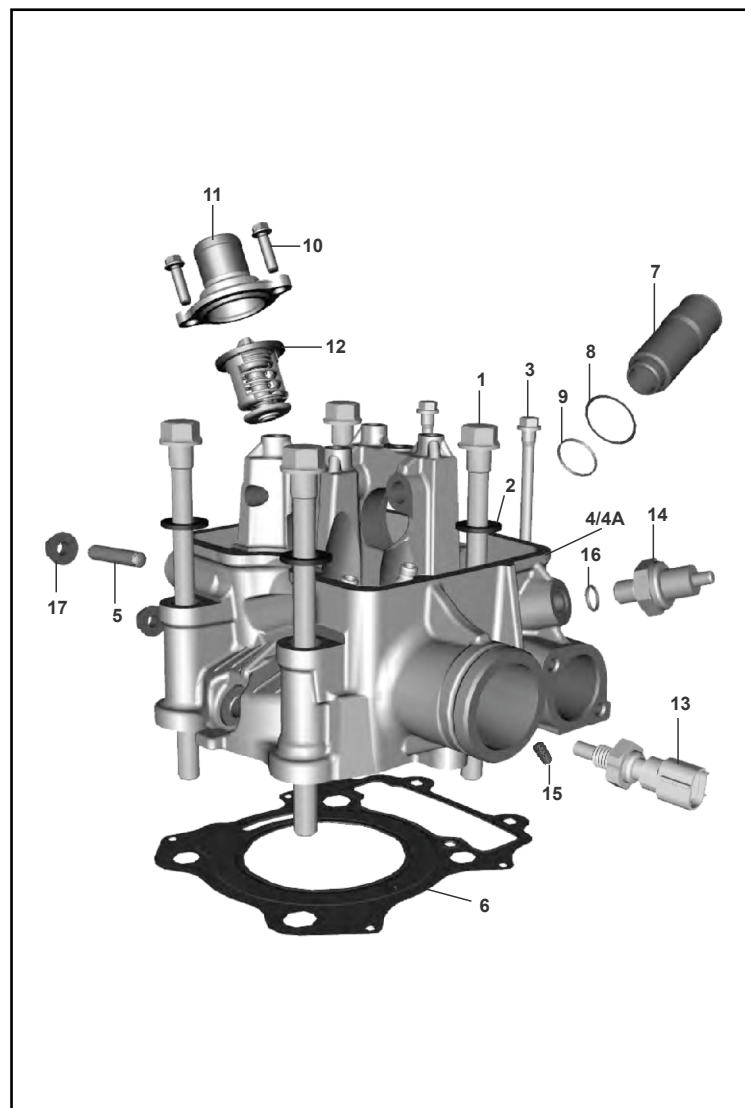


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JG541068	Tornillo Culata 10 mm.	4	4	4	
2	LDA00008	Arandela 11.2x20x2	4	4	4	
3	JL511009	Tornillo Culata 6 mm.	2	2	2	
4	36JL0010	Culata (Sola)	1	1	-	
	JL511080		-	-	1	
4A	36JL0145	Culata Completa	-	-	1	
5	JG511046	Esparrago 8 mm.	2	2	2	
6	JL511022	Empaque Culata	1	1	1	
	36JL0014	Kit Empaques	1	1	1	Ref. Pág. No. 86
7	JL511219	Torre Bujía	1	1	1	Diámetro Anillo Retenedor 21 mm.
	JL511112		-	-	1	Diámetro Anillo Retenedor 18.5 mm.
8	39262921	Anillo Retenedor	1	1	1	Diámetro 21 mm.
	KJAC1824		-	-	1	Diámetro 18.5 mm.
9	39128321	Anillo Retenedor	1	1	1	
10	39167304	Tornillo 6 mm.	2	-	2	
	KAEQ0620		-	2	-	
11	JL511029	Cubierta Termostato	1	1	1	
12	JL601237	Termostato	1	1	1	
12A	JL601225	Retenedor Termostato	1	1	1	No Ilustrado
13	JG351400	Sensor Temperatura	1	1	1	
14	DK101225	Swiche Presión Aceite	1	1	1	
15	39260801	Tornillo 5x0.8x7	1	1	1	
16	39269920	Anillo Retenedor	1	1	1	
17	LCG00006	Tuerca 8 mm.	2	2	2	
NOTA: Si la culata que tiene la moto contiene el balancín de longitud 64mm. y se necesita realizar el recambio de la culata, se debe solicitar la culata completa de referencia 36JL0145						

JF511207	JL511254
14,5mm.	17,5mm.



This exploded view diagram illustrates the assembly of a carburetor. The main assembly is shown on the left. To its right, various components are numbered for identification:

- 1:** A long, black cylindrical component, likely a jet needle or needle valve.
- 2:** A small, black, circular component, possibly a needle valve seat or a small pulley.
- 3:** A small, black, circular component, possibly a needle valve seat or a small pulley.
- 4:** A small, black, circular component, possibly a needle valve seat or a small pulley.
- 5:** A small, black, circular component, possibly a needle valve seat or a small pulley.
- 6:** A large, black, circular gear with multiple teeth.
- 7:** A small, black, circular component, possibly a needle valve seat or a small pulley.
- 8:** A long, black, curved component, likely a fuel line or a hose.
- 9:** A small, black, circular component, possibly a needle valve seat or a small pulley.
- 10:** A small, black, circular component, possibly a needle valve seat or a small pulley.
- 11:** A small, black, circular component, possibly a needle valve seat or a small pulley.
- 12:** A small, black, circular component, possibly a needle valve seat or a small pulley.
- 13:** A small, black, circular component, possibly a needle valve seat or a small pulley.
- 14:** A small, black, circular component, possibly a needle valve seat or a small pulley.
- 15:** A small, black, circular component, possibly a needle valve seat or a small pulley.



pulsar
NS200-AS200

This diagram illustrates the exploded view of a pressure washer lance assembly. The components are labeled as follows:

- 1**: The main lance body, shown in an exploded view relative to the trigger gun.
- 2**: A set of four O-rings used for sealing the lance connection.
- 3**: Two small cylindrical components, likely nozzles or caps, shown in an exploded view relative to the lance body.
- 4**: A black, rectangular gasket or seal used to secure the lance to the trigger gun.
- 5**: Two small circular components, likely O-rings or seals, shown in an exploded view relative to the trigger gun.
- 6**: The trigger gun, shown in an exploded view relative to the lance body.



pulsar
NS200-4S200

This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows:

- 1**: Main housing or frame.
- 2**: A bracket or support arm.
- 3**: A small pin or screw.
- 4**: A central hub or connector.
- 5**: A small washer or spacer.
- 6**: A large circular flange or end plate.
- 7**: A small pin or screw.
- 8**: A small washer or spacer.
- 9**: A small washer or spacer.
- 10**: A small gear or pinion.
- 11**: A large gear or pinion.
- 12**: A small washer or spacer.
- 13**: A small washer or spacer.
- 14**: A small gear or pinion.
- 15**: A small washer or spacer.
- 16**: A small gear or pinion.

The assembly is shown in a disassembled state, with dashed lines indicating the alignment and fit of the parts. The main housing (1) is the central component, with various gears (10, 11, 14, 16) and washers (8, 9, 12, 13) attached to its shafts. The bracket (2) is shown attached to the top of the housing. The small pins (3, 7) are used to secure the various components.

[illegible]

FIGURA N° 8: TRANSMISIÓN (1/2)

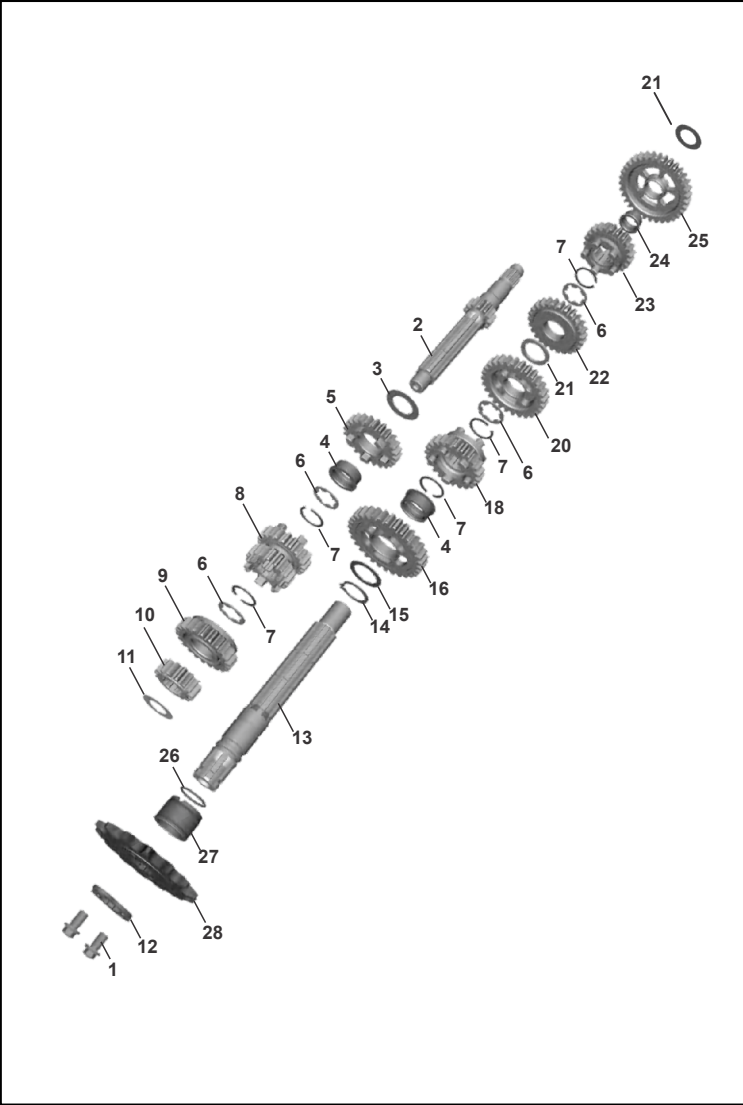


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	LAE00017	Tornillo 6x1x10	2	2	2	
2	JG551027	Eje Clutch	1	1	1	
3	39215811	Arandela Eje Caja	1	1	1	
4	JG551013	Buje Caja	2	2	2	
5	JG551213	Piñón de 6A. (24T)	1	1	1	
6	JG551020	Arandela	4	4	4	
7	BF551037	Pin de Seguridad	5	5	5	
8	JG551214	Piñón Múltiple 3A & 4A (18/21T)	1	1	1	
9	JG551220	Piñón de 5A. (22T)	1	1	1	
10	JG551227	Piñón de 2A. (15T)	1	1	1	
11	JG551022	Arandela	1	1	1	
12	JG551019	Arandela Sprocket	1	1	1	
13	JG551025	Eje Piñón Salida	1	1	1	
14	DH101235	Pin de Seguridad	1	1	1	
15	39216611	Arandela Caja	1	1	1	
16	JG551228	Piñón de 2A. (31T)	1	1	1	
17	JG551026	Eje Piñon Salida Completo	1	1	1	No Ilustrado
18	JG551222	Piñón de 5A. (23T)	1	1	1	
19	JG551028	Eje Clutch Completo	1	1	1	No Ilustrado
20	JG551223	Piñón de 3A. (28T)	1	1	1	
21	JG551021	Arandela	2	2	2	
22	JG551215	Piñón de 4A. (26T)	1	1	1	
23	JG551224	Piñón de 6A. (22T)	1	1	1	
24	JG551000	Buje Caja	1	1	1	
25	JG551225	Piñón de 1A. (34T)	1	1	1	

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 28. The assembly is shown in a disassembled state, with parts arranged in a linear fashion from left to right. Key components include a main shaft (13), a large gear (25), a smaller gear (24), a spring (23), a bearing (22), a seal (21), a housing (20), a spring (18), a gear (16), a spring (15), a bearing (14), a spring (12), a housing (11), a gear (10), a spring (9), a bearing (8), a spring (7), a gear (6), a spring (5), a bearing (4), a spring (3), a shaft (2), a spring (26), a bearing (27), a housing (28), and a small pin (1).



pulsar
NS200-4S200

An exploded view diagram of a mechanical assembly, likely a hydraulic cylinder or actuator. The components are numbered 1 through 12. The central component is a large, cylindrical body (1) with a flange on one end. To its left is a long, threaded rod (10) with a nut (6) and a washer (4). Above the rod is a piston rod (9) and a piston head (5). To the right of the central body is a mounting bracket (7) and a small pin (12). The assembly is shown in a disassembled state with dashed lines indicating the alignment of the parts.



FIGURA N° 10: EJE DE CAMBIOS

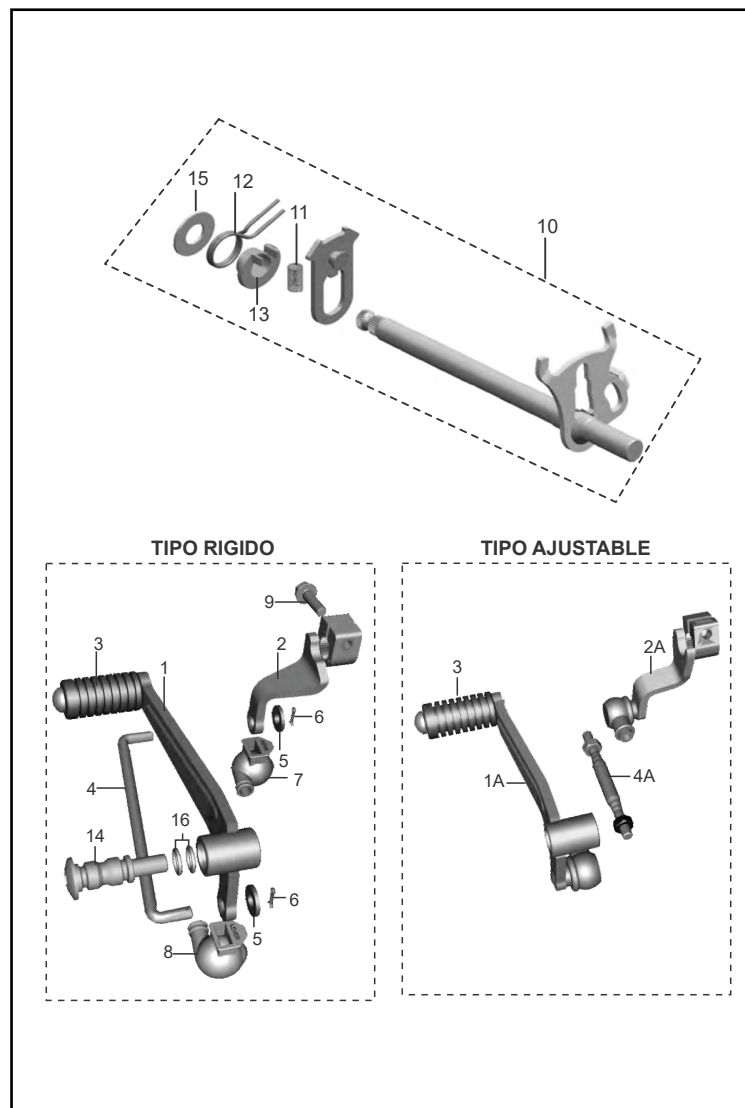


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL561401	Pedal Cambios	1	1	-	Tipo Rígido
1A	JL561205		1	1	1	Tipo Ajustable
2	JL561404	Leva Pedal Cambios	1	1	-	Para JL561401
2A	JL561206		1	1	1	Para JL561205
3	DH101509	Caucho Pedal Cambios	1	1	1	
4	JL561405	Eje Pedal Cambios	1	1	-	Para JL561401
4A	52JF0062		1	1	1	Para JL561205
5	JD561416	Arandela Nylon 6.5x5x2.0	2	2	-	Para JL561401
6	39080808	Pin de Seguridad	2	2	-	Para JL561401
7	JL561407	Guardapolvo	1	1	-	Para JL561401
8	JL561408	Guardapolvo	1	1	-	
9	39190204	Tornillo 6 mm.	1	1	1	
10	JG561200	Eje Cambios	1	-	1	
	DT561206		-	1	-	
11	JG561215	Resorte Leva Cambios	1	1	1	
12	JG561218	Resorte Eje Cambios	1	-	1	
	JG561232		-	1	-	
13	JG561217	Buje Eje Cambios	1	1	1	
14	JL561409	Tornillo Pedal Cambios	1	1	1	
15	JL561410	Arandela	1	1	1	
16	01100905	Anillo Retenedor	2	2	2	

FIGURA N° 11: CARCASA DERECHA (1/2)

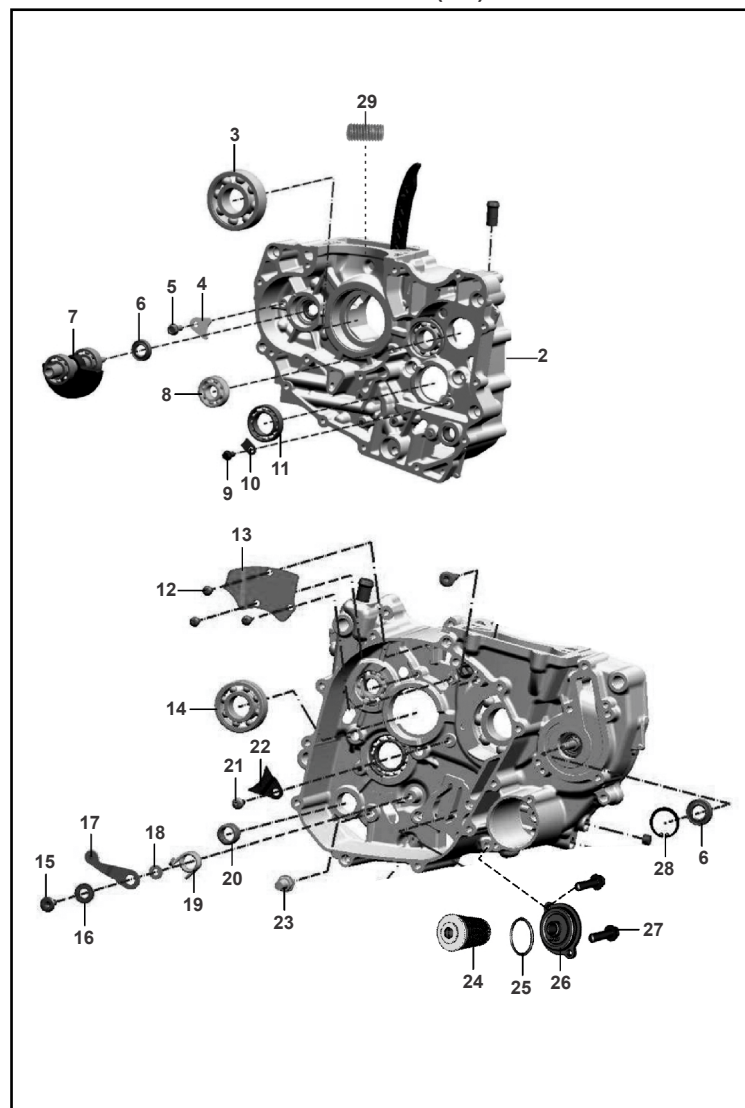


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL501003	Motor Completo	1	-	-	No Ilustrado
	JL501040		-	1	-	No Ilustrado
	JL501063		-	-	1	No Ilustrado
2	36JL0004	Carcasa Derecha	1	1	-	
	36DT0079		-	-	1	
3	39193120	Rodamiento Bolas 28x68x18	1	1	1	
4	JG541046	Platina Guia Tope	1	1	-	
	JY541047		-	-	1	
5	LAD00077	Tornillo 6x16	1	1	1	
6	36JL0039	Kit Reten y Turbina	2	2	2	
7	JU531213	Balanceador	1	-	-	Cuñero con Guía
	JU531215		1	1	-	Cuñero Redondo
	JL531205		1	1	1	Cuñero Largo 17.5 mm.
8	39260220	Rodamiento Bolas 6202/HN3	1	1	1	
9	DH101383	Tornillo 6x12	1	1	1	
10	JG541059	Platina Guia Tope	1	1	1	
11	39260120	Rodamiento Bolas 25x42x9	1	1	1	
12	LBB00006	Tornillo 5x0.8x10	3	3	3	
13	JU541005	Platina	1	1	1	
14	59200028	Rodamiento Bolas 20x47x14	1	1	1	
15	JG561204	Tornillo	1	1	1	
16	JG561205	Arandela	1	1	1	
17	JG561009	Leva Eje Cambios	1	1	1	
18	39200511	Arandela	1	1	1	
19	JG561226	Resorte	1	1	1	

This diagram illustrates the exploded view of a motorcycle engine crankcase, showing the main housing and its associated components. The components are numbered 1 through 29, indicating their assembly sequence and positions relative to the main housing (2).

- 2**: Main crankcase housing.
- 3**: Top cover/bell crank.
- 4**: Pin/bush.
- 5**: Pin/bush.
- 6**: Pin/bush.
- 7**: Pin/bush.
- 8**: Pin/bush.
- 9**: Pin/bush.
- 10**: Pin/bush.
- 11**: Pin/bush.
- 12**: Pin/bush.
- 13**: Pin/bush.
- 14**: Pin/bush.
- 15**: Pin/bush.
- 16**: Pin/bush.
- 17**: Pin/bush.
- 18**: Pin/bush.
- 19**: Pin/bush.
- 20**: Pin/bush.
- 21**: Pin/bush.
- 22**: Pin/bush.
- 23**: Pin/bush.
- 24**: Pin/bush.
- 25**: Pin/bush.
- 26**: Pin/bush.
- 27**: Pin/bush.
- 28**: Pin/bush.
- 29**: Pin/bush.



pulsar
NS200-4S200

This diagram shows an exploded view of a mechanical assembly, likely a pump or engine component. The main housing is shown in the center. Various parts are numbered and shown in their relative positions with dashed lines indicating assembly paths. The parts include:

- 1: Main housing
- 2: Two small pins or screws
- 3: A small pin
- 4: A curved bracket
- 5: A small pin
- 6: A small pin
- 7: A small pin
- 8: A small pin
- 9: A small pin
- 10: A small pin
- 11: A small pin
- 12: A small pin
- 13: A small pin
- 14: A small pin
- 15: A small pin
- 16: A large, flat, irregular plate
- 17: A small pin
- 18: A small pin
- 19: A small pin
- 20: A small pin
- 21: A small pin
- 22: A small pin
- 23: A small pin



This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or engine housing. The main housing is shown in the center, with various parts numbered 1 through 23. The components include:

- 1:** A large, complex housing or pump body.
- 2:** A curved metal bracket or arm.
- 3:** A small pin or fastener.
- 4:** A cable or hose with a connector.
- 5:** A small electrical connector or plug.
- 6:** A small pin or fastener.
- 7:** A small pin or fastener.
- 8:** A small circular component, possibly a seal or gasket.
- 9:** A small circular component, possibly a seal or gasket.
- 10:** A small circular component, possibly a seal or gasket.
- 11:** A small circular component, possibly a seal or gasket.
- 12:** A small circular component, possibly a seal or gasket.
- 13:** A small circular component, possibly a seal or gasket.
- 14:** A long, cylindrical component, possibly a shaft or pin.
- 15:** A small circular component, possibly a seal or gasket.
- 16:** A large, flat, irregularly shaped component, possibly a gasket or cover plate.
- 17:** A small circular component, possibly a seal or gasket.
- 18:** A small circular component, possibly a seal or gasket.
- 19:** A small circular component, possibly a seal or gasket.
- 20:** A small circular component, possibly a seal or gasket.
- 21:** A small circular component, possibly a seal or gasket.
- 22:** A small circular component, possibly a seal or gasket.
- 23:** A small circular component, possibly a seal or gasket.

The diagram uses dashed lines to indicate the assembly path and alignment of the components.



FIGURA N° 13: BOMBA DE AGUA / PIÑÓN BALANCEADOR

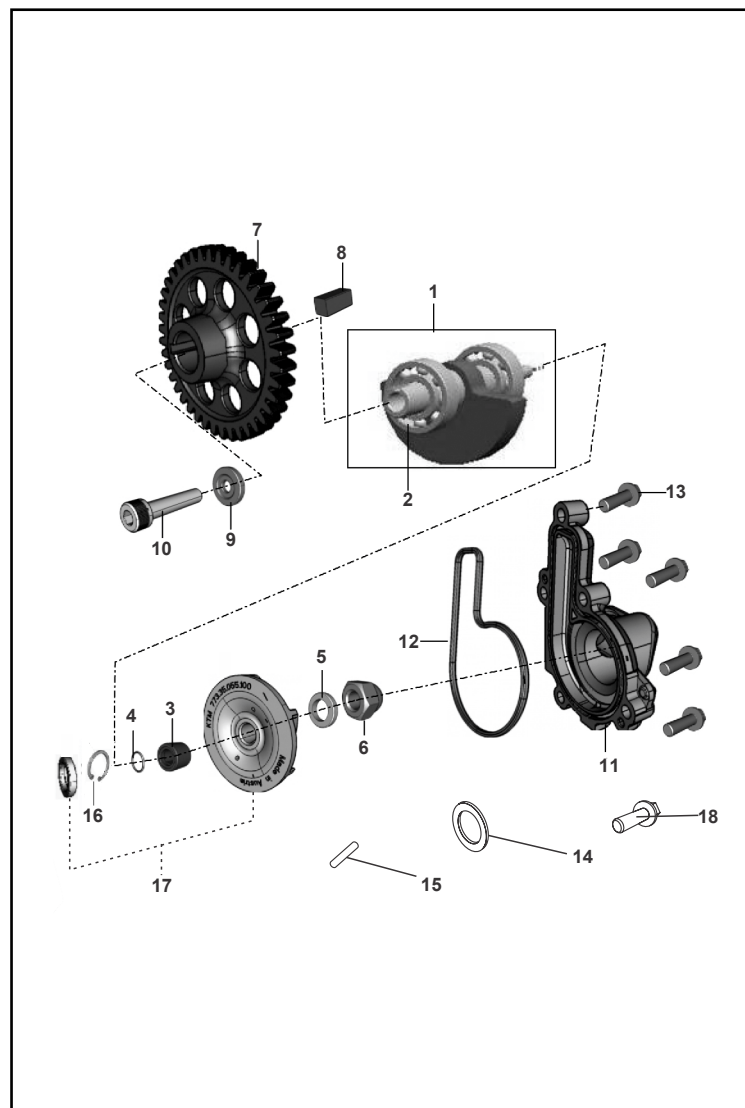


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JU531213	Balanceador	1	-	1	Cuñero con Guía
	JU531215		1	1	1	Cuñero Redondo
	JL531205		1	1	1	Cuñero Largo 17.5 mm.
2	59200036	Rodamiento Bolas 620HN3	2	2	2	
3	JG531211	Buje Balanceador	1	-	1	Para JU531213
	JG531228		1	1	1	Para JU531215
	JL531203		1	1	1	Para JL531205
4	JG531212	Anillo Retenedor	1	-	1	Para JU531213
	JG531229		1	1	1	Para JU531215-JL531205
5	JG531215	Arandela 2.5 mm.	1	1	1	
6	JG601005	Tuerca Balanceador	1	1	1	
7	JG531207	Piñón Balanceador	1	1	1	
8	DS101154	Cuña Piñón Balanceador	1	1	1	
9	DH101048	Arandela 8.2x26x3	1	1	-	
	LDB00051		-	-	1	
10	DK101386	Tornillo 8x40	1	1	-	
	LAC00086		-	-	1	
11	JL601005	Tapa Bomba Agua	1	1	1	
12	JG601012	Empaque Tapa Bomba Agua	1	1	1	
13	KADQ0620	Tornillo	5	5	5	
14	39166511	Arandela 6 mm.	1	1	1	
15	39260607	Pin	2	2	2	
16	LEB00001	Pin de Seguridad	1	1	1	
17	36JL0039	Kit Retenes y Turbina	1	1	1	
18	KADQ0606	Tornillo	10	10	10	

An exploded view diagram of a mechanical assembly. The components are numbered as follows:

- 1**: A large, complex cast metal housing or bracket, shown in the center.
- 2**: A gear or flywheel with multiple teeth, positioned to the right of the housing.
- 3**: A small circular ring or washer, positioned between the gear and the housing.
- 4**: A long, thin bolt or screw, positioned above the housing.
- 5**: A small cylindrical pin or bush, positioned above the housing.
- 6**: A long, thin shaft or pin, positioned below the housing.

The diagram uses dashed lines to indicate the assembly path and alignment of the components. A dashed rectangular box encloses the main housing (1) and the gear (2). A dashed line also connects the shaft (6) to the housing (1).



FIGURA N° 15: RADIADOR (1/2)

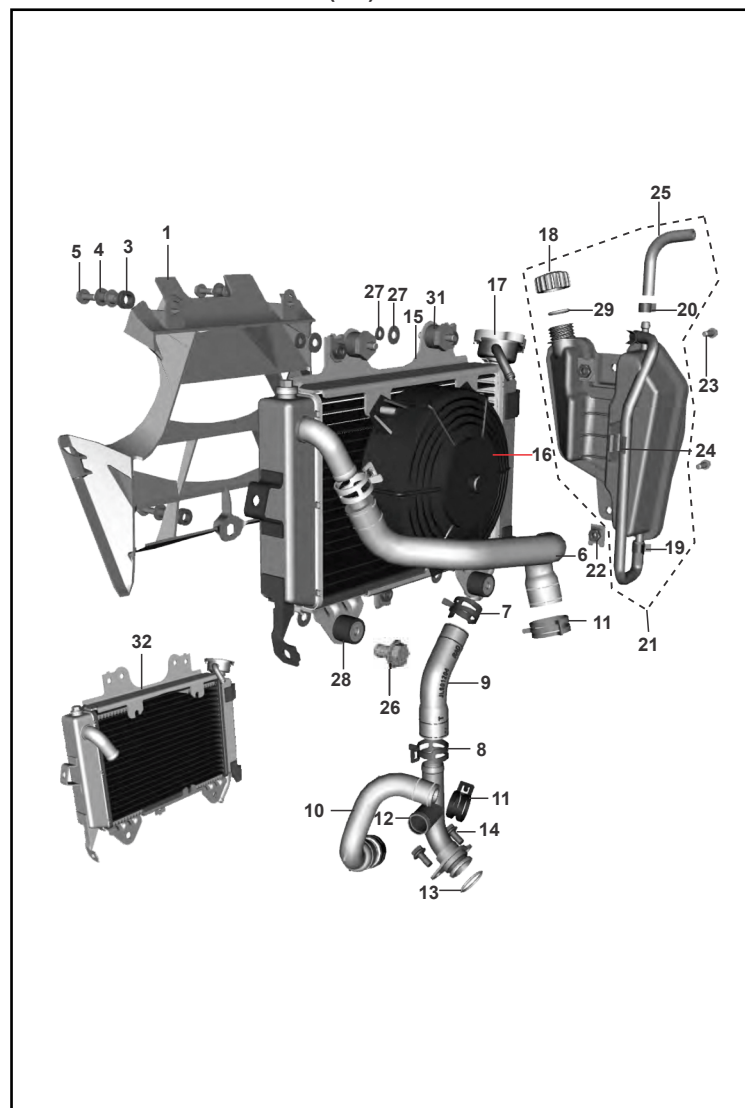


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
1	JL601210	Carenaje Radiador	1	1	1	
2	JG601210	Abrazadera	1	1	1	No Ilustrado
3	JL181256	Antivibrante	3	3	3	
4	JW171015	Buje 8.2 mm.	3	-	-	
	JL601231	Buje 9.2 mm.	3	3	3	
5	39194404	Tornillo 6x12	3	3	3	
6	JL601000	Manguera Radiador	1	1	1	
7	JG601234	Abrazadera Manguera Radiador	1	1	1	
8	JG601209	Abrazadera	2	2	2	
9	JL601220	Manguera Radiador	1	1	1	
10	JL601219	Manguera Radiador	1	1	1	
11	JL601212	Abrazadera	1	1	1	
12	JL601228	Tubo T	1	1	1	
13	JG601221	Anillo Retenedor	1	-	1	
	LJA00005		-	1	-	
14	39220404	Tornillo 6 mm.	2	2	-	
	LAE00041		-	-	2	
15	JL601238	Radiador Completo	1	1	1	
16	JY601235	Ventilador Radiador	1	1	1	
17	JG601229	Tapa Radiador	1	-	-	Plástica
17A	JG601235	Tapa Radiador	1	1	1	Metálica
18	JG601211	Tapa Tanque Liquido Refrigerante	1	1	1	
19	JL601215	Abrazadera	2	2	2	
20	JG171029	Abrazadera Tanque Liquido Refrigerante	3	3	3	
21	JL601209	Tanque Líquido Refrigerante	1	-	-	Tapa al Lado Derecho
	JL601235		1	1	1	Tapa al Lado Izquierdo

[illegible]

pulsar
NS200-4S200

FIGURA N° 16: CUBIERTA CLUTCH (1/2)

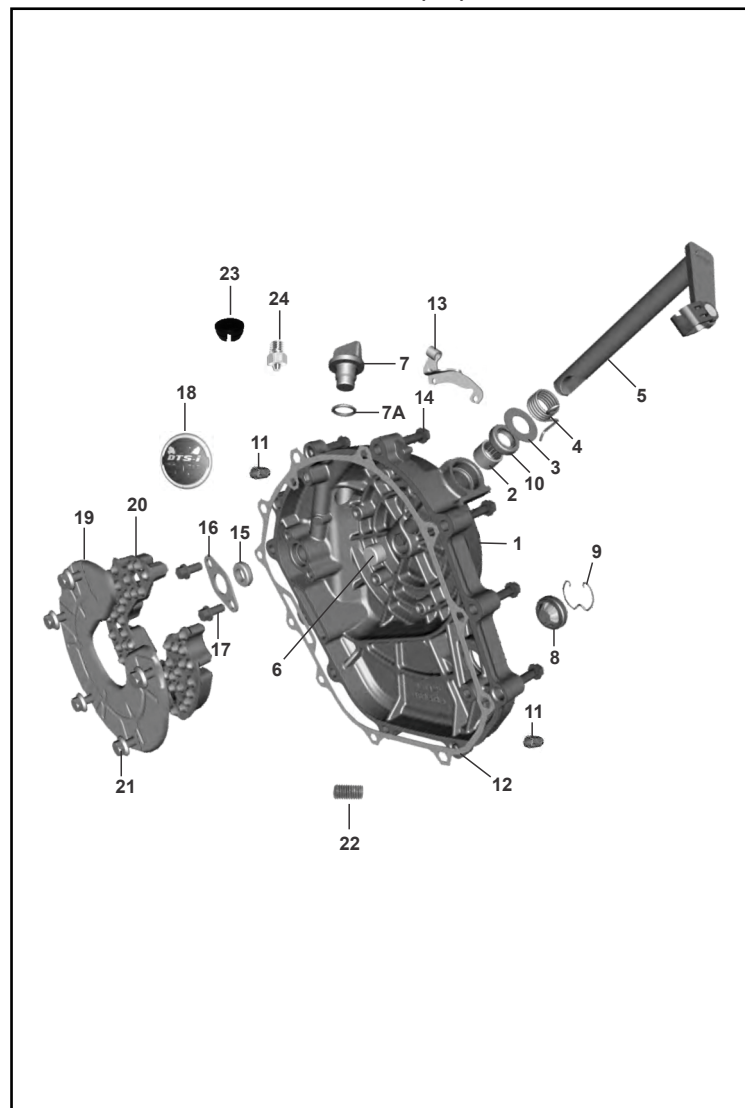


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
1	52JL0073	Cubierta Clutch	1	-	-	Dorada
	52JL0143		1	-	-	Dorado Oscuro
	DT541212		-	1	-	
	52JL0892		-	-	1	
2	39199020	Rodamiento Agujas	1	1	1	
3	LDB00020	Arandela 12.5x24x0.8	1	1	1	
4	JG551017	Resorte Eje Interno Clutch	1	1	1	
5	JG551015	Eje Interno Clutch	1	-	1	
	DT541019		-	1	-	
6	JU551401	Empujador Clutch	1	1	1	
7	JG541230	Tapón Aceite	1	1	1	
7A	39153721	Anillo Retenedor	1	1	1	
8	DG101418	Visor Nivel Aceite	1	-	1	
	JL541227		-	1	-	
9	DS101215	Pin de Seguridad	1	1	1	
10	39104119	Reten Eje Interno Clutch	1	1	1	
11	39099906	Pin Guía	2	2	2	
12	JL541207	Empaque Carcasa Clutch	1	1	1	
	36JL0014	Kit Empaques	1	1	1	Ref. Pág. N° 86
13	JL541210	Soporte Cable Clutch	1	-	1	
	JL541246		-	1	-	
14	KADQ0630	Tornillo 6x30	11	-	11	
	KAEQ0630		-	11	-	
15	39104619	Reten	1	1	1	
16	JG541231	Arandela	1	1	1	
17	AA101437	Tornillo 6x12	2	2	2	

This exploded view diagram illustrates the components of a motorcycle engine assembly. The central component is the engine block (1), which is surrounded by various parts including the cylinder head (2), piston (3), and connecting rod (4). The crankshaft (5) is shown at the bottom right, connected to the piston. The timing chain (6) and timing cover (7) are positioned at the top. The camshaft (8) and cam followers (9) are located on the right side. The valve train components, including the intake and exhaust valves (10, 11), are shown at the top left. The timing cover (12) and timing cover gasket (13) are positioned at the bottom. The timing cover (14) and timing cover gasket (15) are positioned at the bottom right. The timing cover (16) and timing cover gasket (17) are positioned at the bottom left. The timing cover (18) and timing cover gasket (19) are positioned at the bottom. The timing cover (20) and timing cover gasket (21) are positioned at the bottom. The timing cover (22) and timing cover gasket (23) are positioned at the bottom. The timing cover (24) and timing cover gasket (25) are positioned at the bottom.



pulsar
NS200 - 4S200

This exploded view diagram illustrates the assembly of a Bajaj Pulsar 150 engine. The central component is the engine block, which features a cooling fan and a flywheel. Various parts are shown in their relative positions, with dashed lines indicating their assembly paths. The components are numbered as follows:

- 1**: Engine block
- 2**: Flywheel nut
- 3**: Flywheel washer
- 4**: Flywheel bolt
- 5**: Oil pan gasket
- 6**: Various bolts and screws
- 7**: Oil pan
- 8**: Oil pan bolts
- 9**: Oil pan cover
- 10**: Bajaj logo
- 10A**: Pulsar 150 logo



pulsar
NS200-4S200

FIGURA N° 18: CLUTCH

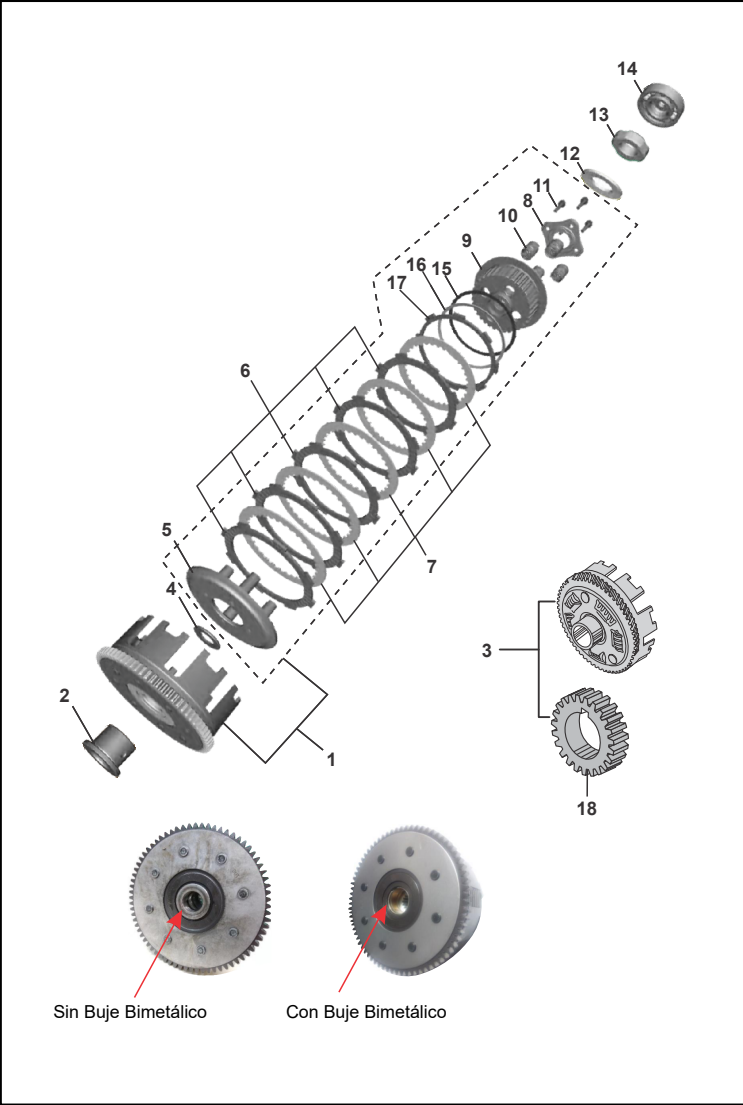


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
1	JU551404	Clutch Completo	1	-	-	
	DT551400		-	1	1	Sin Buje Bimetalico
	DT551409		-	-	1	Con Buje Bimetalico
2	JG551427	Buje Corona Clutch	1	1	1	Para DT551400
	DT551412		-	-	1	Para DT551409
3	36JL0005	Kit Corona y Piñón Primario	1	1	1	Sin Buje Bimetalico
	36DT0055		-	-	1	Con Buje Bimetalico
4	JG551428	Arandela Corona Clutch	1	1	1	
5	JG551449	Porta Resortes Clutch	1	-	-	
	DT551402		-	1	1	
6	36JU0002	Kit Discos Clutch	1	1	1	
7	JG551447	Disco Separador Clutch	5	5	-	
	DT551408		-	-	5	
8	JG551443	Porta Resortes Clutch	1	-	-	
	DT551401		-	1	1	
9	JU551406	Corona Interna Clutch	1	1	1	
10	JU551402	Resorte Clutch	4	-	-	
	DT551403		-	4	4	
11	JG551451	Tornillo 6x22	4	4	4	
12	39220011	Arandela Piñón Primario	1	1	1	
13	DH101648	Tuerca Clutch	1	1	1	
14	JG551423	Rodamiento Bolas	1	1	1	
15	DP101243	Arandela Anti-Brinco	1	1	1	
16	DP101114	Arandela Anti-Brinco	1	1	1	
17	DP101109	Disco Clutch	1	1	1	
18	JG551216	Piñón Primario	1	1	1	
19	36JL0091	Kit Anti-Brinco	1	1	1	Items: 10, 15, 16, 17

FIGURA N° 19: CARBURADOR (PULSAR 200NS - PULSAR AS200)

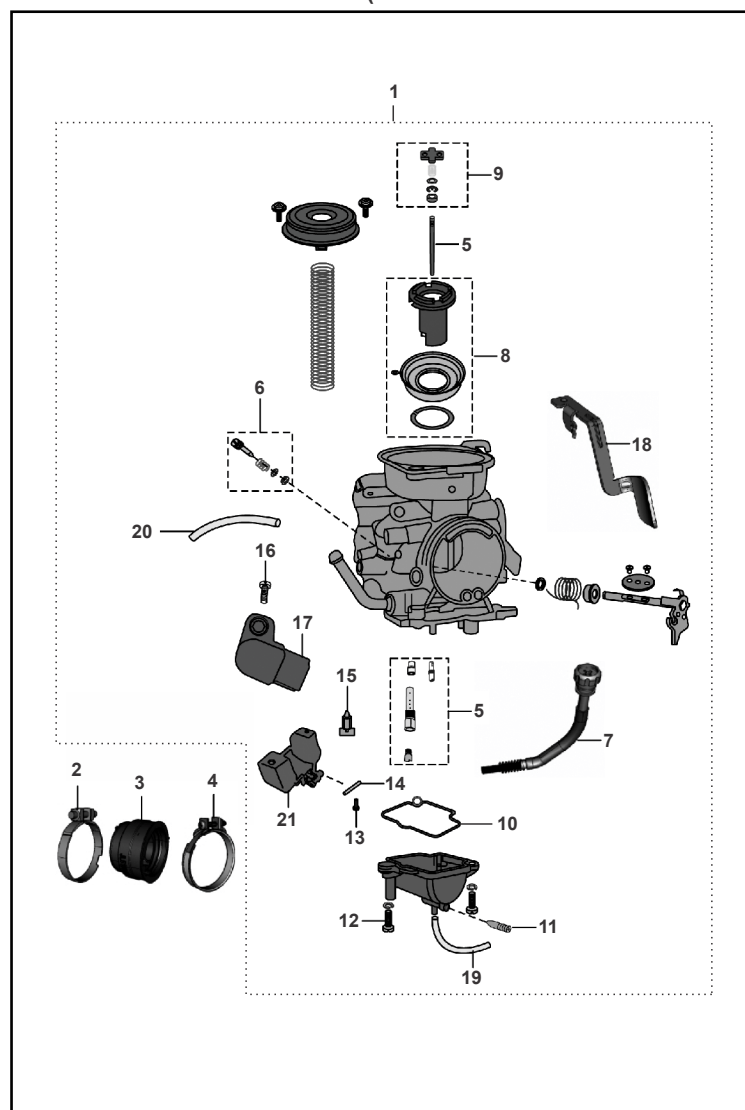


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL581201	Carburador	1	1	-	
2	JL581300	Abrazadera	1	1	-	
3	JL511016	Antivibrante	1	1	-	
4	JL581027	Abrazadera	1	1	-	
5	36JL0019	Kit Boquereles y Aguja Carburador	1	1	-	Ref. Pág. No. 86
6	36JL0020	Kit Tornillos Ajuste Carburador	1	1	-	Ref. Pág. No. 87
7	36JL0021	Cable Controlador Carburador	1	1	-	
8	36JL0022	Kit Válvula Carburador	1	1	-	
9	36JL0024	Kit Pines-Arandela Carburador	1	1	-	Ref. Pág. No. 87
10	36JL0023	Kit Retenedores y Empaques	1	1	-	Ref. Pág. No. 87
11	JA581314	Tornillo Drenaje	1	1	-	
12	CB121042	Tornillo Taza Carburador	2	2	-	
13	DH121064	Tornillo	3	3	-	
14	DH121063	Pin Pasador Flota Carburador	1	1	-	
15	DK121047	Aguja Flota Carburador	1	1	-	
16	39178001	Tornillo M5	2	2	-	
17	JD351800	Posicionador Acelerador (TPS)	1	1	-	
18	JL581204	Leva Choke	1	1	-	
19	JL581205	Manguera Desfogue	1	1	-	
20	JL581206	Manguera Gasolina	1	1	-	
21	DK121045	Flota Carburador	1	1	-	

This exploded view diagram illustrates the assembly of a carburetor. The central component is the carburetor body (1). Key sub-assemblies and parts include:

- Top Assembly:** Consists of the top cover (1), top gasket (2), top bowl (3), and top gasket (4). The top cover is secured with screws (5) and a pin (6).
- Jet and Needle Assembly:** Includes the jet (7), needle (8), and needle gasket (9).
- Float and Needle Valve Assembly:** Features the float (10), float gasket (11), float valve (12), and float valve gasket (13).
- Linkage and Choke Assembly:** Includes the choke lever (14), choke cable (15), and choke lever gasket (16).
- Other Components:** Includes the air filter (17), air filter gasket (18), and air filter housing (19).

The diagram shows the relative positions and assembly sequence of these components, with dashed lines indicating the fit and alignment of the parts.



FIGURA N° 20: FILTRO DE AIRE

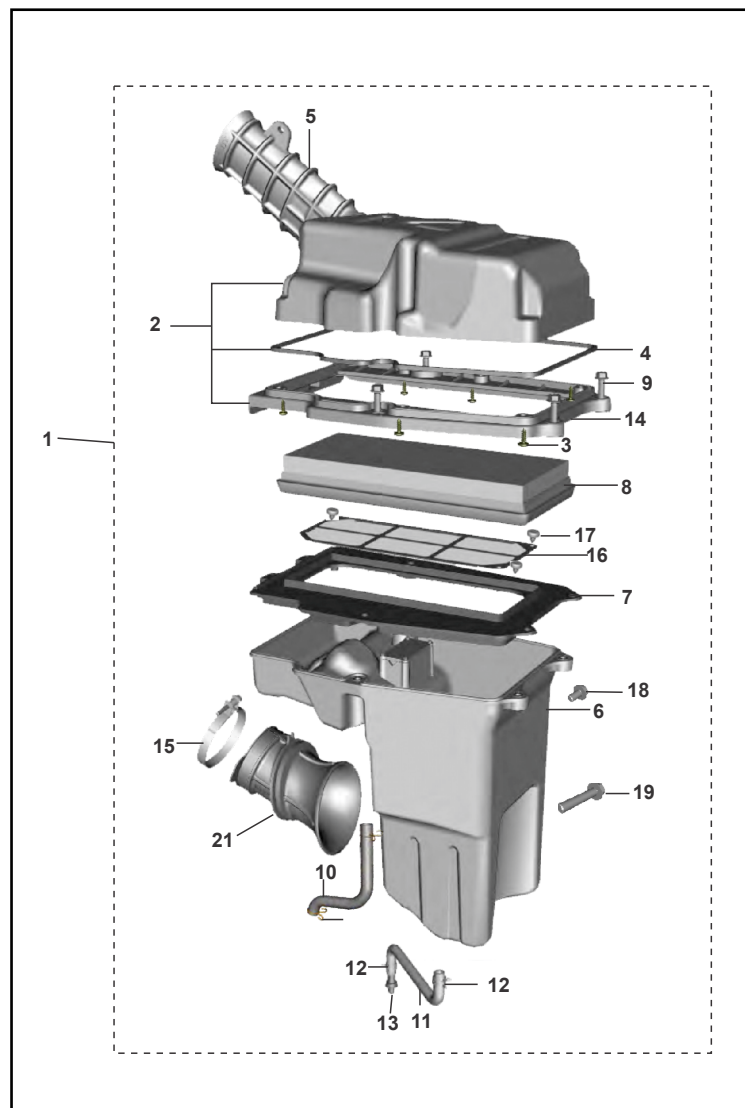


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL581000	Caja Filtro Aire Completo	1	-	-	
	JL581050		-	1	1	
2	JL581023	Tapa Caja Filtro Aire	1	1	1	
3	LBB00004	Tornillo	6	6	6	
4	JL581025	Empaque Caja Filtro Aire	1	1	1	
5	JL581007	Conducto Filtro Aire	1	1	1	
6	JL581024	Caja Filtro Aire Sola	1	1	1	
7	JL581018	Cubierta Inferior Filtro Aire	1	1	1	
8	JL581009	Filtro Aire	1	1	1	
9	KAEM0622	Tornillo	4	4	4	
10	JL581016	Manguera Desfogue	1	1	1	
11	JL581015	Manguera Desfogue Filtro Aire	1	1	1	
12	DG121002	Abrazadera	2	2	2	
13	DS121126	Tapón	1	1	1	
14	JL581022	Cubierta Superior Filtro Aire	1	1	1	
15	AP121064	Abrazadera	1	1	1	
16	JL581004	Rejilla Filtro Aire	1	1	1	
17	KBQA3506	Tornillo	3	3	3	
18	KADM0610	Tornillo 6x10	1	1	1	
19	KADA0630	Tornillo 6x30	1	1	1	
20	39023911	Arandela	2	-	2	No Ilustrado
	LDB00023		-	2	-	
21	JL581010	Conducto Filtro Aire	1	1	1	

FIGURA N° 21: SILENCIADOR

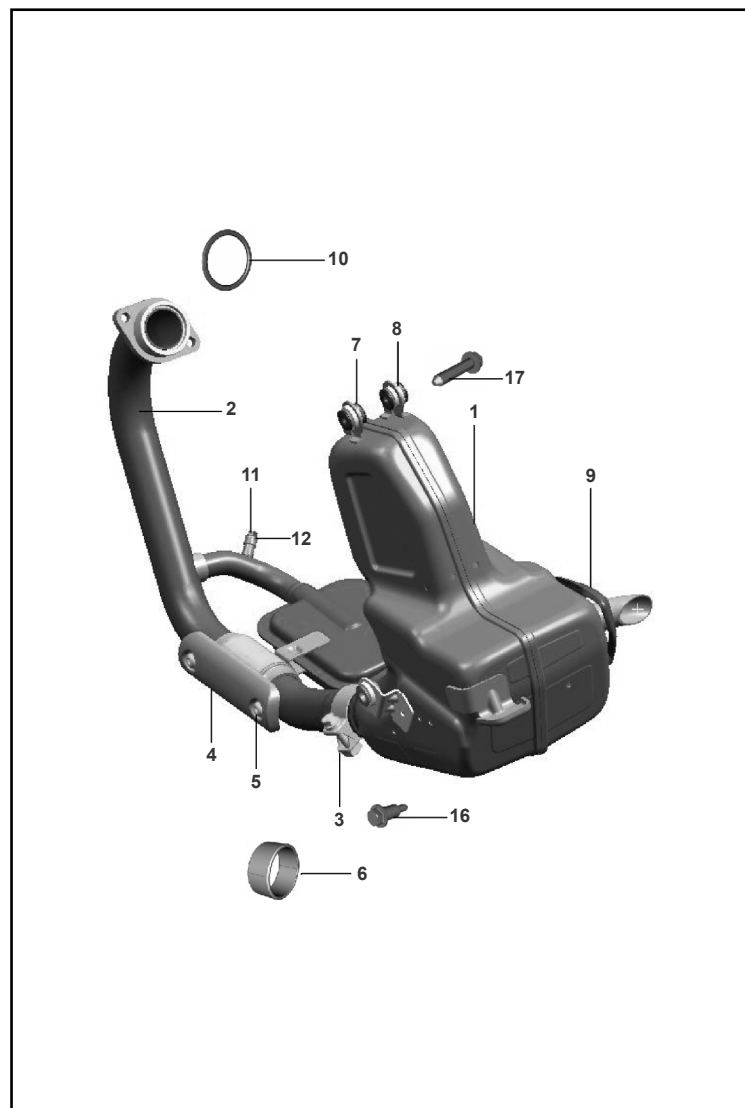


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
1	JL591052	Silenciador	1	1	-	
	JL591196		-	-	1	
2	JL591048	Tubo Escape	1	1	-	
	JL591226		-	-	1	
3	JG591038	Abrazadera	1	1	1	
4	JL591144	Protector Tubo Escape	1	1	1	
5	DH101607	Tornillo	4	4	4	
6	JG591039	Empaque Silenciador	1	1	1	
7	JG591096	Buje	4	4	4	
8	JG591097	Antivibrante	4	-	-	
	JL591165		4	4	4	Desde Marzo 2014
9	JL591075	Protector Silenciador	1	1	1	
10	JG591070	Empaque Tubo Escape	1	1	1	
11	39275404	Tornillo 5 mm.	1	1	-	
	KADA0510		-	-	1	
12	39249211	Arandela	1	1	1	
13	JG591053	Antivibrante	4	4	4	No Ilustrado
14	KADQ0625	Tornillo 6 mm.	2	2	2	No Ilustrado
15	JG591088	Tuerca 6 mm.	2	2	2	No Ilustrado
16	JL591086	Tornillo	2	2	2	
17	JL591148	Tornillo 6x30	2	-	2	
	KADA0630		-	2	-	
18	39230404	Tornillo 6 mm.	-	-	1	No Ilustrado
19	JL591157	Buje Inferior	-	-	1	No Ilustrado

This exploded view diagram illustrates the assembly of a mechanical unit, likely a pump or motor. The components are numbered 1 through 20:

- 1**: Main cylindrical housing or motor body.
- 2**: A green O-ring seal.
- 3**: A small green pin or screw.
- 4**: A small gear or pinion.
- 5**: A larger gear or pinion.
- 6**: A large gear with multiple teeth.
- 7**: A small pin or screw.
- 8**: A small pin or screw.
- 9**: A large circular flange or cover plate.
- 10**: A large cylindrical component, possibly a pump head or motor housing.
- 11**: A small pin or screw.
- 12**: A small pin or screw.
- 13**: A small pin or screw.
- 14**: A small pin or screw.
- 15**: A small pin or screw.
- 16**: A small pin or screw.
- 17**: A small pin or screw.
- 18**: A small pin or screw.
- 19**: A complex mechanical component, possibly a valve or actuator.
- 20**: A large circular flange or cover plate.



pulsar
NS200-4S200

FIGURA N° 23: C.D.I. / BOBINAS

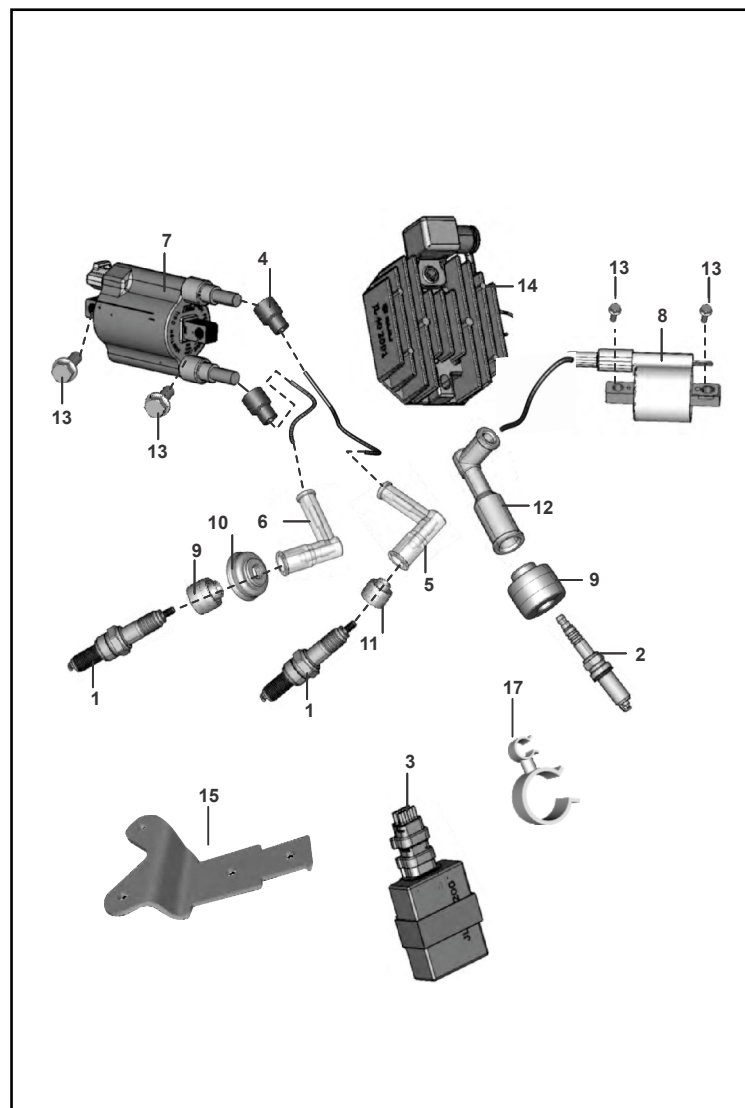


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	DK111028	Bujía RG6HCC	2	2	2	
2	JG351209	Bujía Champion RER6YC	1	1	-	
	JL351218	Bujía Bosch Central	-	-	1	
3	JL351200	C.D.I.	1	-	-	
	JL351241		-	1	-	
	JL351246		-	-	1	
4	DD111012	Antivibrante Capuchón Bujía	2	2	2	
5	JD351207	Capuchón Bujía	1	1	1	
6	AN111015	Capuchón Bujía	1	1	1	
7	JL351201	Bobina de Alta Izquierda	1	-	-	
	JL351232		-	1	-	
8	JL351202	Bobina de Alta Derecha	1	-	-	
	JL351230		-	1	-	
9	DH111013	Antivibrante Capuchón Bujía	2	2	2	
10	DH111016	Antivibrante Capuchón Bujía	1	1	1	
11	DD111011	Antivibrante Capuchón Bujía	1	1	1	
12	DK111011	Capuchón Bujía	1	1	1	
13	39194404	Tornillo	4	4	-	
	KADF0610		-	-	4	
14	JL402001	Regulador	1	1	-	Para Unidad Control Luces
	JL402007		1	1	1	Para Moto con Flasher
15	JL113836	Platina C.D.I.	-	-	1	
16	JL351219	Kit Bobinas	-	-	1	Items: 7 y 8

This exploded view diagram illustrates the assembly of a motorcycle seat. The components are labeled with numbers and callouts:

- 1/12**: The main seat shell, shown in two pieces.
- 2**: Three small rectangular mounting brackets.
- 3**: A small rectangular component, likely a backrest or footrest plate.
- 4**: A circular cap or spacer.
- 5**: Two sets of spacers, each consisting of a washer and a nut.
- 6**: Two long bolts used for securing the seat to the frame.
- 7/13**: The rear section of the seat shell.
- 8**: Two circular caps or spacers.
- 9**: A mounting bracket for the rear section.
- 10**: A long, flexible braided cable, likely for a heated seat or lighting.
- 11**: A bolt used to secure the rear section.
- 14**: A mounting bracket for the rear section.



pulsar
NS200-45200

This diagram shows an exploded view of a mechanical assembly. The main component is a large, dark, L-shaped bracket (1) with a curved top. It is surrounded by various smaller parts and fasteners, numbered 1 through 9. Part 1 is the main bracket. Part 2 is a small pin or bolt. Part 3 is a small pin or bolt. Part 4 is a long, thin rod. Part 5 is a bolt with a washer. Part 6 is a nut. Part 7 is a small bracket or plate. Part 8 is a small bracket or plate. Part 9 is a small pin or bolt. The diagram also shows two alternative bracket designs, 1A and 2A, which are similar to the main bracket 1 but with different shapes. Dashed lines indicate the assembly path for parts 2, 3, and 4.



pulsar
NS200-4S200

This diagram illustrates the assembly of a vehicle chassis component, likely a rear suspension or steering knuckle. The main assembly is shown in a perspective view, with various parts labeled with numbers 1 through 10. The components include:

- 1**: A large, circular, flanged component, possibly a hub or a large bearing.
- 2**: A small, rectangular component, possibly a pin or a small bracket.
- 3**: A small, L-shaped component, possibly a bracket or a pin.
- 4**: A small, curved component, possibly a spring or a bracket.
- 5**: A small, cylindrical component, possibly a pin or a small bearing.
- 6**: A small, curved component, possibly a spring or a bracket.
- 7**: A large, complex component, possibly a hub or a large bearing.
- 8**: A small, rectangular component, possibly a pin or a small bracket.
- 9**: A small, rectangular component, possibly a pin or a small bracket.
- 10**: A small, circular, flanged component, possibly a hub or a large bearing.

The diagram shows the assembly of these components onto the main chassis structure. An inset image in the bottom right corner provides a close-up view of the assembly area, showing the components 8 and 9 being installed onto the chassis.



pulsar
NS200-4S200

[illegible]

pulsar
NS200-AS200

FIGURA N° 28: REPOSAPIÉ CONDUCTOR (1/2)

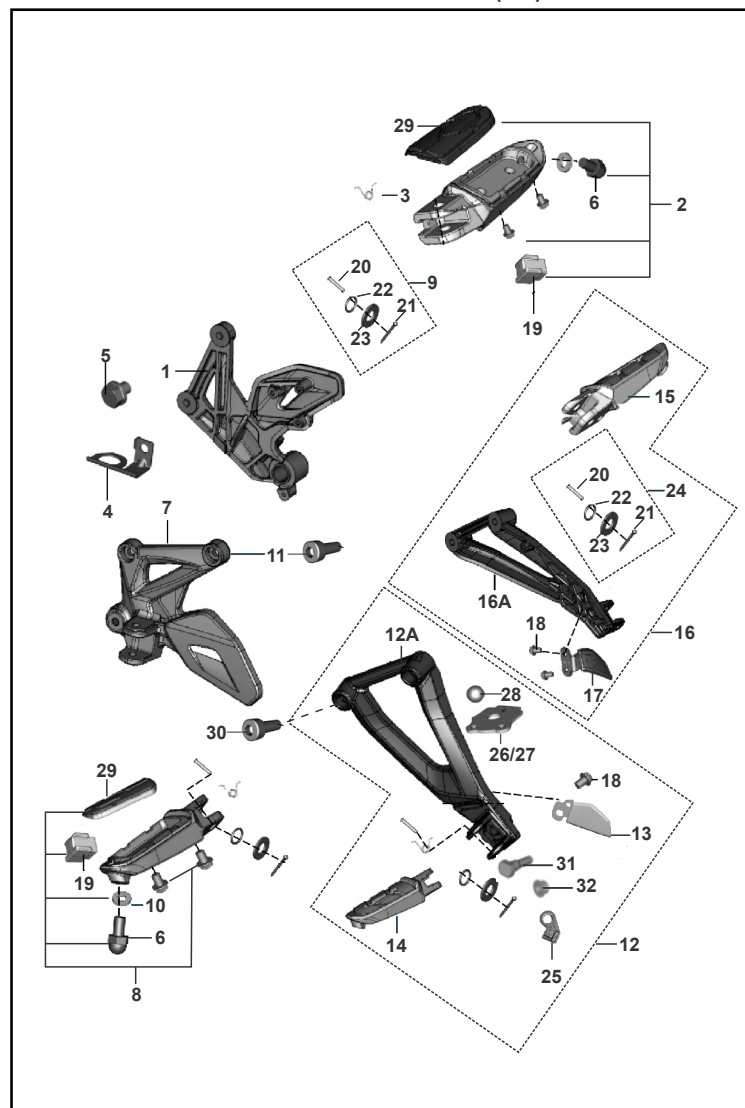


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
1	JL113002	Soporte Reposapie Conductor Der.	1	1	-	Gris Tornado
	56JL3Y1Y		-	-	1	
2	JL113007	Reposapie Conductor Derecho	1	-	-	Gris
	52JL0159		1	1	-	Gris Tornado
	52JL1035		-	-	1	
3	JL113012	Resorte	1	1	1	
4	JL113033	Platina Soporte Swiche Stop	1	1	1	
5	39247504	Tornillo	1	1	1	
6	DG161144	Tornillo	2	2	2	
7	JL113034	Soporte Reposapie Conductor Izq.	1	1	-	
	56JL3X1Y		-	-	1	
8	JL113000	Reposapie Conductor Izq.	1	-	-	Gris
	52JL0158		1	1	-	Gris Tornado
	52JL1024		-	-	1	
9	36JL0041	Kit Pines Reposapie Conductor	2	2	2	Ref. Pág. N° 87
10	LDA00013	Arandela	1	1	1	
11	KACA0820	Tornillo 8x20	4	4	4	
12	52JL0152	Soporte Rep. Pasajero Izq. Comp.	1	1	-	Gris Tornado
12A	JL113013	Soporte Rep. Pasajero Izq. Solo	1	1	-	Gris
	56JL4J1Y		-	-	1	
13	JL113026	Protector Reposapie Pasajero Izq.	1	1	-	
	56JL4L1Y		-	-	1	
14	JL113014	Reposapie Pasajero Izquierdo	1	-	-	Gris
	56JL0101		1	1	-	Gris Tornado
	56JF181Y		-	-	1	
15	JL113016	Reposapie Pasajero Derecho	1	-	-	Gris
	56JL0201		1	1	-	Gris Tornado
	56JF191Y		-	-	1	

FIGURA N° 28: REPOSAPIÉ CONDUCTOR (2/2)

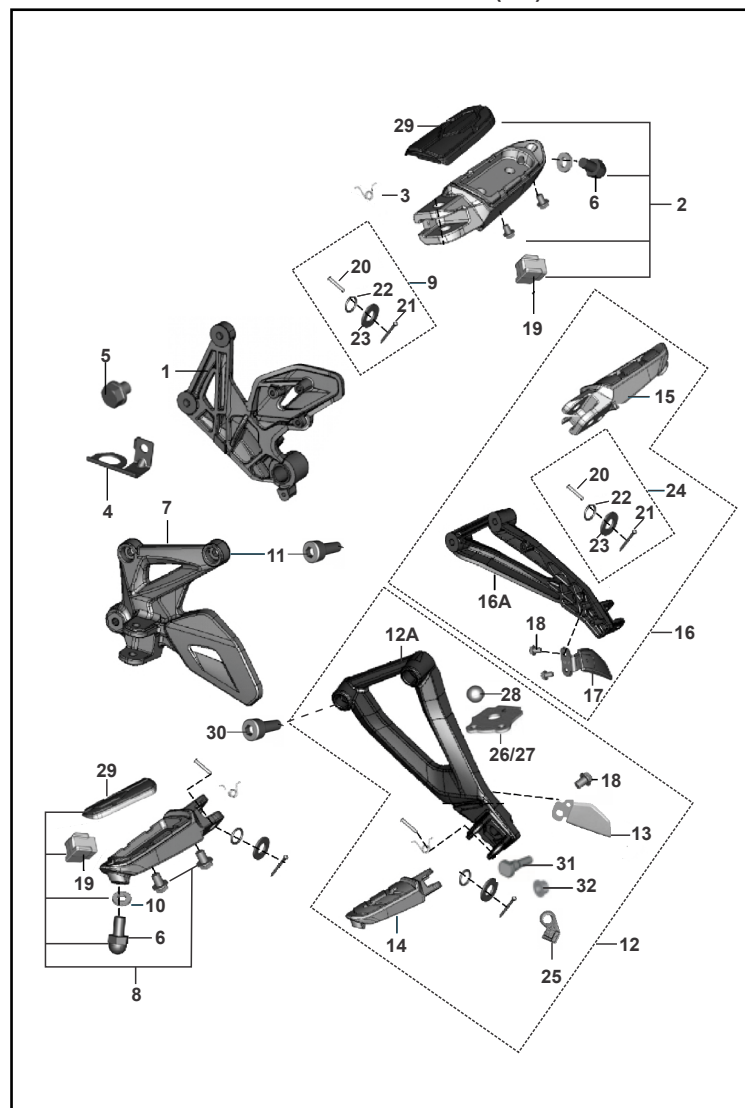


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
16	52JL0153	Soporte Rep. Pasajero Der. Comp.	1	1	-	Gris Tornado
16A	JL113015	Soporte Rep. Pasajero Der. Solo	1	1	-	Gris
	56JL4K1Y		-	-	1	
17	JL113027	Protector Reposapie Pasajero Der.	1	1	-	
	56JL4M1Y		-	-	1	
18	39195404	Tornillo 6x10	4	4	-	Brillante
	KADE0610		4	4	-	Verde (Cabeza con Sombrero)
	KAET0610		-	-	4	
19	JL113028	Antivibrante Reposapie Conductor	2	2	2	
20	JD113019	Pin Pasador	2	2	2	
21	39078408	Pin	4	4	4	
22	30141031	Anillo Retenedor	4	4	4	
23	39104011	Arandela	4	4	4	
24	36JL0015	Kit Pines Reposapie Pasajero	2	2	2	Ref. Pág. N° 86
25	JL113036	Antivibrante Reposapie Pasajero	2	2	2	
26	JL113020	Platina de Seguridad Izquierda	1	-	-	Metálica
	DT113014		1	1	1	Plástica
27	JL113032	Platina de Seguridad Derecha	1	-	-	Metálica
	DT113015		1	1	1	Plástica
28	30101236	Balín	2	2	2	
29	JL113006	Caucho Reposapie Conductor	2	2	2	
30	LAC00016	Tornillo 8x35	4	4	-	
	LAC00046		-	-	4	
31	JL113038	Tornillo Soporte Reposapie Izquierdo	1	1	1	
32	39105515	Tuerca 10 mm.	1	1	1	

FIGURA N° 29: GUARDABARRO DELANTERO (1/2)

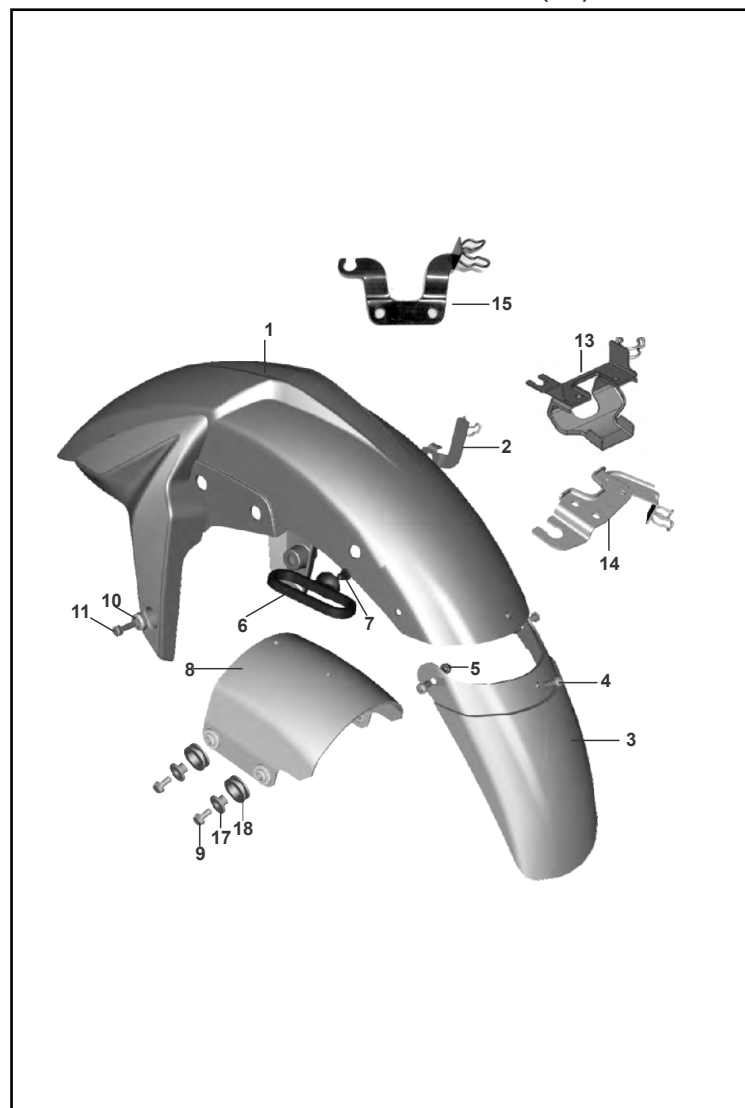


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL181401	Guardabarro Delantero	1	1	-	Para JL151024
	JL181465		1	-	1	Para JL121005
2	JL131811	Guía Manguera Freno	1	-	1	
	JL113834		-	1	-	
3	JL181405	Cola Guardabarro Delantero	1	1	1	
4	39242001	Tornillo 5 mm.	3	-	3	
	KBBA0512		-	3	-	
5	39032615	Tuerca Nylon 5 mm.	3	3	3	
6	DS161125	Guía Cable	1	1	1	
7	DJ161069	Pin Guía Cable	1	1	1	
8	JL181402	Soporte Guardabarro Delantero	1	1	-	Para JL181401
	JL181464		1	-	1	Para JL181465
9	39194604	Tornillo 8 mm.	4	-	4	
	KADF0820		-	4	-	
10	JL181411	Arandela	2	2	-	Para JL181401
	DT181434		2	-	2	Para JL181465
11	KACA0616	Tornillo 6x16	2	2	-	Para JL181401
	KACA0520	Tornillo 5x20	2	-	2	Para JL181465
12	DT181435	Antivibrante	2	-	2	Para JL181465
13	JL131812	Soporte Manguera	1	-	1	
14	DT131832	Soporte Manguera	-	1	-	
15	020248/00	Platina Guía Cables Delanteros	1	-	1	

This exploded view diagram illustrates the assembly of a motorcycle fender. The main components are labeled as follows:

- 1**: The main fender body, a large curved plastic piece.
- 2**: A small mounting bracket for the rear of the fender.
- 3**: The lower fender skirt, a curved plastic piece that fits under the main body.
- 4**: A metal band or strap used to secure the lower skirt to the main body.
- 5**: A small pin or fastener used to attach the band to the main body.
- 6**: A black rubber footpeg.
- 7**: A metal bracket for mounting the footpeg.
- 8**: A small plastic fender tip or guard.
- 9**: A small screw or bolt.
- 10**: A larger screw or bolt for mounting the fender to the frame.
- 11**: A washer or spacer for the mounting screw.
- 12**: A small metal bracket or clip.
- 13**: A metal bracket for mounting the fender to the frame.
- 14**: A metal bracket for mounting the fender to the frame.
- 15**: A metal bracket for mounting the fender to the frame.
- 16**: A small metal bracket or clip.
- 17**: A small screw or bolt.
- 18**: A small screw or bolt.



pulsar
NS200 - AS200

This diagram illustrates the exploded view of a mechanical assembly, likely a bicycle seat post. The components are numbered as follows:

- 1**: The main seat post assembly, shown in a box.
- 2**: A bracket or clamp attached to the main post.
- 3**: A small ring or spacer.
- 4**: A long bolt or screw.
- 5**: A small bolt or screw.
- 6**: A long bolt or screw.
- 7**: A curved metal bracket.
- 8**: A cylindrical sleeve or spacer.
- 9**: A long, angled seat post.
- 10**: A curved metal bracket.
- 11**: A small cap or plug.
- 12**: A small cap or plug.
- 13**: A small bolt or screw.
- 14**: A small cap or plug.
- 15**: A curved metal bracket.
- 16**: A cylindrical sleeve or spacer.
- 17**: A bracket or clamp.
- 18**: A small ring or spacer.



pulsar
NS200-4S200

This diagram illustrates the components of a motorcycle wheel assembly in an exploded view. The parts are labeled as follows:

- 1**: Tire (top right)
- 2**: Axle nut (top center)
- 3**: Wheel rim (top left)
- 4**: Wheel hub (bottom left)
- 5**: Tire (bottom right)

The diagram shows the wheel rim (3) and the wheel hub (4) with their respective spokes. Two axle nuts (2) are shown, one for each side of the wheel. The tires (1 and 5) are shown separately, indicating they are to be mounted onto the rims.



pulsar
NS200-45200

This exploded view diagram illustrates the components of a motorcycle wheel assembly. The parts are numbered as follows:

- 1**: The main wheel rim and spokes.
- 2**: A central axle component, shown in a dashed box.
- 3**: A small circular washer or spacer.
- 4**: A larger circular washer or spacer.
- 5**: A multi-vaned brake disc.
- 6**: Six small screws used to secure the brake disc.
- 7**: A short section of the axle.
- 8**: A hub or bearing housing.
- 9**: A small pin or clip.
- 10**: A small pin or clip.
- 11**: A small pin or clip.
- 12**: A small pin or clip.
- 13**: A long axle shaft.
- 14**: A washer or spacer.
- 15**: A nut or lock nut.



pulsar
NS200-4S200

This exploded view diagram illustrates the components of a bicycle master brake lever assembly. The parts are numbered as follows:

- 1:** Brake lever body
- 2:** Pin
- 3:** Bolt
- 4:** Washer and nut
- 5:** Screws
- 6:** Mounting plate
- 7:** Rubber pad
- 8:** Brake lever body (shown in a dashed box)
- 9:** Mounting bracket
- 10:** Washers
- 11:** Nuts
- 12:** Brake cable
- 13:** Pins
- 14:** Spring and internal components
- 15:** Lever pivot
- 16:** Cable end cap



pulsar
NS200-45200

The diagram illustrates the assembly of a motorcycle master cylinder. It features an exploded view of the components on the left, a perspective view of the assembled unit on the right, and a detailed legend on the bottom right. The parts are numbered as follows:

- 1:** Master cylinder body
- 2:** Bleed screw
- 3:** Bleed screw cap
- 4:** Dust cap
- 5:** Brake pad spring
- 6:** Brake pad
- 7:** Piston
- 8:** Piston seal
- 9:** Insulator
- 10:** Screws

Legend:

- Retenedor** (Retainer)
- Sello de Pistón** (Piston Seal)
- Capuchón Tornillo de Sangrado** (Bleed Screw Cap)
- Guardapolvo** (Dust Cap)
- Aislante** (Insulator)
- Pistón** (Piston)
- Tornillo de Sangrado** (Bleed Screw)
- Resorte Pasta Freno** (Brake Pad Spring)



FIGURA N° 35: RUEDA TRASERA

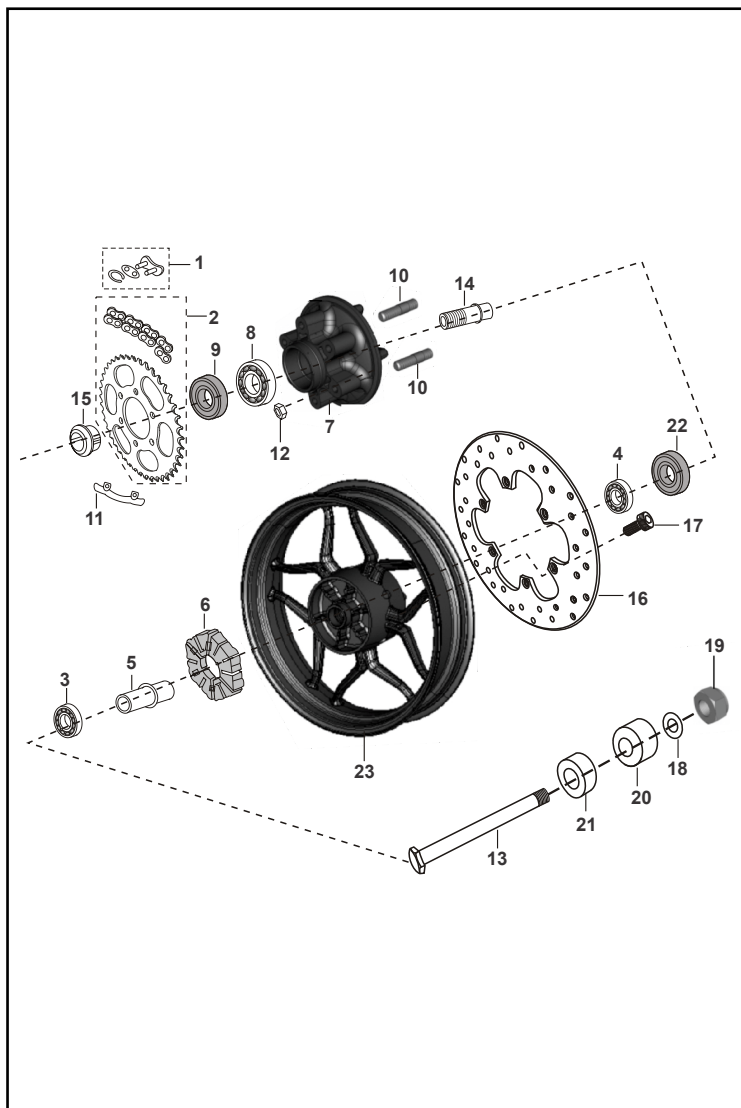


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	DK151036	Empate Cadena	1	1	1	
2	36JL0009	Kit Sprocket y Cadena	1	1	1	Ref. Pág. N° 86
3	39224120	Rodamiento Bolas	1	-	1	
	KPBC6202		-	1	-	
4	39224220	Rodamiento Bolas	1	-	1	
	KPBC6302		-	1	-	
5	JL131216	Buje	1	1	1	
6	JL131232	Caucho Porta Sprocket	1	1	1	
7	JL131225	Porta Sprocket	1	1	1	
8	DK151013	Rodamiento Bolas 47x25x12	1	1	1	
9	DK151012	Reten Porta Sprocket	2	2	2	
10	LAA00019	Tornillo 8x1.25x50	6	6	6	
11	JL131226	Arandela Sprocket	3	3	3	
12	LCA00009	Tuerca 8 mm.	6	6	6	
13	JL131203	Eje Rueda Trasera	1	1	1	
14	DK151015	Buje Porta Sprocket	1	1	1	
15	JL131211	Buje	1	1	1	
16	JL131218	Disco Freno Trasero	1	-	-	Dorado Negro
	52JL0142		1	1	1	
17	39203804	Tornillo 6 mm.	6	6	6	
18	LDB00029	Arandela	2	2	2	
19	LCJ00002	Tuerca 14x1.5x12.5	1	1	1	
20	DK151081	Buje Eje Rueda Trasera	1	1	1	
21	DK151082	Buje	1	1	1	
22	30151082	Retenedor (42-26-8)	1	1	1	
23	JL131209	Rin Trasero 3.50x17	1	1	1	

This diagram illustrates the components of a power window motor assembly. The parts are numbered as follows:

- 1:** Motor housing
- 2:** Motor shaft
- 3:** Drive cable
- 4:** Cable bracket
- 5:** Cable end cap
- 6:** Cable end cap
- 7:** Cable end cap
- 9:** Cable end cap
- 10:** Cable end cap
- 11:** Cable end cap
- 12:** Cable end cap
- 13:** Cable end cap
- 14:** Cable end cap
- 15:** Cable end cap
- 16:** Cable end cap
- 17/17A:** Cable end cap
- 18:** Cable end cap
- 19:** Cable end cap
- 20:** Cable end cap
- 21:** Cable end cap
- 22:** Cable end cap
- 23:** Cable end cap
- 24:** Cable end cap
- 25:** Cable end cap



pulsar
NS200-4S200

This diagram illustrates the exploded view of a mechanical assembly, likely a fuel system component. The parts are numbered as follows:

- 1:** Main engine or pump unit.
- 2:** Vertical shaft or connector.
- 3:** Flexible braided hose.
- 4:** Fitting or elbow.
- 5:** Cap or cover for the top of the vertical shaft.
- 6:** Short section of flexible braided hose.
- 7:** Ring or clip.
- 9:** Small pin or clip.
- 10:** Small screw or pin.
- 11:** Three O-rings and a small cap.
- 12:** Two large O-rings.
- 13:** Two long, thin blades or strips.
- 14:** Small pin or clip.
- 15:** Small O-ring.
- 16:** Small pin or clip.
- 17/17A:** A complex assembly including a spring, a small pin, a small cap, and a small O-ring.
- 18:** Cap or cover for the top of the vertical shaft.
- 19:** Cap or cover for the top of the vertical shaft.
- 20:** Small pin or clip.
- 21:** Cap or cover for the top of the vertical shaft.
- 22:** Small pin or clip.
- 23:** Small pin or clip.
- 24:** Small pin or clip.
- 25:** A complex assembly including a spring, a small pin, a small cap, and a small O-ring.

 **pulsar**
NS200 - 4S200

An exploded view diagram of a mechanical assembly. The components are numbered 1 through 10. Component 1 is a long, angled arm with a four-button control head at one end and a circular mounting bracket at the other. Component 2 is a small screw. Component 3 is a small cylindrical pin. Component 4 is a C-clamp. Component 5 is a vertical actuator or solenoid. Component 6 is a small hex nut. Component 7 is a bracket with a circular hole. Component 8 is a coiled spring. Component 9 is a small circular washer or spacer. Component 10 is a small O-ring or seal.



pulsar
NS200-4S200

This exploded view diagram illustrates the components of a motorcycle handlebar assembly. The parts are numbered as follows:

- 1**: Main handlebar tube
- 2**: Left handlebar grip
- 3**: Bar end cap
- 4**: Right handlebar grip
- 5**: Right handlebar grip cap
- 6**: Right handlebar grip cap
- 7**: Right handlebar grip cap
- 8**: Right handlebar grip cap
- 9**: Right handlebar grip cap
- 10**: Right handlebar grip cap
- 11**: Left handlebar grip
- 12**: Left handlebar grip cap
- 13**: Right handlebar grip cap
- 14**: Right handlebar grip cap
- 15**: Right handlebar grip cap
- 16**: Right handlebar grip cap
- 17**: Right handlebar grip cap
- 18**: Right handlebar grip cap
- 19**: Right handlebar grip cap
- 20**: Right handlebar grip cap
- 21**: Right handlebar grip cap
- 22**: Right handlebar grip cap
- 23**: Right handlebar grip cap
- 24**: Right handlebar grip cap
- 25**: Right handlebar grip cap



pulsar
NS200-45200

This exploded view diagram illustrates the components of a motorcycle handlebar assembly. The parts are numbered as follows:

- 1**: Main handlebar tube.
- 2**: Left handlebar grip.
- 3**: Left handlebar clamp.
- 4**: Right handlebar clamp.
- 5**: Right handlebar grip.
- 6**: Right handlebar grip.
- 7**: Right handlebar tube.
- 8**: Right handlebar grip.
- 9**: Right handlebar grip.
- 10**: Right handlebar grip.
- 11**: Right handlebar grip.
- 12**: Right handlebar grip.
- 13**: Right handlebar grip.
- 14**: Right handlebar grip.
- 15**: Right handlebar grip.
- 16**: Right handlebar grip.
- 17**: Right handlebar grip.
- 18**: Right handlebar grip.
- 19**: Right handlebar grip.
- 20**: Right handlebar grip.
- 21**: Right handlebar grip.
- 22**: Right handlebar grip.
- 23**: Right handlebar grip.
- 24**: Right handlebar grip.
- 25**: Right handlebar grip.

The diagram shows the assembly sequence, with parts like the handlebar tube (1) and clamps (3, 4) being the primary structural components. Grips (2, 5, 6, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25) are shown as separate components. The right handlebar assembly (7, 21, 25) is shown as a sub-assembly. The right handlebar grip (2) is shown as a separate component. The right handlebar grip (5) is shown as a separate component. The right handlebar grip (6) is shown as a separate component. The right handlebar grip (8) is shown as a separate component. The right handlebar grip (9) is shown as a separate component. The right handlebar grip (10) is shown as a separate component. The right handlebar grip (11) is shown as a separate component. The right handlebar grip (12) is shown as a separate component. The right handlebar grip (13) is shown as a separate component. The right handlebar grip (14) is shown as a separate component. The right handlebar grip (15) is shown as a separate component. The right handlebar grip (16) is shown as a separate component. The right handlebar grip (17) is shown as a separate component. The right handlebar grip (18) is shown as a separate component. The right handlebar grip (19) is shown as a separate component. The right handlebar grip (20) is shown as a separate component. The right handlebar grip (21) is shown as a separate component. The right handlebar grip (22) is shown as a separate component. The right handlebar grip (23) is shown as a separate component. The right handlebar grip (24) is shown as a separate component. The right handlebar grip (25) is shown as a separate component.



pulsar
NS200-4S200

FIGURA N° 39: SUSPENSIÓN DELANTERA (1/2)

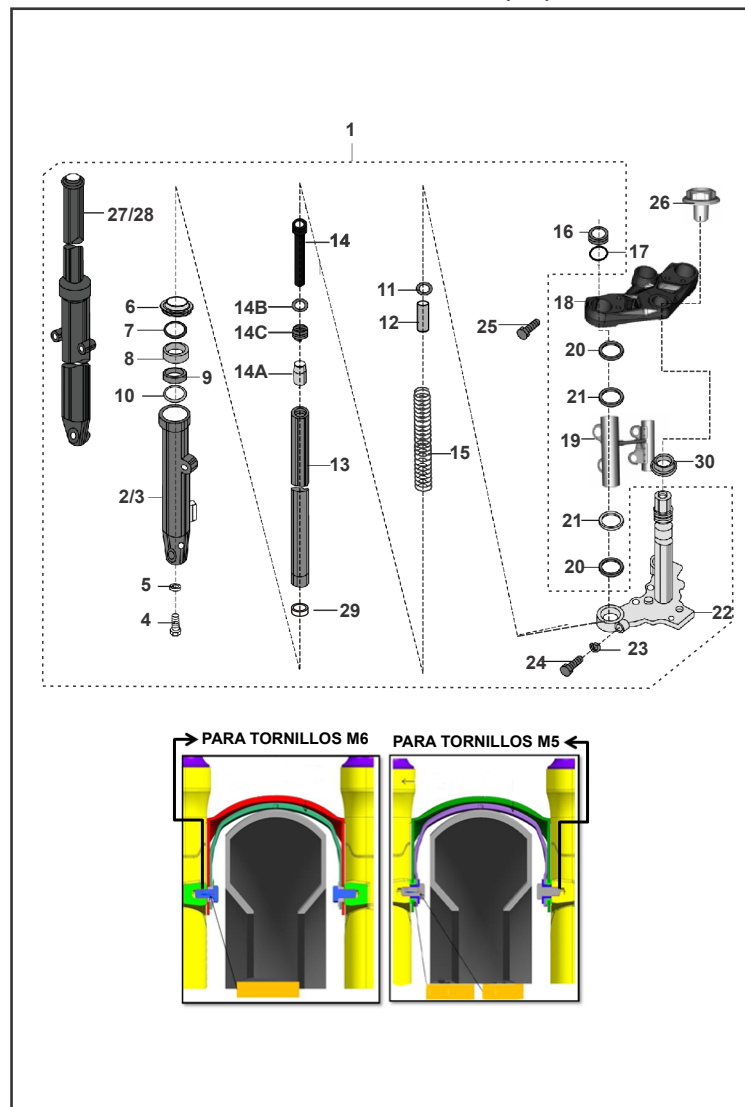


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
1	JL151024	Suspensión Delantera	1	1	-	Para Tornillo M6
	JL121005		1	-	1	Para Tornillo M5
2	JL151002	Camisa Tubo Telescópico Izq.	1	1	-	
	DT121048		1	-	1	Para JL121005
3	JL151003	Camisa Tubo Telescópico Der.	1	1	-	
	DT121040		1	-	1	Para JL121005
4	DK181006	Tornillo 10x1.5x35	2	2	2	
5	DK181007	Arandela de Sellado	2	2	2	
6	DK181021	Guardapolvo	2	2	2	
7	DK181018	Arandela	2	2	2	
8	DK181019	Reten Tubo Telescópico	2	2	2	
9	DK181017	Buje Guía	2	2	2	
10	DK181020	Pin de Seguridad	2	2	2	
11	DK181015	Arandela	2	2	2	
12	JL151012	Buje	2	2	2	
13	JL151004	Tubo Telescópico	2	2	-	
	JL121008		2	-	2	Para JL121005
14	DK181010	Cilindro Tubo Telescópico	2	2	2	
14A	DK181009	Buje Cilindro Tubo Telescópico	2	2	2	
14B	DK181012	Pin Cilindro Tubo Telescópico	2	2	2	
14C	DK181013	Resorte	2	2	2	
15	JL121001	Resorte Suspensión	2	2	2	
16	DK181022	Tornillo Tubo Telescópico	2	2	2	
17	DK181023	Anillo Retenedor	2	2	2	
18	JL151032	Cabeza Espiga	1	-	-	Negra
	56JL335X		1	1	1	Negro Mate
19	JL181235	Soporte Farola	1	-	1	

The diagram illustrates the assembly of a mechanical component, likely a door lock or latch. The main exploded view shows the following parts:

- Part 1:** The main cylindrical body of the lock.
- Parts 2/3:** The internal mechanism, including the bolt and spring.
- Parts 4, 5:** Small pins or spacers.
- Parts 6, 7, 8, 9, 10:** Washers or spacers for the bolt assembly.
- Parts 11, 12:** A small pin and a sleeve.
- Parts 13, 14, 14A, 14B, 14C:** Various pins and spacers for the internal mechanism.
- Part 15:** A coiled spring.
- Parts 16, 17:** A small pin and a washer.
- Part 18:** A small metal plate or bracket.
- Parts 19, 20, 21:** Washers or spacers for the mounting plate.
- Part 22:** The mounting plate.
- Part 23:** A small pin or screw.
- Part 24:** A small screw or pin.
- Part 25:** A small screw or pin.
- Part 26:** A small pin or screw.
- Part 27/28:** The external handle or knob.
- Part 29:** A small pin or screw.
- Part 30:** A small pin or screw.

Below the main diagram, two cross-sectional views illustrate the installation of the lock into a door:

- PARA TORNILLOS M6:** Shows the lock installed using M6 screws. The door is yellow, and the lock body is green.
- PARA TORNILLOS M5:** Shows the lock installed using M5 screws. The door is yellow, and the lock body is green.



pulsar
NS200-4S200



pulsar
NS200-4S200

FIGURA N° 41: COMPLEMENTOS CUBIERTAS TANQUE GASOLINA (PULSAR 200NS - NS200 BS-IV)

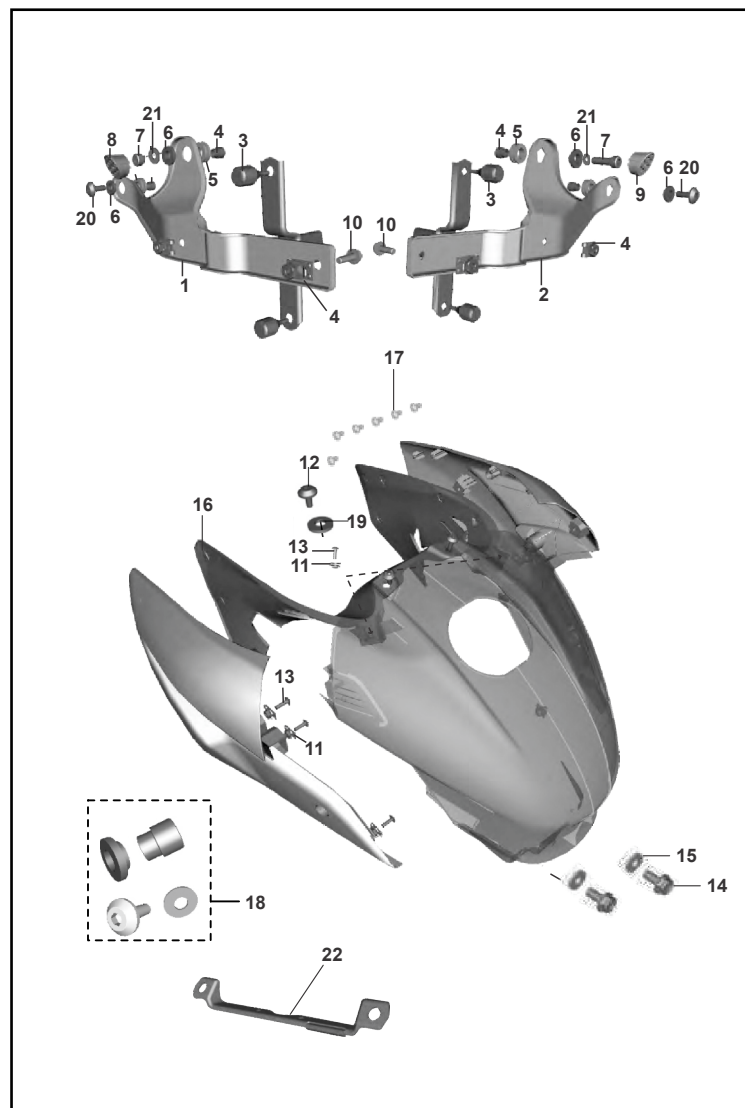


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL171023	Soporte Tapa Lateral Derecha	1	-	1	
	JL171099		1	-	1	
2	JL171022	Soporte Tapa Lateral Izquierda	1	-	1	
3	JL171057	Antivibrante	4	-	4	
4	JL171071	Buje Cubierta Tanque	8	-	8	
5	JL171024	Antivibrante	2	-	2	
6	JL171070	Antivibrante	8	-	8	
7	LAC00063	Tornillo 6x1x22	2	-	2	
8	JL171062	Rejilla Derecha	1	-	1	
9	JL171061	Rejilla Izquierda	1	-	1	
10	KADB0516	Tornillo 5x16	2	-	2	Negro
	39206004		2	-	2	Gris
11	DJ161229	Tuerca 5 mm.	16	-	16	
12	LAC00022	Tornillo 6x15	4	-	4	
13	KBUB0516	Tornillo 5x16	8	-	8	Negro
	39190701		8	-	8	Gris
14	KADA0512	Tornillo 5x12	2	-	2	
15	31161078	Arandela	2	-	2	
16	JL171048	Cubierta Central Tanque Gasolina	1	-	1	
17	39177802	Tornillo 4x4	12	-	12	
18	36JL0031	Kit Tornillos Tanque	1	-	1	Ref. Pag. N° 87
19	39178924	Arandela Nylon	2	-	2	
20	LAC00034	Tornillo 6x20	2	-	2	
21	39023911	Arandela	2	-	2	
22	JL111102	Soporte Cubierta Tanque	1	-	1	

FIGURA N° 42: COMPLEMENTOS CUBIERTAS TANQUE GASOLINA (PULSAR AS200)

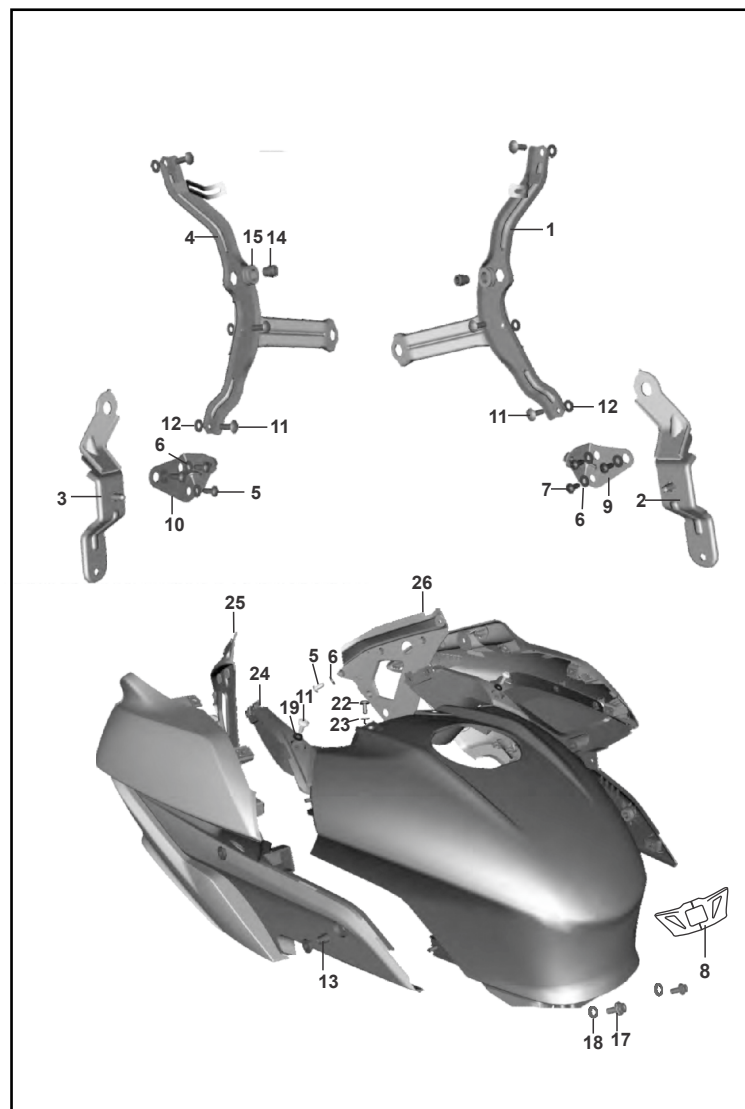


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL181449	Soporte Carenaje Izquierdo	-	1	-	
2	JL181447	Soporte Direccional Izquierdo	-	1	-	
3	JL181448	Soporte Direccional Derecho	-	1	-	
4	JL181450	Soporte Carenaje Derecho	-	1	-	
5	39177802	Tornillo 4x4	-	12	-	
6	KDAA0408	Arandela	-	12	-	
7	LBR00002	Tornillo 5 mm.	-	6	-	
8	JL171078	Protector Tanque	-	1	-	Opcional
9	JL181456	Soporte Carenaje Izquierdo	-	1	-	No Ilustrado
10	JL181457	Soporte Carenaje Derecho	-	1	-	No Ilustrado
11	LBU00023	Tornillo 5x0.8x16	-	9	-	
12	KDBA0512	Arandela	-	9	-	
13	JL171070	Antivibrante	-	2	-	
14	JL171071	Buje Cubierta Tanque	-	2	-	
15	JL171024	Antivibrante	-	4	-	
16	KADA0630	Tornillo 6x30	-	2	-	No Ilustrado
17	KADA0512	Tornillo 5x12	-	4	-	
18	KDBB0512	Arandela	-	2	-	
19	LAC00063	Tornillo 6x1x22	-	2	-	
20	LAC00034	Tornillo 6x20	-	2	-	No Ilustrado
21	LDB00023	Arandela	-	4	-	No Ilustrado
22	LAC00022	Tornillo	-	2	-	
23	31161078	Arandela Nylon	-	2	-	
24	JL181439	Cubierta Central Tanque Gasolina	-	1	-	
25	JL181424	Cubierta Interna Carenaje Izq.	-	1	-	
26	JL181425	Cubierta Interna Carenaje Der.	-	1	-	

FIGURA N° 43: TANQUE DE GASOLINA / GRIFO GASOLINA (1/2)

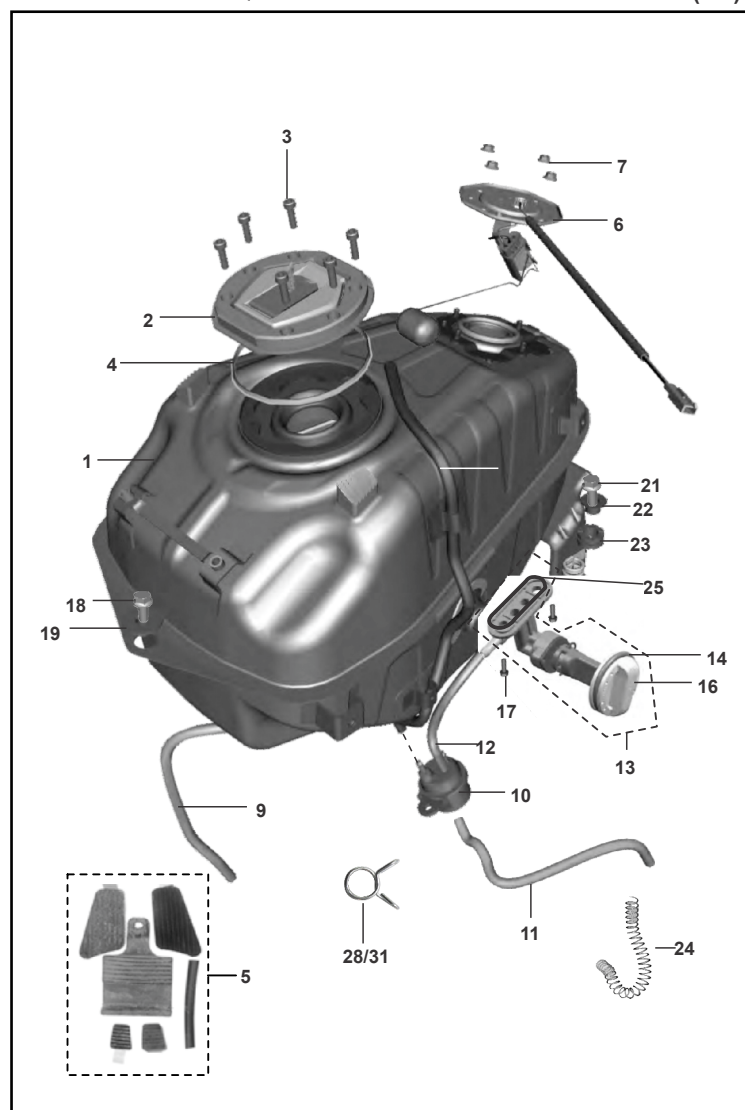


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL171044	Tanque de Gasolina	1	-	1	
		(Con Medidor en la Parte Inferior)				
	JL171081	Tanque de Gasolina	1	1	1	
		(Con Medidor en la Parte Superior)				
2	JL171600	Tapa Tanque Gasolina	1	-	1	Gris
	56JL0401		1	1	1	Gris Tornado
3	39238104	Tornillo Tapa Tanque Gasolina	6	-	6	
	KACB0516		-	6	-	
4	JL171049	Antivibrante Tapa Tanque Gas.	1	1	1	
5	36JL0012	Kit Antivibrantes Tanque Gasolina	1	1	1	
6	JL402600	Sensor Nivel de Gasolina	1	-	1	
		(Tanque de Gas. Con Medidor en la Parte Inf.)				
	JL402602	Sensor Nivel de Gasolina	1	1	1	
		(Tanque de Gas. Con Medidor en la Parte Sup.)				
6A	DK141028	Anillo Retenedor Sensor Nivel Gasolina	1	1	1	No Ilustrado
7	39248415	Tuerca 5 mm.	4	-	4	
	KCGA0505		-	4	-	
8	JL171037	Conducto Respiración	1	1	1	No Ilustrado
9	JL171063	Conducto Drenaje	1	1	1	
10	JL171802	Filtro de Gasolina	1	1	1	
11	JL171036	Conducto Gasolina (Carburador)	1	1	1	
12	JL171035	Conducto Gasolina (Tanque)	1	1	1	
13	JL171800	Grifo de Gasolina	1	1	1	
14	JL171060	Anillo Retenedor Perilla Grifo Gasolina	1	1	1	
15	JL171803	Pin Perilla Grifo Gasolina	1	1	1	No Ilustrado

This exploded view diagram illustrates the components of a fuel tank assembly. The main fuel tank (1) is shown with its top cover (2) and various mounting hardware (3, 4, 18, 19). A fuel filler neck (6) with a cap (7) is attached to the top. A fuel pump assembly (10, 11, 12) is connected to the side of the tank. A fuel filter (13) is shown in a dashed box, along with a fuel line (14) and a fuel nozzle (16). A fuel gauge (17) is also shown. A fuel hose (9) is connected to the bottom of the tank. A fuel line (11) is connected to the side of the tank. A fuel line (12) is connected to the top of the tank. A fuel line (13) is connected to the side of the tank. A fuel line (14) is connected to the side of the tank. A fuel line (16) is connected to the side of the tank. A fuel line (17) is connected to the side of the tank. A fuel line (18) is connected to the side of the tank. A fuel line (19) is connected to the side of the tank. A fuel line (20) is connected to the side of the tank. A fuel line (21) is connected to the side of the tank. A fuel line (22) is connected to the side of the tank. A fuel line (23) is connected to the side of the tank. A fuel line (24) is connected to the side of the tank. A fuel line (25) is connected to the side of the tank. A fuel line (26) is connected to the side of the tank. A fuel line (27) is connected to the side of the tank. A fuel line (28/31) is connected to the side of the tank.



pulsar
NS200-4S200

Exploded view diagram of a motorcycle seat assembly. The diagram shows the seat base (9), backrest (17), and various mounting hardware. The components are labeled with numbers 1 through 17. A separate inset box labeled 11 shows two circular spacers and a small rectangular plate.



pulsar
NS200-45200

This exploded view diagram illustrates the components of a motorcycle helmet assembly. The main assembly includes a shell (1), a chin bar (5), a cheek pad (4), and a chin strap (6). A separate wiring harness (8) is shown. A circular gasket (14) and an oval-shaped gasket (15) are also depicted. The diagram uses numbered callouts to identify specific parts and their assembly points.



pulsar
NS200-4S200

This diagram illustrates the components of a rear window wiper system. The parts are numbered as follows:

- 1:** A long, flexible black wiper blade with a metal mounting bracket at one end.
- 2:** A shorter, flexible black wiper blade with a metal mounting bracket at one end.
- 3:** A coiled black cable with a connector at one end and a plug at the other.
- 4:** A small, oval-shaped component, likely a fuse or a connector.
- 5:** A circular metal component, likely a wiper motor or a mounting bracket.



pulsar
NS200-4S200

FIGURA N° 47: GUARDACADENA / GUARDABARRO TRASERO (PULSAR 200NS - NS200 BS-IV)

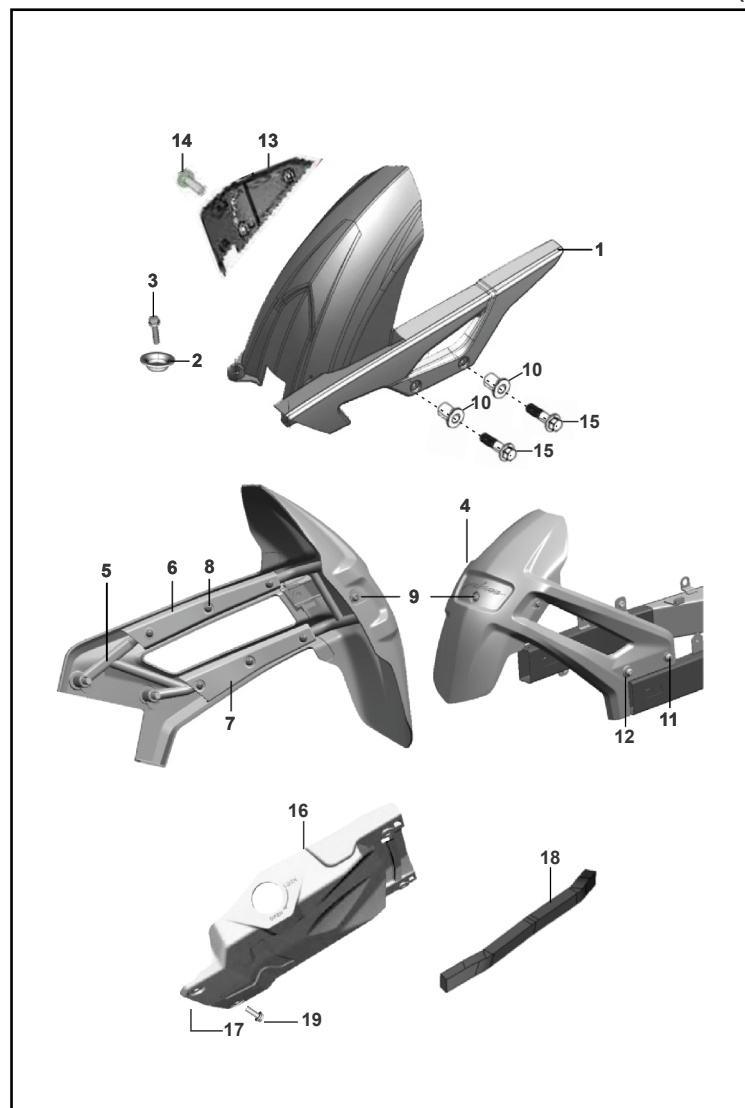


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL181205	Guardacadena	1	1	1	
2	JG122028	Arandela	2	2	2	
3	39179104	Tornillo 6x8	2	2	2	
4	JL181409	Guardabarro Trasero	1	-	-	Con Logo "PULSAR"
	DT181414		1	-	1	Sin Logo "PULSAR"
5	JL181006	Soporte Guardabarro	1	-	-	Guardabarro con Logo
	DT181000		1	-	1	Guardabarro sin Logo
6	JL181407	Cubierta Soporte Guardabarro	1	-	-	Guardabarro con Logo
	DT181415		1	-	1	Guardabarro sin Logo
7	JL181408	Cubierta Soporte Guardabarro	1	-	1	
8	KBUB0410	Tornillo	6	-	6	
9	LAC00037	Tornillo 6x1x8	3	-	3	
10	JL171040	Buje 6x10	2	2	2	
11	LAC00036	Tornillo 8x1.25x40	2	-	2	
12	JL181410	Buje	2	-	2	
13	JL181253	Cubierta Cadena Lado Derecho	1	1	1	
14	LAC00008	Tornillo 6x1x20	2	-	2	
15	LAC00054	Tornillo 6x1x16	2	2	2	
16	JL181209	Cubierta Trasera Interna	1	-	1	
17	39023911	Arandela	4	-	4	
18	JL181221	Antivibrante	1	-	1	
19	39194304	Tornillo 6x14	2	-	2	

FIGURA N° 48: FAROLA / CARENAJE (PULSAR 200NS - NS200 BS-IV) (1/2)

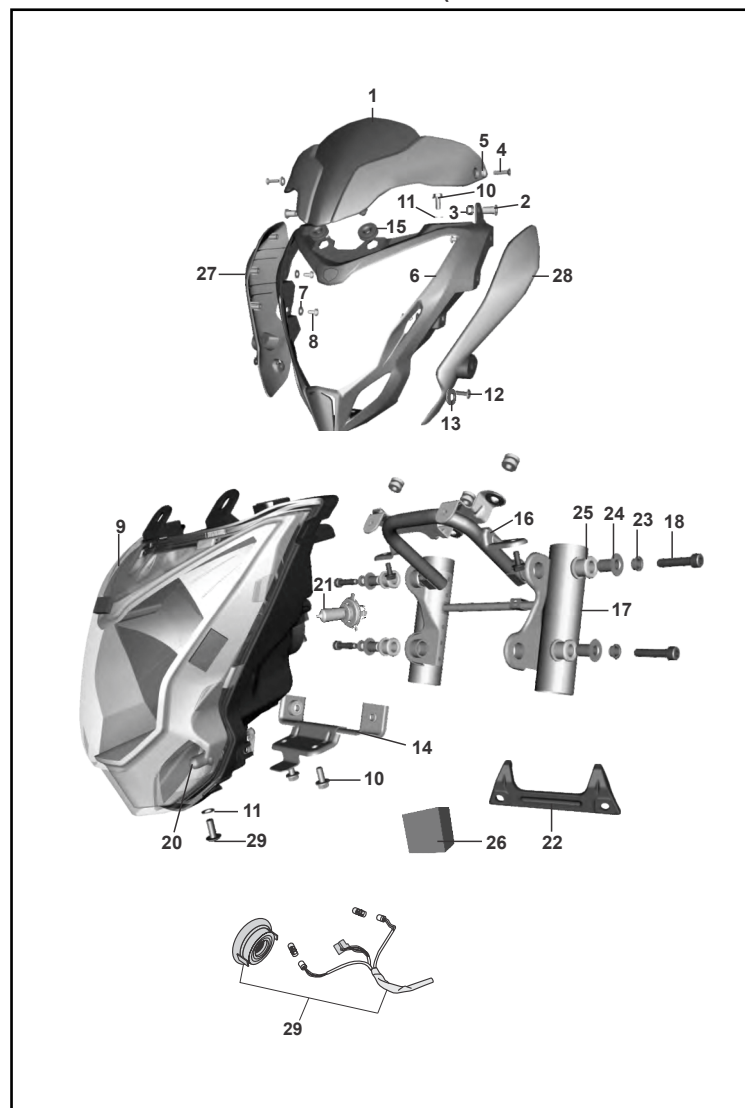


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL181008	Visor Carenade	1	-	1	
2	JG181236	Tuerca M5	2	-	2	No Ilustrado
3	JG181235	Arandela	2	-	2	No Ilustrado
4	LBS00001	Tornillo 5x20	2	-	2	
5	JL181247	Antivibrante	2	-	2	
6	JL181203	Carenaje Farola	1	-	1	
7	LDA00007	Arandela	6	-	6	
8	LBR00002	Tornillo	6	-	6	
9	JL401012	Farola	1	-	1	
10	KADD0614	Tornillo	2	-	2	
11	39019811	Arandela	3	-	3	
12	KBUC0516	Tornillo 5x16	2	-	2	
13	39214124	Arandela	2	-	2	
14	JL181236	Soporte Inferior	1	-	1	
15	JL181249	Antivibrante	1	-	1	
16	JL181237	Soporte Superior	1	-	1	
17	JL181235	Soporte Farola	1	-	1	
18	KACB0835	Tornillo	4	-	4	
19	36JL0017	Kit Tornillos Visor Carenade	1	-	1	No Ilustrado
20	DH191037	Bombillo Piloto 12V 3W	2	-	2	
21	EC401030	Bombillo Farola 12V 60/55W	1	-	1	
22	JL181283	Platina Plástica Farola	1	-	1	
23	JL181257	Buje Carenade	1	-	1	
24	PA181293	Buje	4	-	4	
25	PA181292	Antivibrante	4	-	4	

This exploded view diagram illustrates the components of a motorcycle headlight assembly. The parts are numbered as follows:

- 1**: Main headlight housing (top)
- 2**: Side fairing (right)
- 3**: Small pin/bush
- 4**: Small pin/bush
- 5**: Small pin/bush
- 6**: Main headlight housing (bottom)
- 7**: Small pin/bush
- 8**: Small pin/bush
- 9**: Headlight lens
- 10**: Small pin/bush
- 11**: Small pin/bush
- 12**: Small pin/bush
- 13**: Small pin/bush
- 14**: Mounting bracket
- 15**: Small pin/bush
- 16**: Mounting bracket
- 17**: Mounting bracket
- 18**: Bolt
- 19**: Small pin/bush
- 20**: Headlight lens
- 21**: Small pin/bush
- 22**: Mounting bracket
- 23**: Small pin/bush
- 24**: Small pin/bush
- 25**: Small pin/bush
- 26**: Mounting bracket
- 27**: Side fairing (left)
- 28**: Side fairing (right)
- 29**: Headlight lens



pulsar
NS200-4S200

FIGURA N° 49: FAROLA / CARENAJE (PULSAR AS200)

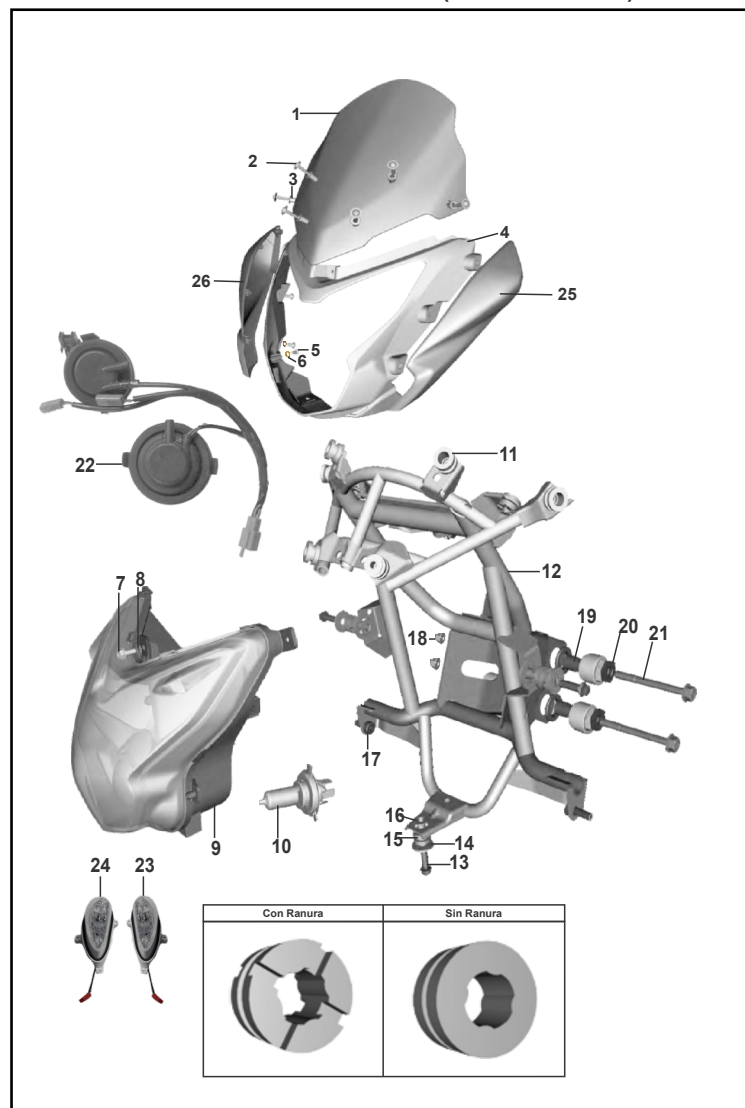


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL181426	Visor Carenaje	-	1	-	
2	LBU00030	Tornillo 5x16	-	7	-	
3	JL181453	Antivibrante	-	7	-	
4	JL181417	Carenaje Farola	-	1	-	
5	LBR00002	Tornillo	-	10	-	
6	KDBA0512	Arandela	-	10	-	
7	KADC0616	Tornillo 6x14	-	1	-	
8	KDBA0613	Arandela	-	1	-	
9	JL401017	Farola	-	1	-	
10	DK201043	Bombillo Farola 12V 60/55W	-	2	-	
11	JL181245	Antivibrante	-	6	-	
12	JL181416	Soporte Farola	-	1	-	
13	KAEG0620	Tornillo	-	3	-	
14	39021111	Arandela 6 mm.	-	3	-	
15	DJ181064	Antivibrante	-	3	-	Con Ranura
	JL181029		-	3	-	Sin Ranura
16	DJ181029	Buje Soporte Carenaje	-	3	-	
17	JD171801	Tornillo	-	2	-	
18	39253515	Tuerca	-	2	-	
19	DT181311	Espaciador	-	4	-	
20	DT181310	Arandela	-	4	-	
21	LAD00120	Tornillo 8x35	-	2	-	
22	YJL06003	Instalación Farola	-	1	-	
23	YJL06002	Luz Farola Izquierda	-	1	-	
24	YJL06001	Luz Farola Derecha	-	1	-	
25	JL181418	Enfocador Izquierdo	-	1	-	
26	JL181419	Enfocador Derecho	-	1	-	

This diagram illustrates the assembly of a three-point hitch with PTO shafts. The main component is the hitch frame (3), which features two mounting points for PTO shafts (1 and 2). The PTO shafts are shown in an exploded view, with their respective PTO input shafts (4 and 5) and PTO output shafts (6 and 7) indicated by dashed lines. The PTO input shafts (4 and 5) are shown with their respective PTO output shafts (6 and 7) and are labeled with the part numbers 4, 5, 6, and 7. The PTO output shafts (6 and 7) are shown with their respective PTO input shafts (4 and 5) and are labeled with the part numbers 6 and 7. The PTO input shafts (4 and 5) are shown with their respective PTO output shafts (6 and 7) and are labeled with the part numbers 4, 5, 6, and 7. The PTO output shafts (6 and 7) are shown with their respective PTO input shafts (4 and 5) and are labeled with the part numbers 6 and 7.



pulsar
NS200 - 4S200

This exploded view diagram illustrates the assembly of a mechanical component, likely a motorized bracket or support. The components are numbered 1 through 18:

- 1**: A large, flat, rectangular base plate with a central cutout and mounting holes.
- 2**: A large, L-shaped bracket with a triangular cutout and mounting holes.
- 3**: A small screw or bolt.
- 4**: A cylindrical component, possibly a motor or actuator.
- 5**: A small screw or bolt.
- 6**: A small bracket or arm.
- 7**: A small bracket or arm.
- 8**: A small screw or bolt.
- 9**: A small screw or bolt.
- 10**: A small bracket or arm.
- 11**: A small bracket or arm.
- 12**: A small bracket or arm.
- 13**: A small screw or bolt.
- 14**: A small bracket or arm.
- 15**: A small screw or bolt.
- 16**: A small screw or bolt.
- 17**: A small screw or bolt.
- 18**: A small screw or bolt.



pulsar
NS200-4S200

[illegible]

pulsar
NS200-4S200

FIGURA N° 53: EQUIPO ELÉCTRICO (1/2)

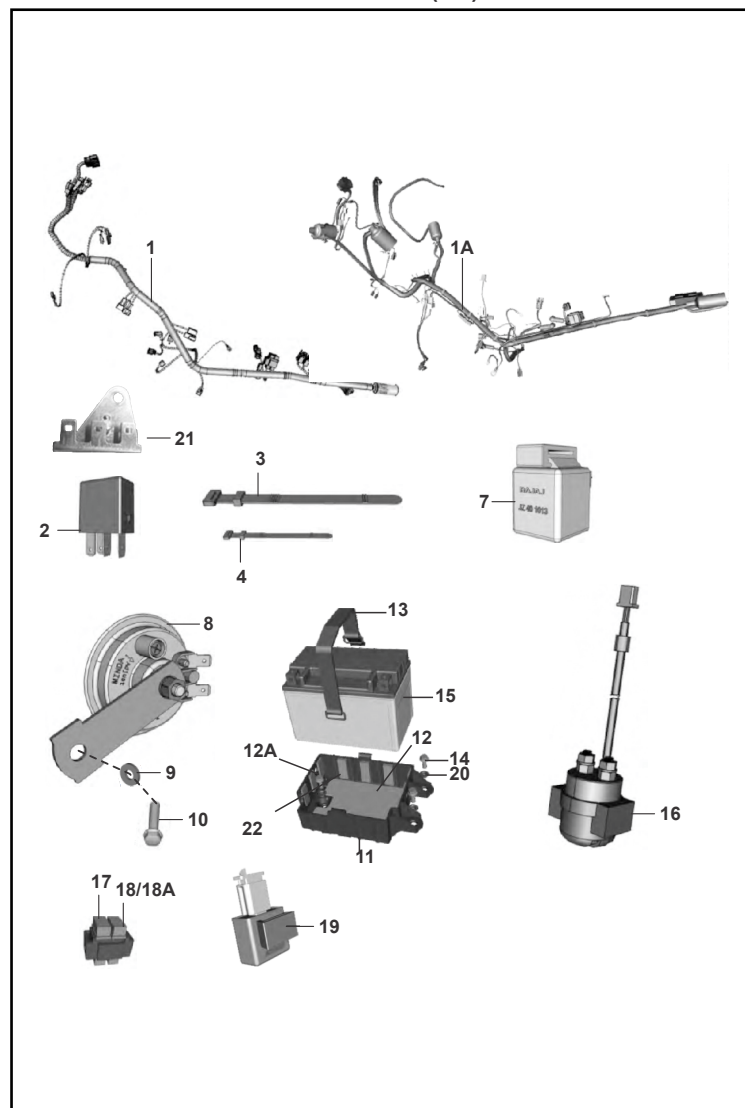


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS-IV	
1	JL402203	Instalación Eléctrica	1	-	-	Motos con Unidad Control
	JL402229		1	-	-	Motos con Flasher
	JL402245		-	-	1	
1A	JL402220		-	1	-	Motos con Unidad Control
	JL402228		-	1	-	Motos con Flasher
2	JL403000	Relay	1	1	1	
3	30191048	Abrazadera	5	5	5	
4	30201064	Abrazadera	3	3	3	
5	JL402201	Cable Relay	1	1	1	No Ilustrado
6	JL402202	Cable Batería (Tierra)	1	1	1	No Ilustrado
7	JZ401013	Unidad Control Farola	1	-	1	
	DT402006		-	1	-	
8	JL401600	Pito	1	-	1	
	JL401602		-	1	-	
9	39150711	Arandela	1	1	1	
10	39220504	Tornillo 8 mm.	1	-	1	
	39195604		-	1	-	
11	JL181218	Caja Batería	1	1	1	
12	JL401803	Antivibrante	1	1	1	
12A	JG401808	Antivibrante	6	6	6	
13	JL401801	Banda Batería	1	1	1	
14	39194404	Tornillo	4	4	4	
15	MF12V9-1A-AUTECO	Batería 12V	1	1	1	Seca
	YTX9-BS-GEL-AUTECO		1	1	1	Gel
16	JN351604	Relay Motor de Arranque	1	1	1	

This exploded view diagram illustrates the components of a vehicle chassis assembly. The parts are numbered as follows:

- 1**: Main chassis frame with various sensors and wiring.
- 1A**: Alternative or additional chassis frame configuration.
- 2**: A small rectangular electronic control module.
- 3**: A long, thin metal structural bar.
- 4**: A small metal pin or fastener.
- 7**: A rectangular battery unit with a label.
- 8**: A circular component, possibly a wheel hub or sensor mount.
- 9**: A small circular washer or spacer.
- 10**: A small cylindrical component, possibly a pin or bolt.
- 11**: A black plastic housing or connector.
- 12**: A small rectangular component, possibly a sensor or actuator.
- 12A**: An alternative version of component 12.
- 13**: A black plastic component with a strap, possibly a battery cover or connector.
- 14**: A small metal pin or fastener.
- 15**: A rectangular battery unit with a strap.
- 16**: A complex mechanical assembly, possibly a suspension or steering component.
- 17**: A small rectangular electronic control module.
- 18/18A**: An alternative version of component 17.
- 19**: A small rectangular electronic control module.
- 21**: A small rectangular electronic control module.
- 22**: A small rectangular component, possibly a sensor or actuator.



pulsar
NS200-4S200

This diagram illustrates the exploded view of a motorcycle rear subframe assembly. The components are identified by the following numbers:

- 1**: Main rear subframe
- 2**: Various mounting pins and bolts
- 3**: End plate or fender bracket
- 4**: Rear shock absorber mounting bracket
- 5**: Rear shock absorber
- 6**: Left side fender
- 7**: Right side fender



pulsar
NS200-4S200



pulsar
NS200-4S200

An exploded view diagram of a motorcycle helmet, showing its various components labeled with numbers 1 through 11. The central part is the main helmet shell (1). Attached to the front is the chin bar (2). The sides feature cheek pads (3) and side fairings (4). The rear has a back fairing (5) and a rear spoiler (6). The top includes a top fairing (7) and a top pad (8). The bottom features a chin pad (9) and two side pads (10 and 11). The diagram illustrates how these parts fit together to form the complete helmet structure.



pulsar
NS200-45200

This diagram illustrates the exploded view of a motorcycle headlight assembly, showing 11 individual components numbered 1 through 11. The components are arranged around a central headlight housing (1). The parts include: 1. The main headlight housing with a lens; 2. A side cover or fender; 3. A mounting bracket or plate; 4. A side cover or fender; 5. A side cover or fender; 6. A small cap or plug; 7. A small cap or plug; 8. A side cover or fender; 9. A side cover or fender; 10. A side cover or fender; 11. A side cover or fender.



pulsar
NS200-4S200

FIGURA N° 58: CALCOMANÍAS (PULSAR 200NS)

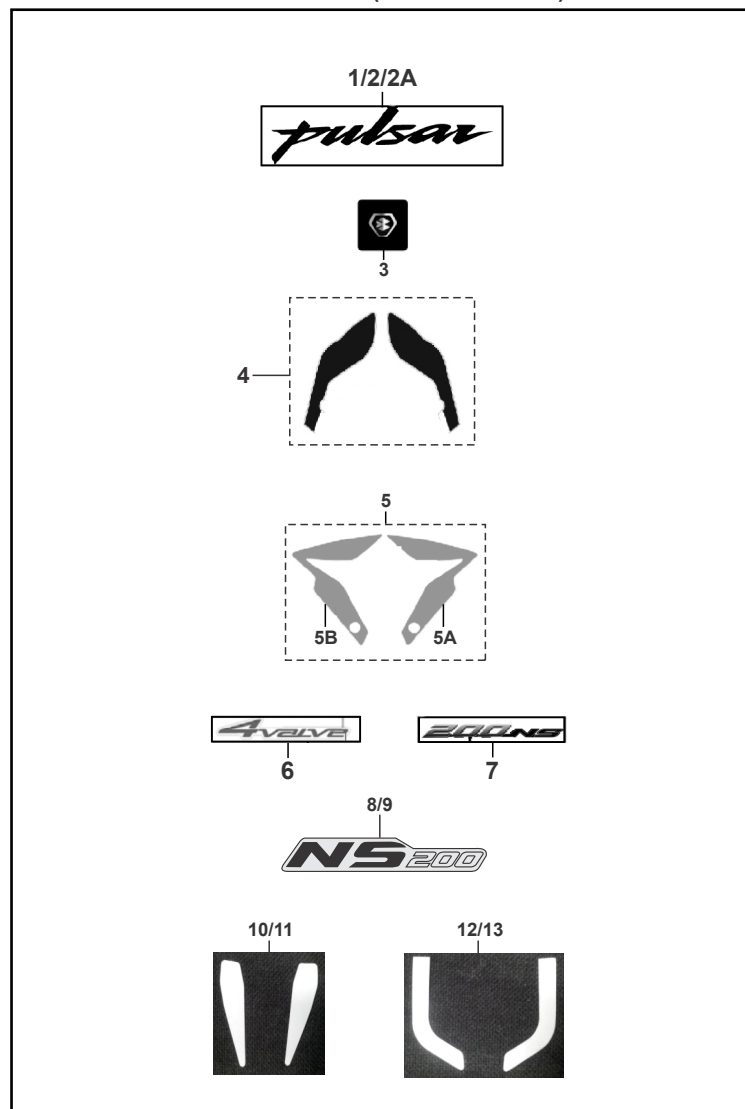


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
1	JL233004	Emblema "PULSAR" Derecho	1	-	-	Sin Borde
2	JL233003	Emblema "PULSAR" Izquierdo	1	-	-	Sin Borde
2A	JL233239	Emblema "PULSAR" Izq. y Der.	2	-	-	Con Borde Negro
3	JL233002	Calcomanía Logo Bajaj	1	-	-	
4	36JL0026	Kit Calcomanías Carenaje	1	-	-	
	KIT-472930/00		1	-	-	Integración Nal.
5	36JL0027	Kit Calcomanías Guardabarro Del.	1	-	-	Rojo Eclipse
	36JL0028		1	-	-	Azul
	36JL0029		1	-	-	Negro Nebulosa
	36JL0030		1	-	-	Amarilla
5A	4646/00	Calc. Guardabarro Del. Derecha	1	-	-	Amarilla
	4677/00		1	-	-	Rojo Eclipse
	4775/00		1	-	-	Blanco Celestial
	4929/00		1	-	-	Verde Lima
5B	4647/00	Calc. Guardabarro Del. Izquierda	1	-	-	Amarilla
	4678/00		1	-	-	Rojo Eclipse
	4776/00		1	-	-	Blanco Celestial
	4930/00		1	-	-	Verde Lima
6	JL233005	Calcomanía "4 Valve"	2	-	-	
7	JL233006	Calcomanía "200NS"	2	-	-	
	4725/00		2	-	-	Integración Nal.
8	6636/00	Calc. Cubierta Tanque "NS200" Izq.	1	-	-	
9	6637/00	Calc. Cubierta Tanque "NS200" Der.	1	-	-	
10	JL191008	Calc. Protector Cubierta Tanque Izq.	1	-	-	
11	JL191009	Calc. Protector Cubierta Tanque Der.	1	-	-	
12	20000671	Calc. Protector Sillín Izq.	1	-	-	
13	20000673	Calc. Protector Sillín Der.	1	-	-	

The diagram illustrates the sequence of steps for the Pulsar AS 200 4 Valve 4-Port 6-Port 6A 6B assembly process. The steps are numbered 1 through 6, with 1/2/2A and 3/4/5/6 indicating multiple steps or components at those stages.

- 1/2/2A**: Pulsar
- 3**: AS 200
- 4**: 4 VALVE
- 5**: 4-PORT
- 6**: 6-PORT (with sub-components 6A and 6B)



pulsar
NS200-4S200

Diagram illustrating the components of a Pulsar 4-valve engine assembly, numbered 1 through 16:

- 1: Main engine block assembly.
- 2: Upper intake manifold.
- 3: Upper intake manifold (left side).
- 4: Upper intake manifold (right side).
- 5: Lower intake manifold (left side).
- 6: Lower intake manifold (right side).
- 7: "Pulsar" brand logo plate.
- 8: "USE ONLY DOT" Pulsar Products battery.
- 9/10/10A: "Pulsar" brand logo plate.
- 11: Pulsar logo emblem.
- 12: Lower intake manifold (left side, dashed outline).
- 13: Lower intake manifold (right side, dashed outline).
- 13A: Lower intake manifold (right side, dashed outline).
- 13B: Lower intake manifold (right side, dashed outline).
- 14: "4 VALVE" brand logo plate.
- 15: "PRO" brand logo plate.
- 16: "PRO" brand logo plate.



pulsar
NS200-4S200

Diagram illustrating the components of a Pulsar 4-valve engine assembly, labeled 1 through 16:

- 1: Main engine block assembly.
- 2: Upper intake manifold.
- 3: Lower intake manifold.
- 4: Upper intake manifold (right side).
- 5: Lower intake manifold (left side).
- 6: Lower intake manifold (right side).
- 7: "Pulsar" logo plate.
- 8: "USE ONLY DOT" Pulsar Products label.
- 9/10/10A: "Pulsar" logo plate.
- 11: Pulsar logo plate.
- 12: Lower intake manifold (left side).
- 13: Lower intake manifold (right side).
- 13A: Lower intake manifold (right side).
- 13B: Lower intake manifold (right side).
- 14: "4 VALVE" logo plate.
- 15: "PRO" logo plate.
- 16: "PRO" logo plate.



pulsar
NS200-4S200

FIGURA N° 61: CALCOMANÍAS Y ACCESORIOS PULSARMANIA (PULSAR 200NS - NS200 BS-IV) (1/3)

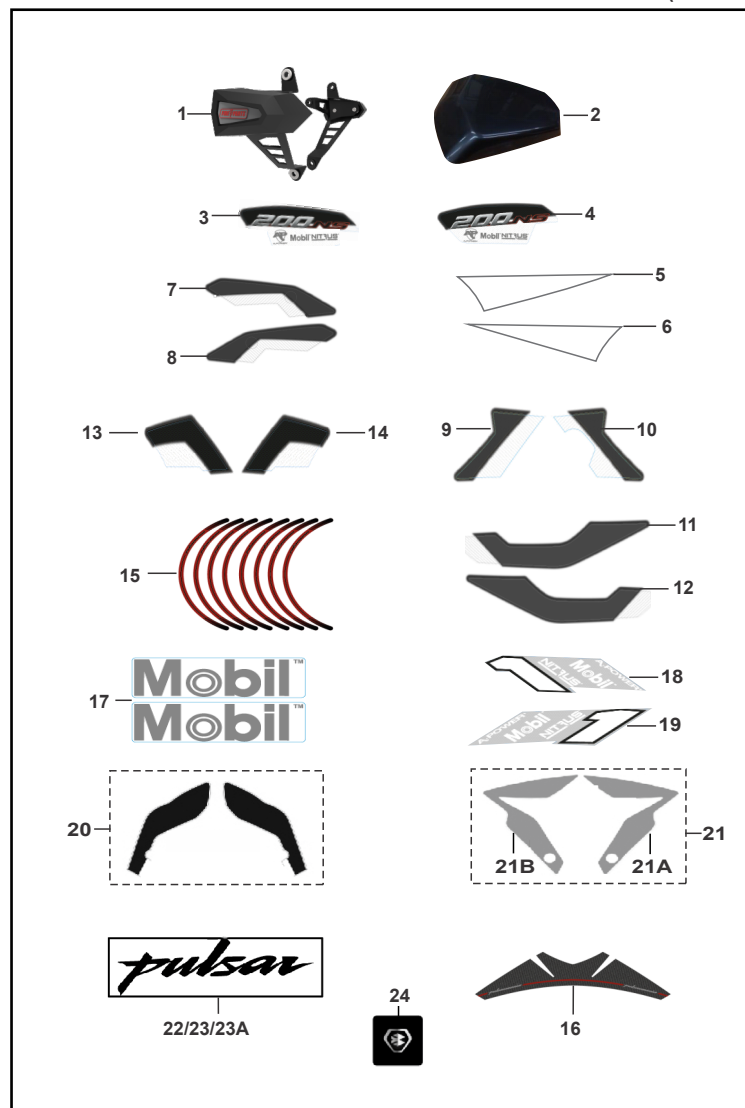


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	PN101.046-BL	Kit Sliders Nitrus	1	-	-	Azul
	PN101.046		1	-	-	Negro
	PN101.046-RD		1	-	-	Rojo
	PN101.046-OR		1	-	-	Naranja
	PN101.046-GR		1	-	1	Verde
2	743842/00	Solo Seat	1	-	1	
3	6463/00	Cal. Enfocador Lat. Sup. Derecha	1	-	1	Verde Neon
	6525/00		1	-	-	Naranja
	6514/00		1	-	-	Negro Nebulosa
4	6462/00	Cal. Enfocador Lat. Sup. Izquierda	1	-	1	Verde Neon
	6524/00		1	-	-	Naranja
	6513/00		1	-	-	Negro Nebulosa
5	6476/00	Cal. Enfocador Lateral Inferior Derecha	1	-	1	
6	6475/00	Cal. Enfocador Lateral Inferior Izquierda	1	-	1	
7	6465/00	Cal. Tanque Lateral Derecha	1	-	1	Verde Neon
	6527/00		1	-	-	Naranja
	6516/00		1	-	-	Negro Nebulosa
8	6464/00	Cal. Tanque Lateral Izquierda	1	-	1	Verde Neon
	6526/00		1	-	-	Naranja
	6515/00		1	-	-	Negro Nebulosa
9	6481/00	Cal. Lateral Inferior Derecha	1	-	1	Verde Neon
	6536/00		1	-	-	Naranja
	6535/00		1	-	-	Negro Nebulosa
10	6466/00	Cal. Lateral Inferior Izquierda	1	-	1	Verde Neon
	6528/00		1	-	-	Naranja
	6517/00		1	-	-	Negro Nebulosa

1. Motor assembly with gears and a red band.

2. Dark blue, curved body panel.

3. Black and red "200" decal with "Mobil SETLINE" text.

4. Black and red "200" decal with "Mobil SETLINE" text.

5. Thin, curved white body panel.

6. Thin, curved white body panel.

7. Black and white curved body panel.

8. Black and white curved body panel.

9. Black and white curved body panel.

10. Black and white curved body panel.

11. Black and white curved body panel.

12. Black and white curved body panel.

13. Black and white curved body panel.

14. Black and white curved body panel.

15. Red and black curved body panel.

16. Black and white curved body panel.

17. "Mobil" logo decal.

18. "Mobil" logo decal.

19. "Mobil" logo decal.

20. Black and white curved body panel.

21. Black and white curved body panel.

21A. Black and white curved body panel.

21B. Black and white curved body panel.

22/23/23A. "pulsar" logo.

23. Black and white curved body panel.

24. Black and white curved body panel.



pulsar
NS200-45200

FIGURA N° 61: CALCOMANÍAS Y ACCESORIOS PULSARMANIA (PULSAR 200NS - NS200 BS-IV) (3/3)


[illegible]

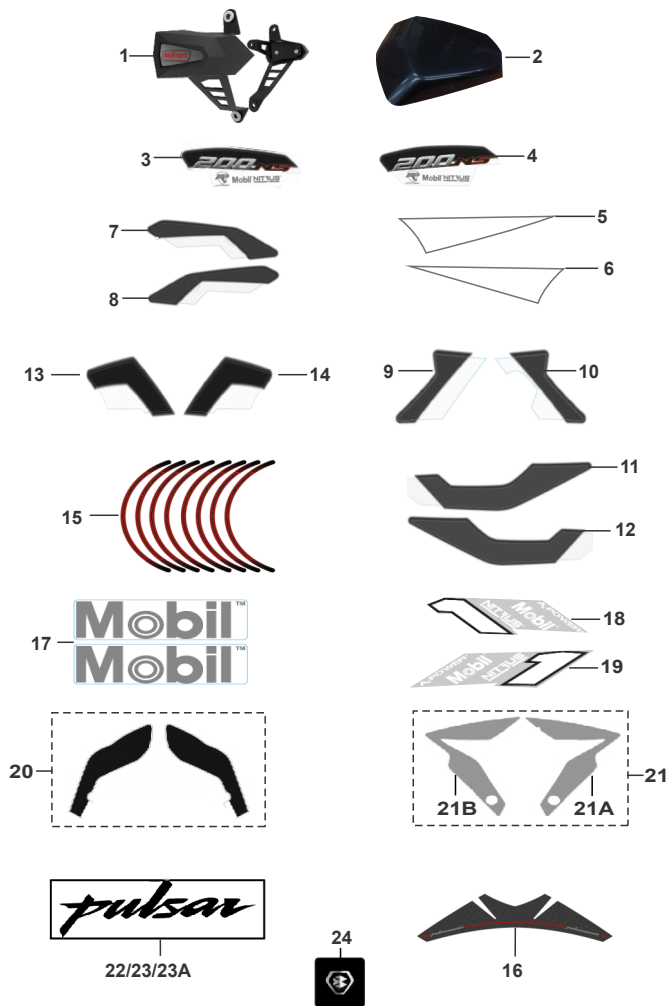FIGURA N° 62: CALCOMANÍAS Y ACCESORIOS COPA PULSAR (PULSAR 200NS - NS200 BS-IV (1/2))

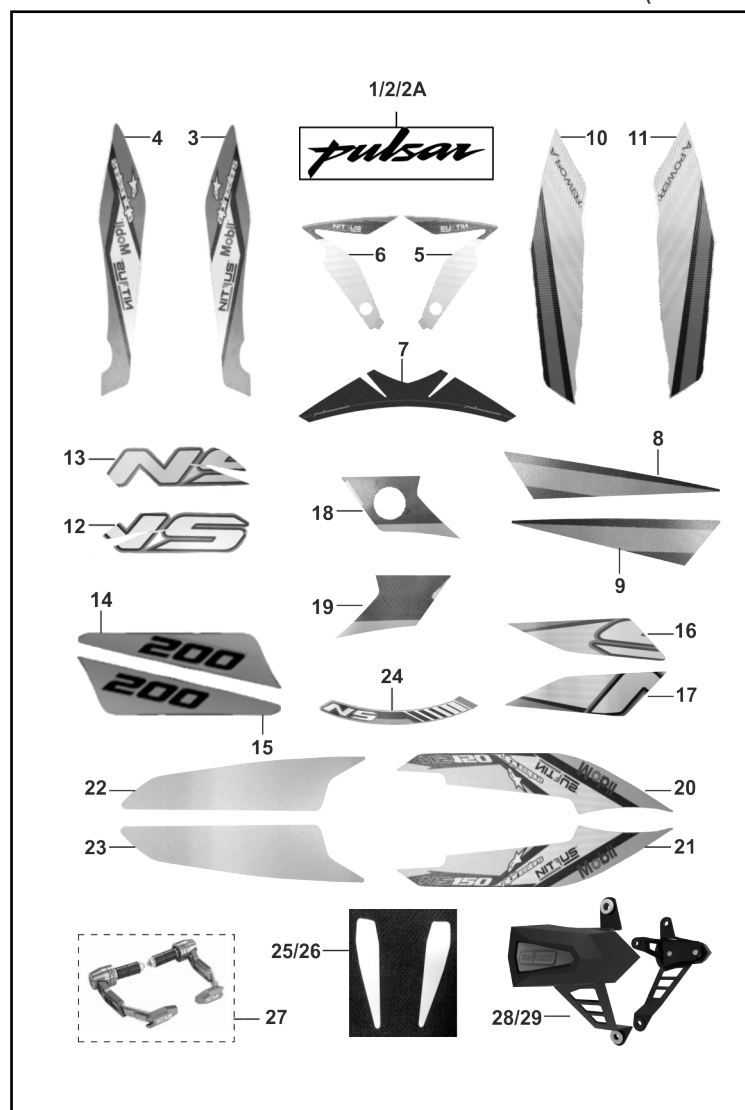


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL233004	Emblema "PULSAR" Derecho	1	-	1	Sin Borde
2	JL233003	Emblema "PULSAR" Izquierdo	1	-	1	Sin Borde
2A	JL233239	Emblema "PULSAR" Izq. y Der.	2	-	-	Con Borde Negro
	JL233316		-	-	2	Con Borde Negro
3	20005513	Calcomanía Carenaje Izq.	1	-	1	Moto Negro-Naranja
	20006252		1	-	1	Moto Negro-Azul
4	20005514	Calcomanía Carenaje Der.	1	-	1	Moto Negro-Naranja
	20006253		1	-	1	Moto Negro-Azul
5	20005629	Calcomanía Guardabarro Del. Izq.	1	-	1	Moto Negro-Naranja
	20006250		1	-	1	Moto Negro-Azul
6	20005630	Calcomanía Guardabarro Del. Der.	1	-	1	Moto Negro-Naranja
	20006251		1	-	1	Moto Negro-Azul
7	20005644	Protector Tanque	1	-	1	Moto Negro-Naranja
	20006271		1	-	1	Moto Negro-Azul
8	20005523	Cal. Cubierta Tanque Superior Izq.	1	-	1	Moto Negro-Naranja
	20006262		1	-	1	Moto Negro-Azul
9	20005524	Cal. Cubierta Tanque Superior Der.	1	-	1	Moto Negro-Naranja
	20006263		1	-	1	Moto Negro-Azul
10	20005515	Calcomanía Enfocador Sup. Izq.	1	-	1	Moto Negro-Naranja
	20006254		1	-	1	Moto Negro-Azul
11	20005516	Calcomanía Enfocador Sup. Der.	1	-	1	Moto Negro-Naranja
	20006255		1	-	1	Moto Negro-Azul
12	20005517	Calcomanía Enfocador Central Izq.	1	-	1	Moto Negro-Naranja
	20006256		1	-	1	Moto Negro-Azul
13	20005518	Calcomanía Enfocador Central Der.	1	-	1	Moto Negro-Naranja
	20006257		1	-	1	Moto Negro-Azul
14	20005586	Calcomanía Enfocador Inf. Izq.	1	-	1	Moto Negro-Naranja
	20006258		1	-	1	Moto Negro-Azul

FIGURA N° 62: CALCOMANÍAS Y ACCESORIOS COPA PULSAR (PULSAR 200NS - NS200 BS-IV (2/2))

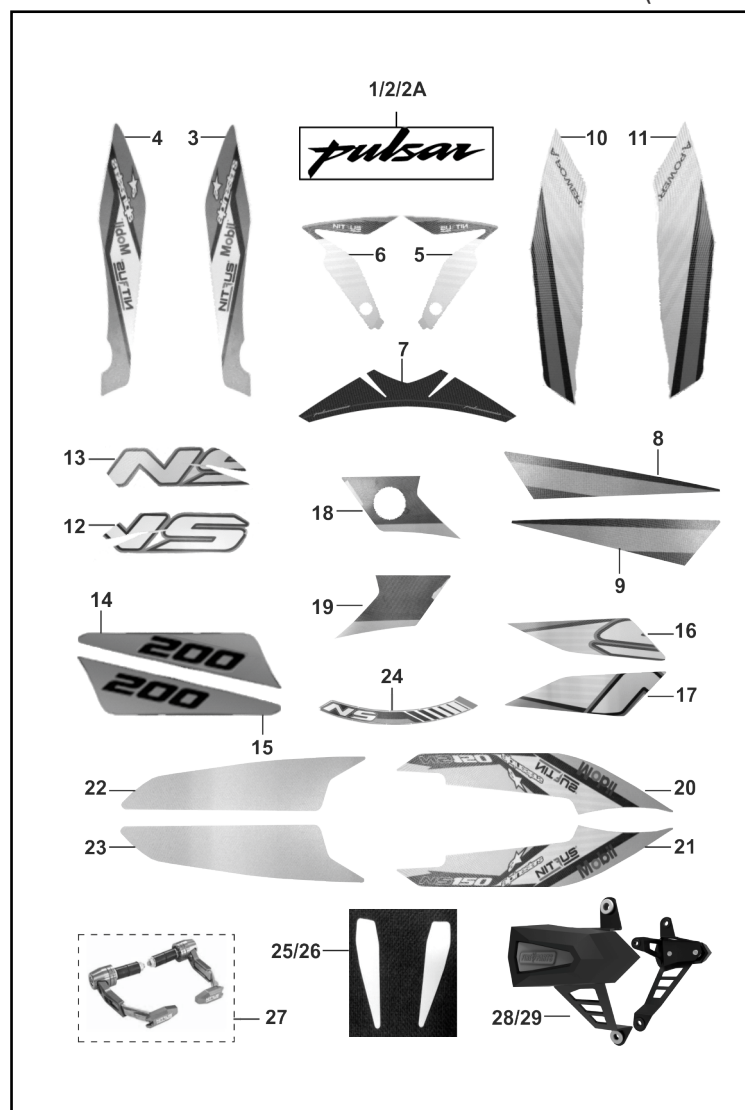


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
15	20005587	Calcomanía Enfocador Inf. Der.	1	-	1	Moto Negro-Naranja
	20006259		1	-	1	Moto Negro-Azul
16	20005521	Cal. Cubierta Tanque Inferior Izq.	1	-	1	Moto Negro-Naranja
	20006260		1	-	1	Moto Negro-Azul
17	20005522	Cal. Cubierta Tanque Inferior Der.	1	-	1	Moto Negro-Naranja
	20006261		1	-	1	Moto Negro-Azul
18	20005525	Calcomanía Tapa Lateral Izquierda	1	-	1	Moto Negro-Naranja
	20006264		1	-	1	Moto Negro-Azul
19	20005526	Calcomanía Tapa Lateral Derecha	1	-	1	Moto Negro-Naranja
	20006265		1	-	1	Moto Negro-Azul
20	20005588	Calcomanía Cubierta Sillín Del. Izq.	1	-	1	Moto Negro-Naranja
	20006266		1	-	1	Moto Negro-Azul
21	20005589	Calcomanía Cubierta Sillín Del. Der.	1	-	1	Moto Negro-Naranja
	20006267		1	-	1	Moto Negro-Azul
22	20005529	Calcomanía Cubierta Sillín Tras. Izq.	1	-	1	Moto Negro-Naranja
	20006268		1	-	1	Moto Negro-Azul
23	20005530	Calcomanía Cubierta Sillín Tras. Der.	1	-	1	Moto Negro-Naranja
	20006269		1	-	1	Moto Negro-Azul
24	20005531	Calcomanía Rin	8	-	8	Moto Negro-Naranja
	20006270		8	-	8	Moto Negro-Azul
25	JL191008	Protector Cubierta Tanque Izq.	1	-	1	
26	JL191009	Protector Cubierta Tanque Der.	1	-	1	
27	LG001-TT	Protector de Levas Titanio	1	-	1	
28	20000840	Slider Derecho	1	-	1	
29	20000842	Slider Izquierdo	1	-	1	

FIGURA N° 63: CALCOMANÍAS (NS200 BS-IV 1ª EDICIÓN) (1/2)

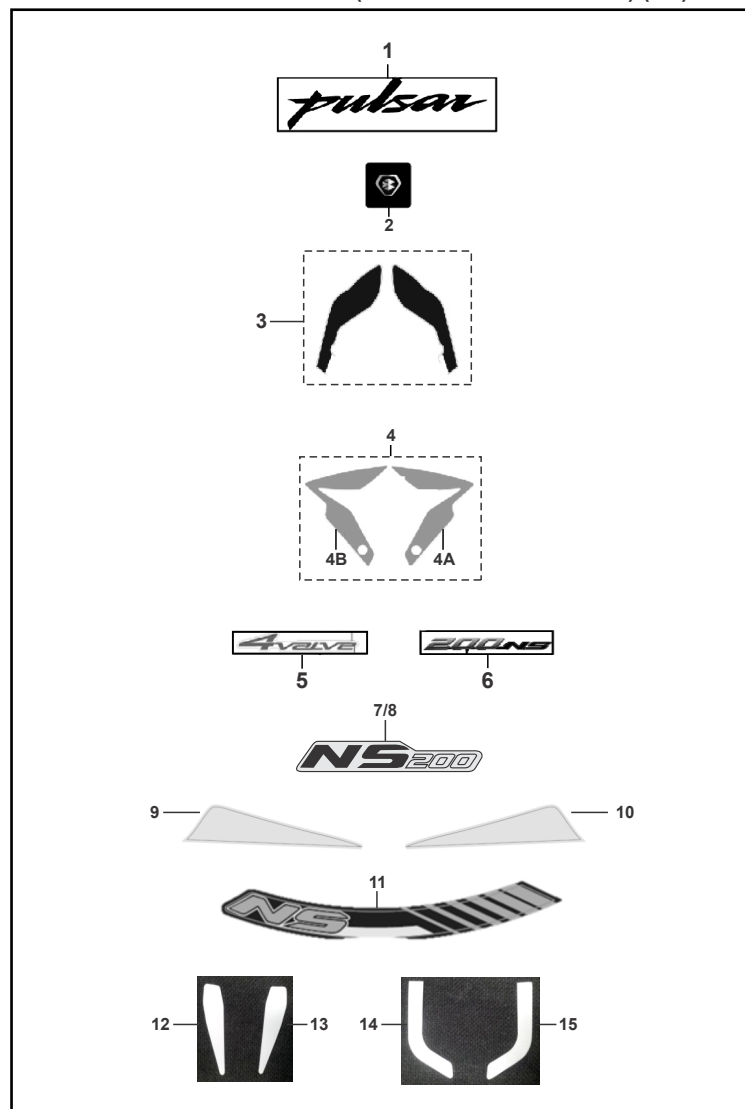


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL233316	Emblema "PULSAR" Izq. y Der.	-	-	2	Con Borde Negro
2	JL233002	Calcomanía Logo Bajaj	-	-	1	
3	36JL0026	Kit Calcomanías Carenaje	-	-	1	
	KIT-472930/00		-	-	1	Integración Nal.
4	36JL0027	Kit Calcomanías Guardabarro Del.	-	-	1	Rojo Eclipse
	36JL0028		-	-	1	Azul
	36JL0029		-	-	1	Negro Nebulosa
	36JL0030		-	-	1	Amarilla
4A	4646/00	Calc. Guardabarro Del. Derecha	-	-	1	Amarilla
	4677/00		-	-	1	Rojo Eclipse
	4775/00		-	-	1	Blanco Celestial
	4929/00		-	-	1	Verde Lima
4B	4647/00	Calc. Guardabarro Del. Izquierda	-	-	1	Amarilla
	4678/00		-	-	1	Rojo Eclipse
	4776/00		-	-	1	Blanco Celestial
	4930/00		-	-	1	Verde Lima
5	JL233005	Calcomanía "4 Valve"	-	-	2	
6	JL233006	Calcomanía "200NS"	-	-	2	
	4725/00		-	-	2	Integración Nal.
7	6636/00	Calc. Cubierta Tanque "NS200" Izq.	-	-	1	
8	6637/00	Calc. Cubierta Tanque "NS200" Der.	-	-	1	
9	20006875	Calc. Cubierta Tanque Inf. Izq.	-	-	1	Amarilla
10	20006876	Calc. Cubierta Tanque Inf. Der.	-	-	1	Amarilla
11	20005531	Calcomanía Rin	-	-	8	Amarilla
12	JL191008	Calcomanía Protector Cubierta Tanque Izq.	-	-	1	
13	JL191009	Calcomanía Protector Cubierta Tanque Der.	-	-	1	



pulsar
NS200-4S200

FIGURA N° 64: CALCOMANÍAS (NS200 BS-IV 2ª EDICIÓN) (1/2)

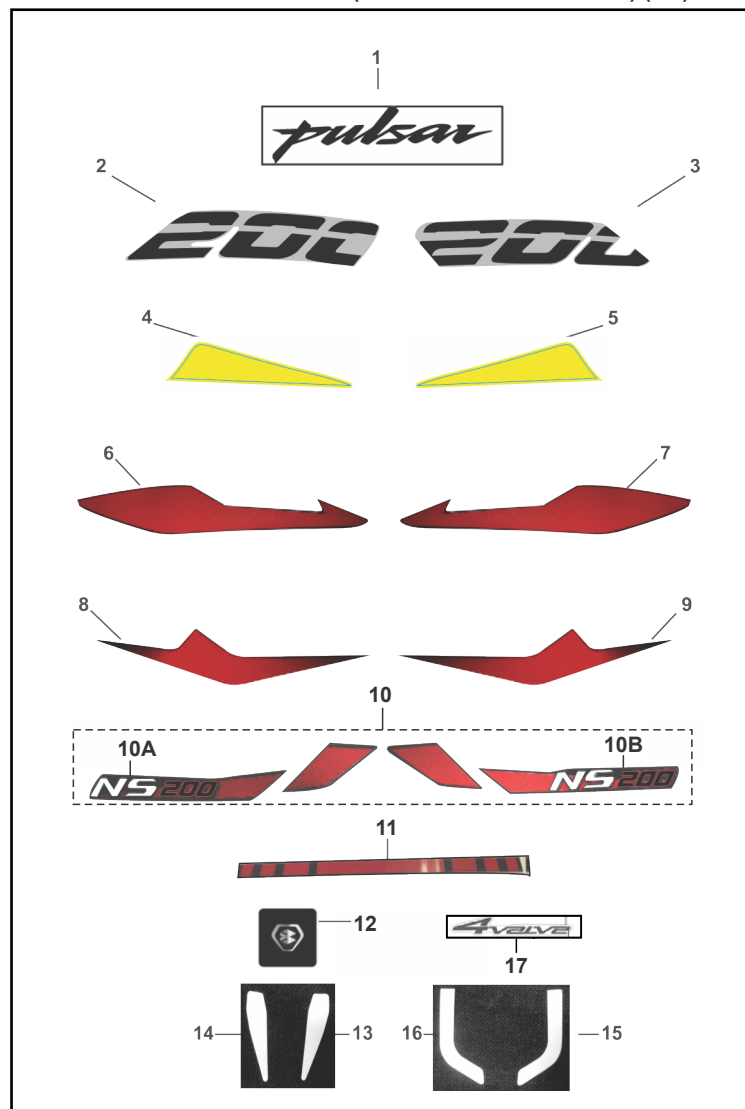


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL233316	Emblema "PULSAR" Izq. y Der.	-	-	2	
2	20006824	Calcomanía Enfocador "200" Izquierda	-	-	1	
3	20006825	Calcomanía Enfocador "200" Derecha	-	-	1	
4	20006875	Calc. Cubierta Tanque Inf. Izq.	-	-	1	Moto Gris Piedra
5	20006876	Calc. Cubierta Tanque Inf. Der.	-	-	1	Moto Gris Piedra
6	20006742	Calcomanía Carenaje Izquierda	-	-	1	Moto Roja
	20006767	" " "	-	-	1	Moto Gris Piedra
	20006778	" " "	-	-	1	Moto Negra
	20006756	" " "	-	-	1	Moto Blanca
	20006842	" " "	-	-	1	Moto Azul
	20006890	" " "	-	-	1	Moto Gris Plata
7	20006743	Calcomanía Carenaje Derecha	-	-	1	Moto Roja
	20006768	" " "	-	-	1	Moto Gris Piedra
	20006779	" " "	-	-	1	Moto Negra
	20006757	" " "	-	-	1	Moto Blanca
	20006843	" " "	-	-	1	Moto Azul
	20006891	" " "	-	-	1	Moto Gris Plata
8	20006822	Calc. Guardabarro Delantero Izq.	-	-	1	Moto Roja
	20006832	" " "	-	-	1	Moto Gris Piedra
	20006836	" " "	-	-	1	Moto Negra - Moto Gris Plata
	20006828	" " "	-	-	1	Moto Blanca
	20006840	" " "	-	-	1	Moto Azul
9	20006823	Calc. Guardabarro Delantero Der.	-	-	1	Moto Roja
	20006833	" " "	-	-	1	Moto Gris Piedra
	20006837	" " "	-	-	1	Moto Negra - Moto Gris Plata
	20006829	" " "	-	-	1	Moto Blanca
	20006841	" " "	-	-	1	Moto Azul



Diagram illustrating the components of a Pulsar 200i motorcycle, numbered 1 through 22:

1. Pulsar logo
2. Left side fairing (front)
3. Right side fairing (front)
4. 4-VALVE badge
5. Pulsar logo badge
6. Left side fairing (middle)
7. Right side fairing (middle)
8. Left side fairing (lower)
9. Right side fairing (lower)
10. Left side fairing (rear)
11. Right side fairing (rear)
12. Side fairing (lower)
13. Left side fairing (lower) (black)
14. Right side fairing (lower) (black)
15. Left side fairing (lower) (white)
16. Right side fairing (lower) (white)
- 17/18. Side fairing (lower) (black)
19. Side fairing (lower) (white)
20. Side fairing (lower) (black)
21. Side fairing (lower) (white)
22. Side fairing (lower) (black)



pulsar
NS200-AS200

LISTA DE KITS

Ítem	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
1	36JL0009	Kit Sprocket y Cadena	DV101048	Piñón Delantero 14T	1
			JL141000	Cadena 520x108L (Con O´ring)	1
			JL131228	Sprocket 38T	1
2	36JL0011	Kit válvulas	39201719	Reten Válvula	1
			JF511215	Asiento Válvula	1
			JF511217	Resorte Válvula	1
			JF511214	Reten Válvula	1
			DG101029	Cuña Válvula	2
3	36JL0013	Kit Antivibrantes Sillín	NA	Antivibrantes Sillín	6
			DK211007	Antivibrante Delantero Sillín	1
4	36JL0014	Kit Empaques	JL541207	Empaque Carcasa Clutch	1
			JL541208	Empaque Cubierta Volante	1
			JL521002	Empaque Cilindro	1
			JL511022	Empaque Culata	1
			JG541041	Empaque Carcasa Izquierda	1
			CS101128	Empaque Tensor Cadenilla	1
			JL511001	Empaque Tapa Culata	1
			JG591070	Empaque Silenciador	1
5	36JL0015	Kit Pines Reposapie Pasajero	JD113019	Pin Pasador	1
			30141031	Anillo Retenedor	1
			39104011	Arandela	1
			39078408	Pin	1
6	36JL0019	Kit Boquereles y Aguja Carbuardor	NA	Difusor	1
			NA	Aguja de La Cortina	1
			NA	Pulverizador	1
			NA	Boquerel de Alta	1
			NA	Boquerel de Baja	1

LISTA DE KITS

Ítem	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
7	36JL0020	Kit Tornillo Aire Carburador	NA	Tornillo Ajuste	1
			NA	Anillo Retén Tornillo Drenaje	1
			DH121086	Resorte	1
			DH121087	Arandela	1
			NA	Anillo Retén Tornillo Ajuste	1
8	36JL0023	Kit Retenedores	NA	Anillo Retén Taza Carburador	1
			DH121118	Anillo Retén Tornillo Drenaje	1
			DH121088	Anillo Retén Auto Choke	1
			NA	Anillo Retén Tornillo Ralentí	1
9	36JL0024	Kit Pines-Arandela Carburador	DD121056	Soporte Aguja Carburador	1
			NA	Resorte Aguja Carburador	1
			NA	Arandela Aguja Carburador	1
			NA	Pin Aguja Carburador	1
10	36JL0031	Kit Tornillos y Antivibrantes Tanque	JL171070	Antivibrante Cubierta tanque	4
			JL171071	Buje Cubierta Tanque	4
			39023911	Arandela	4
			LAC00034	Tornillo 6x20	2
11	36JL0041	Kit Pines Reposapie Conductor	NA	Pin Pasador	1
			30141031	Anillo Reténedor	1
			39104011	Arandela	1
			39078408	Pin	1

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
01100905	16	11
020243/00	1	38
020246/00	4	69
020247/00	3	69
020248/00	15	36
020982/00	11	64
020982/00	10	65
100/80-17-RX01-TL	1	39
10061141	8	51
10061142	1	51
1342800	1	39
1343100	5	39
20000183	3	74
20000183	20	85
20000185	4	74
20000185	19	85
20000664	14	84
20000664	14	85
20000667	13	84
20000667	13	85
20000671	12	72
20000671	14	82
20000671	15	84
20000671	15	85
20000673	13	72
20000673	15	82
20000673	16	84
20000673	16	85
20000836	6	74
20000836	21	85
20000838	5	74
20000838	22	85
20000840	1	74
20000840	28	80
20000840	17	85

PARTE No.	FIG. No.	PAG. No.
20000842	2	74
20000842	29	80
20000842	18	85
20004740	5	73
20005513	3	79
20005514	4	79
20005515	10	79
20005516	11	79
20005517	12	79
20005518	13	79
20005521	16	80
20005522	17	80
20005523	8	79
20005524	9	79
20005525	18	80
20005526	19	80
20005529	22	80
20005530	23	80
20005531	24	80
20005531	11	81
20005586	14	79
20005587	15	80
20005588	20	80
20005589	21	80
20005629	5	79
20005630	6	79
20005644	7	79
20006250	5	79
20006251	6	79
20006252	3	79
20006253	4	79
20006254	10	79
20006255	11	79
20006256	12	79
20006257	13	79

PARTE No.	FIG. No.	PAG. No.
20006258	14	79
20006259	15	80
20006260	16	80
20006261	17	80
20006262	8	79
20006263	9	79
20006264	18	80
20006265	19	80
20006266	20	80
20006267	21	80
20006268	22	80
20006269	23	80
20006270	24	80
20006271	7	79
20006742	6	83
20006742	6	85
20006743	7	83
20006743	7	85
20006753	11	84
20006753	12	85
20006756	6	83
20006757	7	83
20006764	11	84
20006767	6	83
20006768	7	83
20006775	11	84
20006778	6	83
20006779	7	83
20006822	8	83
20006822	8	85
20006823	9	83
20006823	9	85
20006824	2	83
20006824	2	85
20006825	3	83

PARTE No.	FIG. No.	PAG. No.
20006825	3	85
20006826	10A	84
20006826	10	85
20006827	10B	84
20006827	11	85
20006828	8	83
20006829	9	83
20006830	10A	84
20006831	10B	84
20006832	8	83
20006833	9	83
20006834	10A	84
20006835	10B	84
20006836	8	83
20006837	9	83
20006838	10A	84
20006839	10B	84
20006840	8	83
20006841	9	83
20006842	6	83
20006843	7	83
20006846	10A	84
20006847	10B	84
20006848	11	84
20006875	9	81
20006875	4	83
20006876	10	81
20006876	5	83
20006887	11	84
20006890	6	83
20006891	7	83
30101195	3	22
30101236	28	35
30141031	22	35
30141031	5	86

PARTE No.	FIG. No.	PAG. No.
30141031	11	87
30151082	22	43
30191038	16	44
30191048	3	66
30201064	4	66
31101173	7	7
31161078	15	52
31161078	23	53
31201079	5	46
33141008	7	2
36DH1902	4	41
36DT0055	3	23
36DT0079	2	12
36DT0080	1	14
36JG0004	6	17
36JG0011	7	32
36JG0011	30	50
36JG0018	21	44
36JL0001	15	5
36JL0003	1	14
36JL0004	2	12
36JL0005	3	23
36JL0007	1	6
36JL0009	2	43
36JL0009	1	86
36JL0010	4	3
36JL0011	10	4
36JL0011	2	86
36JL0012	5	54
36JL0013	2	30
36JL0013	3	86
36JL0014	2	1
36JL0014	6	3
36JL0014	12	5
36JL0014	4	6

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
36JL0014	16	14
36JL0014	12	20
36JL0014	5	22
36JL0014	4	86
36JL0015	24	35
36JL0015	5	86
36JL0016	11	56
36JL0017	19	60
36JL0019	5	24
36JL0019	5	25
36JL0019	6	86
36JL0020	6	24
36JL0020	6	25
36JL0020	7	87
36JL0021	7	24
36JL0021	7	25
36JL0022	8	24
36JL0022	8	25
36JL0023	10	24
36JL0023	10	25
36JL0023	8	87
36JL0024	9	24
36JL0024	9	25
36JL0024	9	87
36JL0025	1	38
36JL0026	4	72
36JL0026	12	74
36JL0026	20	77
36JL0026	3	81
36JL0027	5	72
36JL0027	13	74
36JL0027	21	78
36JL0027	4	81
36JL0028	5	72
36JL0028	4	81

PARTE No.	FIG. No.	PAG. No.
36JL0029	5	72
36JL0029	6	73
36JL0029	13	74
36JL0029	21	78
36JL0029	4	81
36JL0030	5	72
36JL0030	4	81
36JL0031	18	52
36JL0031	10	87
36JL0039	6	12
36JL0039	17	16
36JL0041	9	34
36JL0041	11	87
36JL0061	6	73
36JL0091	19	23
36JL0124	10	84
36JL0145	4A	3
36JU0001	2	6
36-JU00-01-025/47	2	6
36-JU00-01-050/47	2	6
36-JU00-01-075/47	2	6
36-JU00-01-100/47	2	6
36-JU00-01-STD/47	2	6
36JU0002	6	23
36JU0036	1	7
39019811	15	44
39019811	11	60
39021111	14	62
39021111	4	65
39023911	20	26
39023911	17	59
39023911	10	87
39023911	21	52
39023911	3	56
39024211	16	37

PARTE No.	FIG. No.	PAG. No.
39029115	3	57
39032615	5	36
39042215	11	38
39045411	11	33
39055302	12	33
39059417	4	5
39072211	4	56
39074011	27	55
39074601	21	13
39078408	21	35
39078408	5	86
39078408	11	87
39080808	14	44
39080808	6	11
39084001	12	40
39084914	11	28
39090012	11	40
39099906	5	17
39099906	11	20
39099906	4	22
39101321	18	38
39104011	23	35
39104011	5	86
39104011	11	87
39104119	10	20
39104319	8	14
39104619	15	20
39105315	19	33
39105411	22	55
39105515	32	35
39106204	9	31
39118011	3	47
39122515	5	63
39128321	9	3
39150711	9	66

PARTE No.	FIG. No.	PAG. No.
39153721	10	46
39153721	7A	20
39166511	14	16
39167204	8	28
39167204	5	51
39167304	10	3
39177304	6	14
39177602	12	56
39177802	17	52
39177802	5	53
39178001	16	24
39178101	6	56
39178924	19	52
39179104	3	59
39190204	9	11
39190701	13	52
39190701	15	64
39190701	1	65
39191304	11	30
39193120	6	7
39193120	3	12
39194104	4	38
39194304	19	59
39194304	21	55
39194304	2	56
39194404	5	18
39194404	5	32
39194404	13	29
39194404	14	66
39194604	9	36
39194604	5	38
39194604	18	55
39195404	18	35
39195604	3	31
39195604	10	66

PARTE No.	FIG. No.	PAG. No.
39199020	2	20
39200511	18	12
39201719	2	86
39201719	1	4
39203804	17	43
39206004	13	38
39206004	10	52
39213217	5	6
39214124	13	60
39214124	7	51
39215811	3	8
39216511	15	7
39216511	13	28
39216611	15	8
39218106	3	6
39218106	22	15
39220011	12	23
39220011	16	7
39220307	5	7
39220404	14	18
39220504	10	66
39224120	3	40
39224120	3	43
39224220	4	43
39230404	18	27
39238104	3	54
39242001	24	45
39242001	4	36
39242704	10	47
39244011	12	4
39246904	6	38
39247504	5	34
39247504	6	46
39248415	7	54
39249211	12	27

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
39253515	18	62
39256220	20	13
39256220	13	14
39260120	11	12
39260220	8	12
39260607	3	10
39260607	15	16
39260801	15	3
39262921	8	3
39266921	10	5
39269920	16	3
39270411	27	19
39272315	6	31
39272315	11	69
39275404	11	27
40326E	12	30
40327E	13	30
41070-1317-RX01/18	5	39
4646/00	5A	72
4646/00	4A	81
4647/00	5B	72
4647/00	4B	81
4677/00	5A	72
4677/00	13A	74
4677/00	21A	78
4677/00	4A	81
4678/00	5B	72
4678/00	13B	74
4678/00	21B	78
4678/00	4B	81
4725/00	7	72
4725/00	7	74
4725/00	6	81
4775/00	5A	72
4775/00	6B	73

PARTE No.	FIG. No.	PAG. No.
4775/00	13A	74
4775/00	4A	81
4776/00	5B	72
4776/00	13B	74
4776/00	4B	81
4776/00	6A	73
4929/00	5A	72
4929/00	4A	81
4930/00	5B	72
4930/00	4B	81
5070/00	15	75
5071/00	16	75
5072/00	13A	74
5073/00	13B	74
52JF0062	4A	11
52JL0072	17	38
52JL0073	1	20
52JL0141	5	40
52JL0142	16	43
52JL0143	1	20
52JL0145	1	22
52JL0152	12	34
52JL0153	16	35
52JL0156	1A	31
52JL0157	2A	31
52JL0158	8	34
52JL0159	2	34
52JL0207	1	22
52JL0892	1	20
52JL1024	8	34
52JL1035	2	34
56JF181Y	14	34
56JF191Y	15	34
56JL0101	14	34
56JL0201	15	34

PARTE No.	FIG. No.	PAG. No.
56JL023G	2	64
56JL0401	2	54
56JL0601	1	31
56JL0701	2	31
56JL1W3V	1	22
56JL315X	2	47
56JL325X	6	47
56JL335X	18	49
56JL3X1Y	7	34
56JL3Y1Y	1	34
56JL4J1Y	12A	34
56JL4K1Y	16A	35
56JL4L1Y	13	34
56JL4M1Y	17	35
59040048	10	42
59040048	2	46
59200006	11	14
59200028	14	12
59200036	2	16
59210019	4	58
59210019	10	40
6462/00	4	76
6463/00	3	76
6464/00	8	76
6465/00	7	76
6466/00	10	76
6467/00	12	77
6468/00	11	77
6469/00	14	77
6470/00	13	77
6471/00	15	77
6472/00	16	77
6473/00	21A	78
6474/00	21B	78
6475/00	6	76

PARTE No.	FIG. No.	PAG. No.
6476/00	5	76
6477/00	19	77
6478/00	18	77
6479/00	17	77
6480/00	17	77
6481/00	9	76
6513/00	4	76
6514/00	3	76
6515/00	8	76
6516/00	7	76
6517/00	10	76
6518/00	12	77
6519/00	11	77
6520/00	14	77
6521/00	13	77
6522/00	15	77
6523/00	16	77
6524/00	4	76
6525/00	3	76
6526/00	8	76
6527/00	7	76
6528/00	10	76
6529/00	12	77
6530/00	11	77
6531/00	14	77
6532/00	13	77
6533/00	15	77
6534/00	16	77
6535/00	9	76
6536/00	9	76
6636/00	8	72
6636/00	7	81
6637/00	9	72
6637/00	8	81
743842/00	2	76

PARTE No.	FIG. No.	PAG. No.
AA101437	17	20
AA141067	8	2
AK201012	18A	67
AN111015	6	29
AP101236	3	5
AP121064	15	26
AP201025	18	67
BA122003	31	55
BF551037	7	8
BF561020	13	14
CB121042	12	24
CB121042	12	25
CS101128	12	5
CS101128	4	86
DD111011	11	29
DD111012	4	29
DD121056	9	87
DD141227	17	55
DD191015	14	47
DD201002	14	64
DE151043	9	42
DE151046	10	44
DE151047	3	42
DE151047	9	44
DE191010	10	41
DE191010	8	44
DE191011	11	41
DE191028	7	41
DE191029	6	41
DE191033	15	41
DE191043	14	41
DF161102	12	38
DG101029	9	4
DG101029	2	86
DG101418	8	20

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
DG101456	10	14
DG121002	12	26
DG141028	28	55
DG151005	4	40
DG151049	6	40
DG161124	2	38
DG161144	6	34
DG171015	17	33
DG171016	4	33
DG171018	5	33
DG171019	6	33
DG181008	8	47
DG181008	25	50
DH101048	9	16
DH101199	16	28
DH101235	14	8
DH101295	11	4
DH101381	3	14
DH101383	9	12
DH101388	21	21
DH101389	12	28
DH101392	14	5
DH101396	14	28
DH101509	3	11
DH101607	5	27
DH101648	13	23
DH111013	9	29
DH111016	10	29
DH121063	14	24
DH121063	14	25
DH121064	13	24
DH121064	13	25
DH121086	7	87
DH121087	7	87
DH121088	8	87

PARTE No.	FIG. No.	PAG. No.
DH121118	8	87
DH161146	16	38
DH161158	7	56
DH191006	9	46
DH191013	4	46
DH191017	17	47
DH191037	20	60
DJ161069	7	36
DJ161091	18	37
DJ161229	11	52
DJ161229	16	64
DJ161229	2	65
DJ181029	16	62
DJ181064	15	62
DJ181065	22	19
DJ181065	9	51
DJ191023	14	41
DJ191029	2	41
DJ191030	3	41
DJ191031	5	41
DJ191056	8	41
DJ191057	1	41
DJ191057	25	48
DJ191082	11	47
DJ191083	12	47
DJ201072	18	64
DJ201108	16	41
DJ201109	9	41
DJ201173	9	56
DJ201246	13	47
DJ221019	1	69
DK101225	14	3
DK101284	17	28
DK101352	26	9
DK101386	10	16

PARTE No.	FIG. No.	PAG. No.
DK111011	12	29
DK111028	1	29
DK121045	21	24
DK121045	16	25
DK121047	15	24
DK121047	15	25
DK141028	6A	54
DK151012	9	43
DK151013	8	43
DK151015	14	43
DK151026	2	39
DK151031	2	44
DK151036	1	43
DK151045	18	44
DK151063	7	44
DK151069	4	44
DK151071	25	45
DK151072	19	44
DK151073	17	44
DK151074	17A	44
DK151081	20	43
DK151082	21	43
DK151083	1	44
DK151085	13	44
DK151088	11	44
DK151089	12	44
DK161209	5	57
DK181006	4	49
DK181007	5	49
DK181009	14A	49
DK181010	14	49
DK181011	29	50
DK181012	14B	49
DK181013	14C	49
DK181015	11	49

PARTE No.	FIG. No.	PAG. No.
DK181017	9	49
DK181018	7	49
DK181019	8	49
DK181020	10	49
DK181021	6	49
DK181022	16	49
DK181023	17	49
DK181025	23	50
DK181028	24	50
DK181075	1	32
DK181076	10	32
DK201043	10	62
DK211007	3	30
DK211007	3	86
DK221024	2	69
DP101109	17	23
DP101114	16	23
DP101191	23	13
DP101243	15	23
DP161145	11	64
DP161145	10	65
DS101154	8	16
DS101215	9	20
DS121126	13	26
DS141012	1	56
DS161125	6	36
DS161287	6	30
DS191052	24	48
DS201025	19	67
DT113014	26	35
DT113015	27	35
DT113848	18	33
DT113855	12	32
DT121040	3	49
DT121048	2	49

PARTE No.	FIG. No.	PAG. No.
DT131832	14	36
DT161005	16	47
DT181000	5	59
DT181310	20	62
DT181311	19	62
DT181322	11	32
DT181414	4	59
DT181415	6	59
DT181434	10	36
DT181435	12	36
DT232601	18	48
DT402006	7	66
DT511239	1	5
DT511242	4	4
DT511243	5	4
DT511261	4	4
DT511262	5	4
DT541019	5	20
DT541212	1	20
DT551400	1	23
DT551401	8	23
DT551402	5	23
DT551403	10	23
DT551408	7	23
DT551409	1	23
DT551412	2	23
DT561206	10	11
DU101225	7	5
DV101048	28	9
DV101048	1	86
EC401030	21	60
EC561023	2	10
FD211006	5	30
GH201012	6	63
JA113403	5	31

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
JA351627	2	28
JA541048	15	14
JA541233	2	22
JA581314	11	24
JA581314	11	25
JB181223	5	57
JC101034	9	5
JC151020	8	40
JC151020	5	58
JC181022	21	50
JC181023	20	50
JC201043	3	58
JC201046	9	40
JD113019	20	35
JD113019	5	86
JD113814	14	2
JD113815	15	2
JD171801	17	62
JD191006	8	30
JD351207	5	29
JD351800	17	24
JD401007	4	64
JD561416	5	11
JE581039	12	2
JF401016	3	65
JF511207	7	4
JF511214	2	86
JF511215	2	86
JF511217	2	86
JF511228	1	5
JF531007	2	7
JF531014	3	7
JG122028	2	59
JG131001	2	40
JG131821	5	44

PARTE No.	FIG. No.	PAG. No.
JG161008	12	47
JG161010	1	41
JG161010	25	48
JG171029	20	18
JG181235	3	60
JG181236	2	60
JG181238	2	57
JG181259	12	57
JG191008	4	30
JG232601	9	30
JG232606	10	30
JG351019	9	28
JG351209	2	29
JG351400	13	3
JG401808	12A	66
JG511021	3	1
JG511022	4	1
JG511046	5	3
JG511269	7	5
JG511270	13	5
JG531027	8	7
JG531031	9	7
JG531039	12	7
JG531040	13	7
JG531041	11	7
JG531207	7	16
JG531211	3	16
JG531212	4	16
JG531215	5	16
JG531220	2	5
JG531228	3	16
JG531229	4	16
JG541015	12	14
JG541020	29	13
JG541021	24	21

PARTE No.	FIG. No.	PAG. No.
JG541041	16	14
JG541041	4	86
JG541043	7	28
JG541044	5	14
JG541045	22	13
JG541046	4	12
JG541058	18	15
JG541059	10	12
JG541063	4	14
JG541068	1	3
JG541074	17	14
JG541230	7	20
JG541231	16	20
JG551000	24	8
JG551010	27	9
JG551013	4	8
JG551015	5	20
JG551017	4	20
JG551019	12	8
JG551020	6	8
JG551021	21	8
JG551022	11	8
JG551025	13	8
JG551026	17	8
JG551027	2	8
JG551028	19	8
JG551031	27	9
JG551213	5	8
JG551214	8	8
JG551215	22	8
JG551216	14	7
JG551216	18	23
JG551220	9	8
JG551222	18	8
JG551223	20	8

PARTE No.	FIG. No.	PAG. No.
JG551224	23	8
JG551225	25	8
JG551227	10	8
JG551228	16	8
JG551423	14	23
JG551427	2	23
JG551428	4	23
JG551443	8	23
JG551447	7	23
JG551449	5	23
JG551451	11	23
JG561008	12	10
JG561009	17	12
JG561010	4	10
JG561011	1	10
JG561012	7	10
JG561013	8	10
JG561016	9	10
JG561200	10	11
JG561204	15	12
JG561205	16	12
JG561215	11	10
JG561215	11	11
JG561217	13	11
JG561218	12	11
JG561222	5	10
JG561225	10	10
JG561226	19	12
JG561232	12	11
JG571014	24	13
JG571016	25	13
JG571018	2	17
JG571024	14	14
JG581014	28	19
JG581014	8	32

PARTE No.	FIG. No.	PAG. No.
JG591038	3	27
JG591039	6	27
JG591053	13	27
JG591070	10	27
JG591070	4	86
JG591088	15	27
JG591096	7	27
JG591097	8	27
JG601005	6	16
JG601012	12	16
JG601209	8	18
JG601210	2	18
JG601211	18	18
JG601221	13	18
JG601229	17	18
JG601230	29	19
JG601234	7	18
JG601235	17A	18
JG621412	5	28
JG621413	4	28
JG621417	6	28
JL111054	4	31
JL111078	6	32
JL111081	3	32
JL111082	4	32
JL111092	7	31
JL111093	8	31
JL111102	22	52
JL111103	2	32
JL111109	18	33
JL113000	8	34
JL113002	1	34
JL113006	29	35
JL113007	2	34
JL113012	3	34

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
JL113013	12A	34
JL113014	14	34
JL113015	16A	35
JL113016	15	34
JL113020	26	35
JL113026	13	34
JL113027	17	35
JL113028	19	35
JL113032	27	35
JL113033	4	34
JL113033	7	46
JL113034	7	34
JL113036	25	35
JL113038	31	35
JL113201	9	38
JL113207	7	38
JL113209	15	38
JL113210	3	38
JL113212	8	38
JL113400	1	31
JL113401	2	31
JL113800	2	64
JL113803	6	64
JL113809	23	55
JL113810	7	64
JL113811	8	64
JL113812	9	64
JL113824	21	67
JL113827	19	2
JL113829	6	32
JL113834	2	36
JL113836	15	29
JL121001	15	49
JL121005	1	49
JL121006	28	50

PARTE No.	FIG. No.	PAG. No.
JL121007	27	50
JL121008	13	49
JL122001	8	33
JL122002	7	33
JL122003	10	33
JL122004	13	33
JL122006	1	33
JL122008	14	33
JL122009	9	33
JL122013	3	33
JL122026	17	33
JL131000	7	40
JL131001	13	40
JL131004	3	39
JL131004	1	40
JL131005	5	40
JL131203	13	43
JL131209	4	39
JL131209	23	43
JL131211	15	43
JL131216	5	43
JL131218	16	43
JL131220	6	44
JL131225	7	43
JL131226	11	43
JL131228	1	86
JL131232	6	43
JL131802	12	41
JL131803	3	44
JL131804	1	42
JL131805	6	42
JL131806	2	42
JL131807	4	42
JL131811	2	36
JL131812	13	36

PARTE No.	FIG. No.	PAG. No.
JL131825	5	42
JL131830	8	42
JL131831	7	42
JL131832	6	42
JL131834	1	44
JL131841	22	44
JL131877	20	44
JL131878	23	45
JL131918	8	41
JL131931	2	44
JL141000	1	86
JL151002	2	49
JL151003	3	49
JL151004	13	49
JL151012	12	49
JL151021	1	47
JL151023	18	48
JL151024	1	49
JL151026	2	47
JL151028	5	47
JL151030	6	47
JL151032	18	49
JL151034	7	47
JL151035	9	47
JL151036	26	50
JL151037	22	50
JL151038	2A	47
JL161001	1	46
JL161003	15	47
JL161006	8	46
JL161008	16	47
JL161010	3	46
JL161013	11	47
JL161015	11	47
JL161200	2	58

PARTE No.	FIG. No.	PAG. No.
JL161201	1	58
JL161206	1	58
JL161207	2	58
JL171018	20	55
JL171019	19	55
JL171020	23	55
JL171022	2	52
JL171023	1	52
JL171024	5	52
JL171024	15	53
JL171035	12	54
JL171036	11	54
JL171037	8	54
JL171038	30	55
JL171040	10	59
JL171044	1	54
JL171045	2	70
JL171046	3	70
JL171048	16	52
JL171049	4	54
JL171057	3	52
JL171060	14	54
JL171061	9	52
JL171062	8	52
JL171063	9	54
JL171070	6	52
JL171070	13	53
JL171070	10	87
JL171071	4	52
JL171071	14	53
JL171071	10	87
JL171073	26	55
JL171078	8	53
JL171081	1	54
JL171085	24	55

PARTE No.	FIG. No.	PAG. No.
JL171096	25	55
JL171099	1	52
JL171600	2	54
JL171800	13	54
JL171801	16	55
JL171802	10	54
JL171803	15	54
JL171825	1	70
JL171825	1	71
JL181005	7	70
JL181006	5	59
JL181008	1	60
JL181012	5	71
JL181017	8	51
JL181019	1	51
JL181025	9	57
JL181029	15	62
JL181203	6	60
JL181205	1	59
JL181209	16	59
JL181209	16	65
JL181211	8	70
JL181211	8	71
JL181212	9	70
JL181212	9	71
JL181214	10	56
JL181218	11	66
JL181221	18	59
JL181221	17	65
JL181224	15	33
JL181225	16	33
JL181232	6	51
JL181233	28	61
JL181233	5	70
JL181234	27	61

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
JL181234	4	70
JL181235	19	49
JL181235	17	60
JL181236	14	60
JL181237	16	60
JL181241	4	57
JL181245	11	62
JL181247	5	60
JL181249	15	60
JL181253	13	59
JL181256	3	18
JL181257	23	60
JL181263	26	61
JL181264	20	67
JL181283	22	60
JL181288	5	56
JL181305	6	68
JL181305	10	70
JL181306	7	68
JL181306	11	70
JL181307	1	68
JL181401	1	36
JL181401	6	70
JL181401	4	71
JL181402	8	36
JL181405	3	36
JL181407	6	59
JL181408	7	59
JL181409	4	59
JL181410	12	59
JL181411	10	36
JL181416	12	62
JL181417	4	62
JL181418	25	62
JL181418	6	71

PARTE No.	FIG. No.	PAG. No.
JL181419	26	62
JL181419	7	71
JL181420	2	71
JL181421	3	71
JL181422	11	71
JL181423	10	71
JL181424	25	53
JL181425	26	53
JL181426	1	62
JL181427	11	57
JL181433	12	65
JL181436	19	65
JL181437	13	57
JL181439	24	53
JL181447	2	53
JL181448	3	53
JL181449	1	53
JL181450	4	53
JL181453	3	62
JL181456	9	53
JL181457	10	53
JL181464	8	36
JL181465	1	36
JL181468	17	37
JL191001	1	30
JL191004	7	30
JL191008	10	72
JL191008	25	80
JL191008	12	81
JL191009	11	72
JL191009	26	80
JL191009	13	81
JL231201	3	69
JL231203	4	69
JL231404	5	69

PARTE No.	FIG. No.	PAG. No.
JL231405	6	69
JL231600	23	48
JL231601	22	48
JL232604	14	30
JL232605	18	48
JL232605	2	54
JL232808	10	64
JL232811	8	65
JL233002	3	72
JL233002	11	74
JL233002	24	78
JL233002	2	81
JL233002	12	84
JL233002	5	85
JL233003	2	72
JL233003	2	73
JL233003	10	74
JL233003	23	78
JL233003	2	79
JL233004	1	72
JL233004	1	73
JL233004	9	74
JL233004	22	78
JL233004	1	79
JL233005	6	72
JL233005	4	73
JL233005	14	74
JL233005	5	81
JL233005	17	84
JL233005	4	85
JL233006	7	72
JL233006	7	74
JL233006	6	81
JL233015	9	22
JL233153	5	73

PARTE No.	FIG. No.	PAG. No.
JL233155	3	73
JL233239	2A	72
JL233239	2A	73
JL233239	10A	74
JL233239	23A	78
JL233239	2A	79
JL233316	10A	74
JL233316	23A	78
JL233316	2A	79
JL233316	1	81
JL233316	1	83
JL233316	1	85
JL351003	19	28
JL351009	10	28
JL351038	19	28
JL351200	3	29
JL351201	7	29
JL351202	8	29
JL351218	2	29
JL351219	16	29
JL351230	8	29
JL351232	7	29
JL351241	3	29
JL351246	3	29
JL351600	1	28
JL351800	7	14
JL401002	1	64
JL401002	7	65
JL401003	3	63
JL401004	4	63
JL401005	1	63
JL401006	2	63
JL401012	9	60
JL401016	17	64
JL401017	9	62

PARTE No.	FIG. No.	PAG. No.
JL401400	20	48
JL401401	21	48
JL401402	10	38
JL401403	19	48
JL401405	21	48
JL401406	5	46
JL401409	20	48
JL401410	21	48
JL401411	13	47
JL401600	8	66
JL401602	8	66
JL401801	13	66
JL401803	12	66
JL401804	22	67
JL402001	14	29
JL402007	14	29
JL402201	5	66
JL402202	6	66
JL402203	1	66
JL402208	17	67
JL402220	1A	66
JL402228	1A	66
JL402229	1	66
JL402245	1	66
JL402400	1	57
JL402403	8	57
JL402405	1	57
JL402412	1	57
JL402600	6	54
JL402602	6	54
JL403000	2	66
JL403600	14	38
JL501003	1	12
JL501040	1	12
JL501063	1	12

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
JL511001	2	1
JL511001	4	86
JL511002	1	1
JL511009	3	3
JL511010	2	4
JL511011	3	4
JL511016	3	24
JL511016	3	25
JL511022	6	3
JL511022	4	86
JL511029	11	3
JL511056	20	2
JL511058	10	2
JL511060	1	2
JL511061	3	2
JL511080	4	3
JL511112	7	3
JL511205	6	4
JL511219	7	3
JL511220	6	5
JL511221	5	5
JL511222	8	5
JL511231	6	5
JL511241	1	5
JL511249	6	4
JL511250	5	5
JL511254	7	4
JL521002	4	6
JL521002	4	86
JL521200	6	6
JL-5212-00-025/47	6	6
JL-5212-00-050/47	6	6
JL-5212-00-075/47	6	6
JL-5212-00-100/47	6	6
JL-5212-00-STD/47	6	6

PARTE No.	FIG. No.	PAG. No.
JL531203	3	16
JL531205	7	12
JL531205	1	16
JL541202	1	22
JL541203	7	22
JL541207	12	20
JL541207	4	86
JL541208	5	22
JL541208	4	86
JL541210	13	20
JL541218	22	21
JL541221	26	13
JL541222	18	21
JL541223	10	22
JL541227	8	20
JL541230	20	21
JL541231	19	21
JL541237	26	13
JL541238	10A	22
JL541245	2	22
JL541246	13	20
JL561205	1A	11
JL561206	2A	11
JL561401	1	11
JL561404	2	11
JL561405	4	11
JL561407	7	11
JL561408	8	11
JL561409	14	11
JL561410	15	11
JL571001	26	13
JL581000	1	26
JL581004	16	26
JL581007	5	26
JL581009	8	26

PARTE No.	FIG. No.	PAG. No.
JL581010	21	26
JL581015	11	26
JL581016	10	26
JL581018	7	26
JL581022	14	26
JL581023	2	26
JL581024	6	26
JL581025	4	26
JL581027	4	24
JL581027	4	25
JL581050	1	26
JL581065	13	2
JL581066	9	2
JL581201	1	24
JL581203	23	21
JL581204	18	24
JL581204	18	25
JL581205	19	24
JL581205	19	25
JL581206	20	24
JL581206	17	25
JL581217	1	25
JL581300	2	24
JL581300	2	25
JL582400	11	2
JL582402	6	2
JL591048	2	27
JL591052	1	27
JL591075	9	27
JL591086	16	27
JL591144	4	27
JL591148	17	27
JL591157	19	27
JL591165	8	27
JL591196	1	27

PARTE No.	FIG. No.	PAG. No.
JL591226	2	27
JL601000	6	18
JL601005	11	16
JL601010	30	13
JL601209	21	18
JL601210	1	18
JL601212	11	18
JL601213	24	19
JL601214	25	19
JL601215	19	18
JL601216	31	19
JL601219	10	18
JL601220	9	18
JL601221	30	19
JL601225	12A	3
JL601227	24	19
JL601228	12	18
JL601231	4	18
JL601234	32	19
JL601235	21	18
JL601237	12	3
JL601238	15	18
JN351604	16	66
JU231205	12	69
JU231207	11	69
JU531021	4	7
JU531213	7	12
JU531213	1	16
JU531215	7	12
JU531215	1	16
JU541005	13	12
JU541018	4	14
JU551401	6	20
JU551402	10	23
JU551404	1	23

PARTE No.	FIG. No.	PAG. No.
JU551406	9	23
JU571000	1	17
JW171015	4	18
JW181236	3	51
JY151011	26	50
JY181255	2	68
JY181284	6	65
JY541047	4	12
JY541058	10	14
JY551402	20	28
JY601235	16	18
JZ401013	7	66
KACA0520	11	36
KACA0616	11	36
KACA0635	9	69
KACA0820	11	34
KACB0514	6	57
KACB0516	3	54
KACB0835	18	60
KADA0510	11	27
KADA0512	14	52
KADA0512	17	53
KADA0622	11	30
KADA0630	19	26
KADA0630	17	27
KADA0630	16	53
KADB0516	13	38
KADB0516	10	52
KADC0616	7	62
KADD0510	12	64
KADD0610	11	65
KADD0612	29	55
KADD0614	10	60
KADD0635	18	2
KADE0610	18	35

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
KADE0614	2	56
KADE0620	11	30
KADF0608	15	65
KADF0610	13	29
KADF0612	4	68
KADF0614	18	65
KADF0616	23	19
KADF0616	13	65
KADF0630	16	2
KADF0680	5	68
KADF0820	9	36
KADM0508	4	2
KADM0610	18	26
KADP0516	27	13
KADQ0606	18	16
KADQ0620	11	5
KADQ0620	13	16
KADQ0625	14	27
KADQ0625	3	28
KADQ0630	14	20
KADQ0630	6	22
KADQ0645	8	22
KAEA0608	6	46
KAEG0620	13	62
KAEM0622	9	26
KAEQ0616	27	13
KAEQ0620	10	3
KAEQ0620	11	5
KAEQ0630	14	20
KAEQ0630	6	22
KAEQ0640	20	15
KAEQ0645	8	22
KAET0610	18	35
KBBA0408	12	40
KBBA0512	4	36

PARTE No.	FIG. No.	PAG. No.
KBBA0512	24	45
KBBA0514	3	64
KBBG0612	19	15
KBQA3506	17	26
KBUA0612	4	51
KBUA0612	6	56
KBUA0620	3	68
KBUB0410	8	59
KBUB0512	2	51
KBUB0516	13	52
KBUC0514	20	65
KBUC0516	12	60
KCAA0504	3	57
KCGA0505	7	54
KCGA1010	7	63
KCGD0505	13	64
KCGD0606	5	64
KCGD1010	8	63
KCGF0606	17	2
KDAA0408	6	53
KDAA0510	16	37
KDAA0510	10	57
KDAA1018	13	69
KDBA0512	12	53
KDBA0512	6	62
KDBA0613	8	62
KDBA0818	3	47
KDBB0512	18	53
KDBE0613	8	69
KDDB0408	11	40
KEAA1110	3	17
KEAB1010	3	17
KEBA3715	9	14
KIT-472930/00	4	72
KIT-472930/00	12	74

PARTE No.	FIG. No.	PAG. No.
KIT-472930/00	20	77
KIT-472930/00	3	81
KJAC1824	8	3
KPBC6202	3	40
KPBC6202	3	43
KPBC6302	4	43
LAA00019	10	43
LAC00008	14	59
LAC00016	30	35
LAC00017	7	69
LAC00019	2	33
LAC00020	4	47
LAC00022	12	52
LAC00022	22	53
LAC00024	6	10
LAC00029	10	69
LAC00034	20	52
LAC00034	20	53
LAC00034	10	87
LAC00035	8	56
LAC00036	11	59
LAC00037	9	59
LAC00046	30	35
LAC00054	6A	57
LAC00054	15	59
LAC00063	7	52
LAC00063	19	53
LAC00086	10	16
LAD00037	13	41
LAD00040	26	19
LAD00040	9	32
LAD00055	14	28
LAD00077	2	2
LAD00077	5	12
LAD00081	21	15

PARTE No.	FIG. No.	PAG. No.
LAD00120	21	62
LAD00129	5	1
LAD00135	6	38
LAE00010	18	28
LAE00014	2	14
LAE00016	8	4
LAE00016	15	28
LAE00017	1	8
LAE00018	4	17
LAE00041	14	18
LBB00004	3	26
LBB00006	12	12
LBB00007	21	13
LBR00002	7	53
LBR00002	8	60
LBR00002	5	62
LBS00001	4	60
LBU00009	5	65
LBU00023	11	53
LBU00030	2	62
LCA00009	12	43
LCD00001	10	7
LCG00006	17	3
LCG00008	9	65
LCJ00002	15	40
LCJ00002	19	43
LDA00007	13	56
LDA00007	7	60
LDA00008	2	3
LDA00013	10	34
LDB00007	7	57
LDB00010	13	28
LDB00018	15	44
LDB00020	3	20
LDB00023	20	26

PARTE No.	FIG. No.	PAG. No.
LDB00023	21	53
LDB00023	3	56
LDB00023	14	65
LDB00029	14	40
LDB00029	18	43
LDB00051	9	16
LDC00001	14	69
LDH00002	12	7
LEB00001	4	5
LEB00001	28	13
LEB00001	16	16
LG001-TT	27	80
LJA00004	23	15
LJA00005	13	18
MF12V9-1A-AUTECO	15	66
PA181292	25	60
PA181293	24	60
PA581038	5	2
PN100.096-BL	8	74
PN100.096-OR	8	74
PN100.096-RD	8	74
PN101.046	1	76
PN101.046-BL	1	76
PN101.046-GR	1	76
PN101.046-OR	1	76
PN101.046-RD	1	76
YJL02003	14	57
YJL02004	15	57
YJL02006	29	61
YJL06001	24	62
YJL06002	23	62
YJL06003	22	62
YTX9-BS-GEL-AUTECO	15	66

FICHA TÉCNICA PULSAR NS200 / AS200 / NS200 BSIV

CARACTERÍSTICAS	UNIDAD
Motor :	4T, monocilíndrico, enfriada por líquido.
Diámetro x Carrera :	72.00mm x 49.00mm
Índice de compresión :	11:1
Potencia máxima :	23.2 HP @ 9.500 rpm
Torque máximo :	18.3 Nm @ 8.000rpm
Sistema de ignición :	CDI digital con microprocesador y TPS (NS200 - AS200) CDI digital con microprocesador (NS200 BS-IV)
Bujías :	Izq.-Der.:PRG6HCC Central: BOSCH YR5NE
Tolerancia de las bujías :	0.7 a 0.8 mm
Lubricación :	Bomba húmeda de aceite, forzada.
Arranque :	Eléctrico.
Transmisión :	Mecánica 6 velocidades.
FRENOS	
Freno delantero :	Freno de Disco hidráulico.
Freno trasero :	Freno de Disco hidráulico.
CAPACIDAD DEL TANQUE	
Lleno :	12 litros
Combustible :	Corriente (NS200 - AS200) Extra (NS200 BS-IV)
Reserva :	2.4 litros
Reserva utilizable :	2.2 litros
LLANTAS	
Llantas Delantera :	100/80 x 17 TUBELESS
Presión de aire Delantera :	25 PSI
Llanta Trasera :	130/70 x 17 TUBELESS
Presión de aire Trasera (solo) :	28 PSI
Presión Trasera (Con Parrillero) :	32 PSI
SISTEMA ELECTRICO	
Bombillo Farola :	55/60 W
Luz de Stop :	LED
Luces direccionales :	10 W
Indicadores del tablero :	LED
Velocímetro :	Display digital
Pito :	12 V
Batería :	12V - 8 Ah
DIMENSIONES	
Largo x Ancho x Alto :	2017 mm x 804 mm x 1195 mm (NS200) 2070 mm x 804 mm x 1205 mm (AS200) 2017 mm x 804 mm x 1075 mm (NS200 BS-IV)
Distancia entre ejes :	1363 mm
Altura al piso :	167 mm (NS200 - AS200) 169 mm (NS200 BS-IV)
Peso en Seco :	145 Kg (NS200) 153 Kg (AS200) 154 Kg (NS200 BS-IV)



pulsar
NS200 - AS200





Línea Gratuita Nacional
01 8000 52 00 90
servicioalcliente@auteco.com.co
www.auteco.com.co



Mobil