



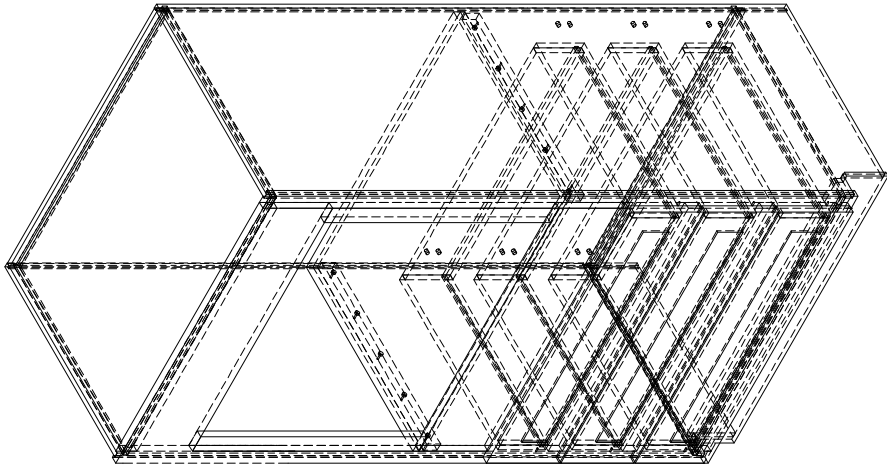


0338424=0336624+0331824
0339024=0336624+0332424
0339624=0336624+0333024

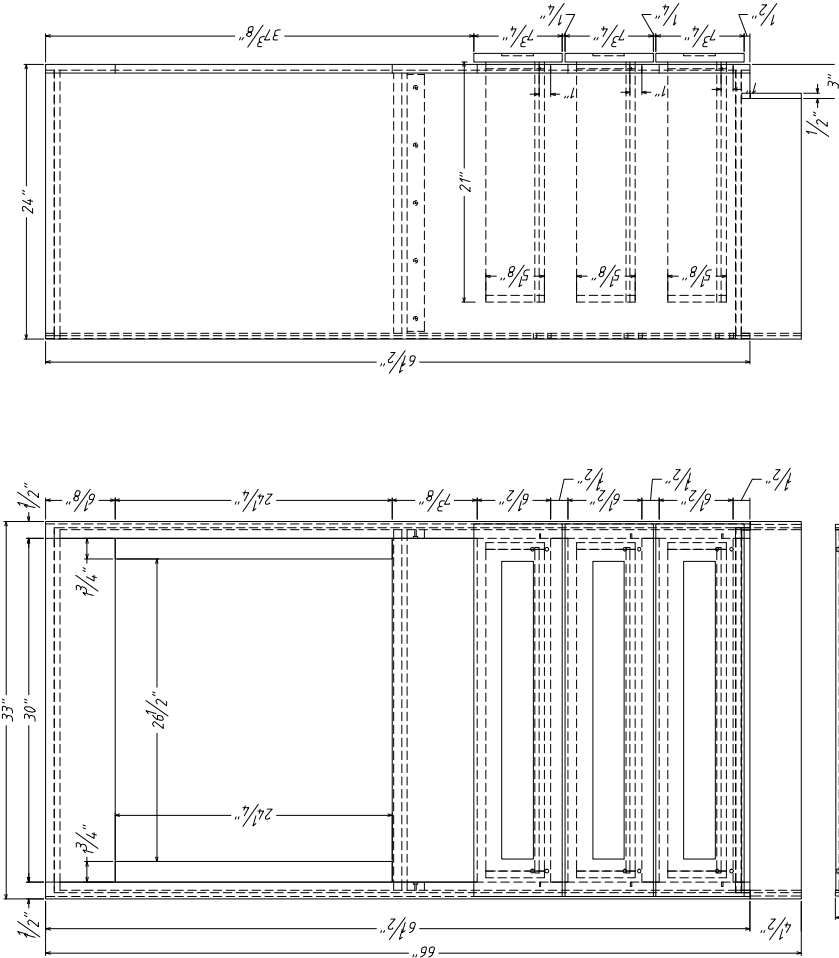


0336624


Kitchen Cabinet Studio		Shaker Spice		DRAW		SUNNY ZHANG	

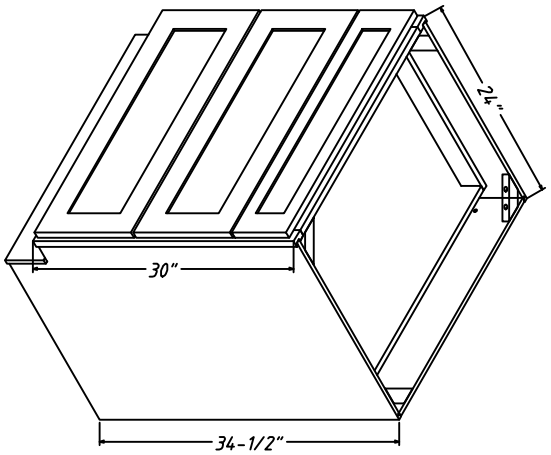

Same construction:
30B12, 30B15, 30B18,
30B24, 30B27, 30B30, 30B36

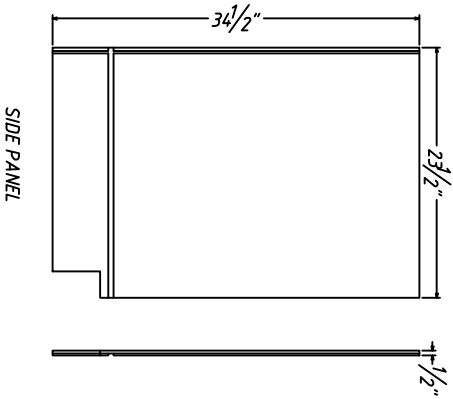


SIDE PANEL

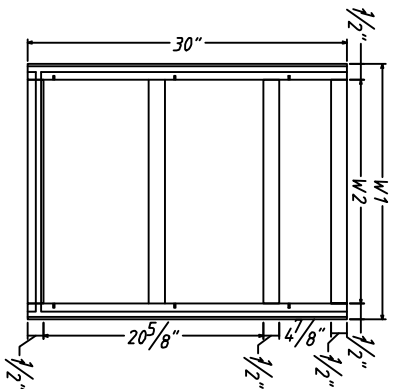

FRAME

ITEM NO.	W1	W2	D
30B12	12"	9"	3/4"
30B15	15"	12"	3/4"
30B18	18"	15"	3/4"
30B21	21"	18"	3/4"
30B24	24"	21"	3/4"
30B27	27"	24"	3/4"
30B30	30"	27"	3/4"
30B36	36"	33"	3/4"

DRAWER


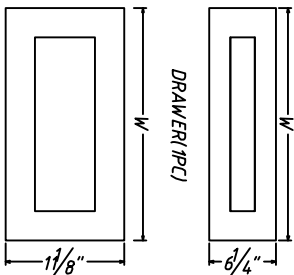


DRAWER (1PC)

DRAWER (2PCS)

ITEM NO.	W	D
30B12	11-1/2"	3/4"
30B15	14-1/2"	3/4"
30B18	17-1/2"	3/4"
30B21	20-1/2"	3/4"
30B24	23-1/2"	3/4"
30B27	26-1/2"	3/4"
30B30	29-1/2"	3/4"
30B36	35-1/2"	3/4"


DRAWER-BOX

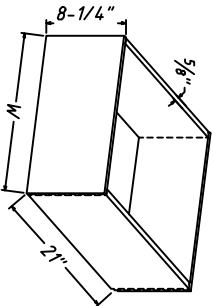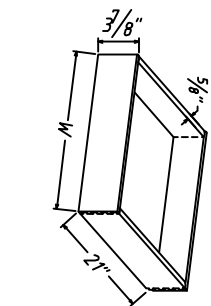

ITEM NO.	W	D
30B12	11-1/2"	3/4"
30B15	14-1/2"	3/4"
30B18	17-1/2"	3/4"
30B21	20-1/2"	3/4"
30B24	23-1/2"	3/4"
30B27	26-1/2"	3/4"
30B30	29-1/2"	3/4"
30B36	35-1/2"	3/4"


DRAWER-BOX

ITEM NO.	W	D
30B12	11-1/2"	3/4"
30B15	14-1/2"	3/4"
30B18	17-1/2"	3/4"
30B21	20-1/2"	3/4"
30B24	23-1/2"	3/4"
30B27	26-1/2"	3/4"
30B30	29-1/2"	3/4"
30B36	35-1/2"	3/4"

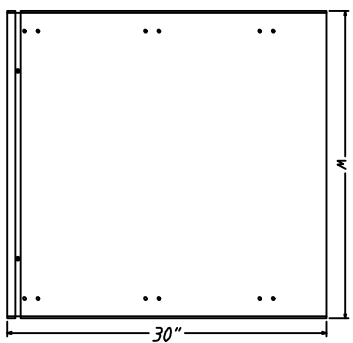


BACK PANEL

ITEM NO.	W	D
30B12	11"	1/2"
30B15	14"	1/2"
30B18	17"	1/2"
30B21	20"	1/2"
30B24	23"	1/2"
30B27	26"	1/2"
30B30	29"	1/2"
30B36	35"	1/2"

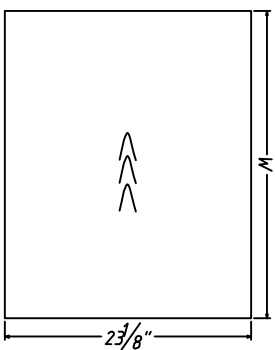

BOTTOM PANEL

ITEM NO.	W	D
30B12	11"	1/2"
30B15	14"	1/2"
30B18	17"	1/2"
30B21	20"	1/2"
30B24	23"	1/2"
30B27	26"	1/2"
30B30	29"	1/2"
30B36	35"	1/2"



TOE KICK

ITEM NO.	W	D
30B12	12"	1/2"
30B15	15"	1/2"
30B18	18"	1/2"
30B21	21"	1/2"
30B24	24"	1/2"
30B27	27"	1/2"
30B30	30"	1/2"
30B36	36"	1/2"