



## Count Totaliser **CNT704**

### Features

- ▶ 6 digit, 7 segment count totaliser
- ▶ Inbuilt sensor supply
- ▶ 20Hz, 5kHz input speed
- ▶ Front panel reset
- ▶ Speed selection via DIP switch
- ▶ 36 x 72mm size
- ▶ Memory retention

# INDEX

## CONTENTS

	Page No.
<b>A) SAFETY PRECAUTIONS</b>	
SAFETY SUMMARY.....	03
<b>B) OVERVIEW</b>	
SPECIFICATIONS.....	03
MECHANICAL INSTALLATION.....	03
<b>C) TERMINAL CONNECTION</b>	
DIP SWITCH SETTING.....	04
RESET METHOD.....	04
TYPICAL APPLICATION.....	04

## A) SAFETY PRECAUTIONS

### **⚠ SAFETY SUMMARY**

Please maintain these instructions and review them prior to using the unit:

### **⚠ WARNING:**

1. This unit is panel mounted type with its output terminals connecting to the host equipment. Such equipment shall also comply with basic EMI/EMC and safety requirements like IEC 61326-1 and IEC 61010 respectively.
2. To avoid electric shock, power supply of the unit should be kept off while wiring. Wiring should be done strictly as per the terminal layout, given in the manual.

### **⚠ CAUTION:**


1. This unit is not intended for outdoor use.
2. The power connection cable must have a cross-section of at least 1sq.mm and insulation capacity of at least 1.5kV.
3. The output connections must not be loaded beyond the specified values/range.
4. Avoid inflow of dust and contact of conductive material with the internal circuitry of the unit.
5. The unit must not operate in presence of heating sources, caustic vapors, oil, steam, vibration or impact etc.
6. Use clean moist cloth soaked in water for cleaning. Avoid entry of water into the circuitry through the ventilation holes.

## B) OVERVIEW


### **SPECIFICATIONS**

<b>Display</b>	6 digit, 0.36" white 7 segment LED
<b>Supply voltage</b>	90 to 270V AC/DC, 50/60 Hz, 5VA max
<b>Range</b>	999999 counts
<b>Sensor supply</b>	12V DC @30mA (use external supply if current>30mA )
<b>Input</b>	5 to 30V DC from proximity switches, encoders, potential free contacts, limit switches etc.
<b>Input speed</b>	Slow speed: 20Hz, High speed: 5kHz
<b>Memory retention</b>	10 years
<b>Housing</b>	Flame retardant plastic
<b>Mounting</b>	Panel mounting
<b>Temperature</b>	Operating: 0 to 50 °C, Storage: -20 to 75 °C
<b>Humidity</b>	95% RH (non-condensing)
<b>Weight</b>	85 gm

### **MECHANICAL INSTALLATION**

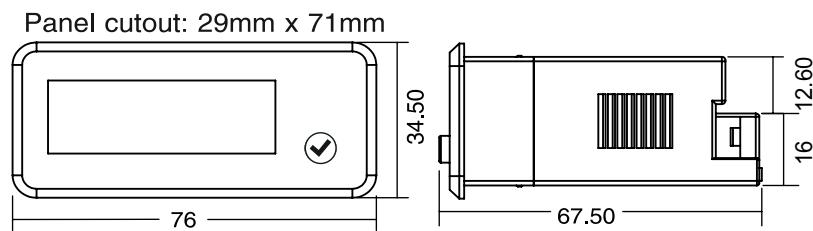

## C) TERMINAL CONNECTION

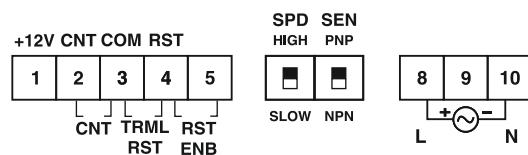


TERMINALS	DESCRIPTION
1	+12V
2-3	Start
3-4	Terminal reset
4-5	Front reset enable
8	L-Live (+)
10	N-Neutral (-)

### DIP SWITCH SETTING

DIP SWITCH	OFF	ON
DIP 1	High speed	Slow speed
DIP 2	PNP sensor	NPN sensor

### RESET METHOD


**By front key:** Short terminal 4 & 5 to enable front panel reset. Press RST key momentarily.

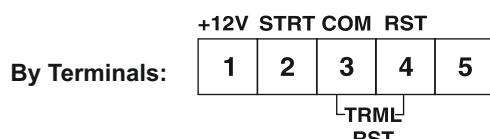

### TYPICAL APPLICATION

**CASE1:** Operated by external contact.


- 1) A PNP/NPN proximity sensor can be used instead of a switch. (NPN/PNP can selected through DIP SW)
- 2) Connect proximity switch between terminals 1, 2 & 3.
- 3) The count displayed on CNT704 will be indicative count (sensed by sensor).

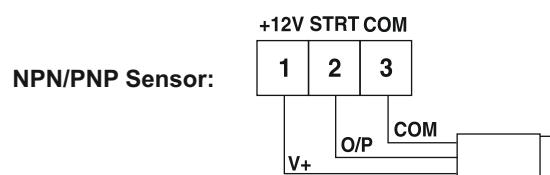

**(Sensor color codes :**

Red = +12V, Green = CNT, Black = COM  
Brown = +12V, Black = CNT, Blue = COM)

**CASE2:** Operated only by potential free contact

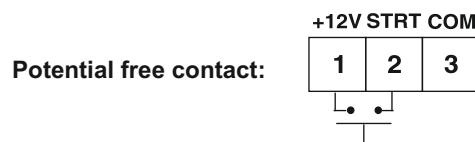

**Note 1:** Sensor selection (PNP/NPN) is detected only at power ON .

**Note 2:** Potential free count will work only during NPN selection.

**Etsilon**

**Factory Address :** EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape, Navi Mumbai - 400710, India.

**Website :** [www.etsilon.com](http://www.etsilon.com) | **Customer Care No.** 7304413724 | **Email :** support@etsilon.com

**For Service :** **Tel. No.** : 9136977317 | **Email :** service@etsilon.com