

**TECHNICAL GUIDE  
&  
PARTS CATALOGUE**

**Ca.NH3 Series**

**AUTOMATIC MECHANICAL**


**SII Products**

**[SPECIFICATION]**

Movement							
Movement size	Outside diameter	Φ 27.40mm					
	Casing diameter	Φ 29.36mm (with dial holding spacer)					
	Total height	5.32mm					
Cal. No.		NH35	NH36	NH37	NH38	NH39	
Time indication	3Hands (hour, minute, second)	○	○	○	○	○	
	Date calendar	○	○	○	-	-	
	Day calendar	-	○	-	-	-	
	24hour indicator	-	-	○	-	○	
Basic function	Manual winding	○	○	○	○	○	
	Automatic winding with ball bearing	○	○	○	○	○	
	Stop-second device	○	○	○	○	○	
	Quick date correction	○	-	○	-	-	
	Quick day-date correction	-	○	-	-	-	
Frequency		21,600 vibrations per hour					
Accuracy	Static accuracy	-20~+40 seconds per day * Measurement should be done within 10~60 minutes after fully wound up. * All measurements are made without the calendar in function.					
	Measurement position	Direction of 3 positions. (1) Dial up (2) 9 o'clock up (3) 6 o'clock up					
	Lift angle	53 deg.					
	Measurement time	20 seconds * Equipment to be used : Witschi WATCH EXPERT					
	Posture difference	Difference is under 60 seconds within max value and minimum value. * Measurement should be done within 10~60 minutes after fully wound up. * Direction of 4 positions. (1) 12 o'clock up (2) 9 o'clock up (3) 6 o'clock up (4) 3 o'clock up					
	Isochronisms (24h-0h)	-20~+40 seconds per day. * Measurement position : Dial up * Difference of static accuracy of 24h and 0h					
Duration time		More than 41 hours ... Mainspring after fully wound up. * Posture to confirmation : Dial up					
Winding the mainspring		<< Movement >> •Fully wound up by turning the crown minimum 55 times. •Fully wound up by turning the ratchet wheel screw 8 times. << Complete Watch >> A winding machine is needed to wind up the mainspring. Full wind up conditions •Rotary speed : 30 rpm •Operating time: 60 minutes					
Jewels		24 jewels					
Crown position	Normal position	Counterclockwise	Free				
		Clockwise	Manual winding				
	First click	Counterclockwise	Date setting	Date setting	Date setting	Time setting	
		Clockwise	Free	Day setting	Free		
Second click	Time setting					-	


Disassembling procedures Figs. NH35/37 ④ → ⑱ NH36 ① → ⑱	① → ⑱	<b>Type of oil</b> 	<b>Oil quantity mark</b> NORMAL QUANTITY SUFFICIENT QUANTITY
Reassembling procedures Figs. NH35/37 ⑱ → ④ NH36 ⑱ → ①	⑱ → ①		

<<NH35/36/37>>

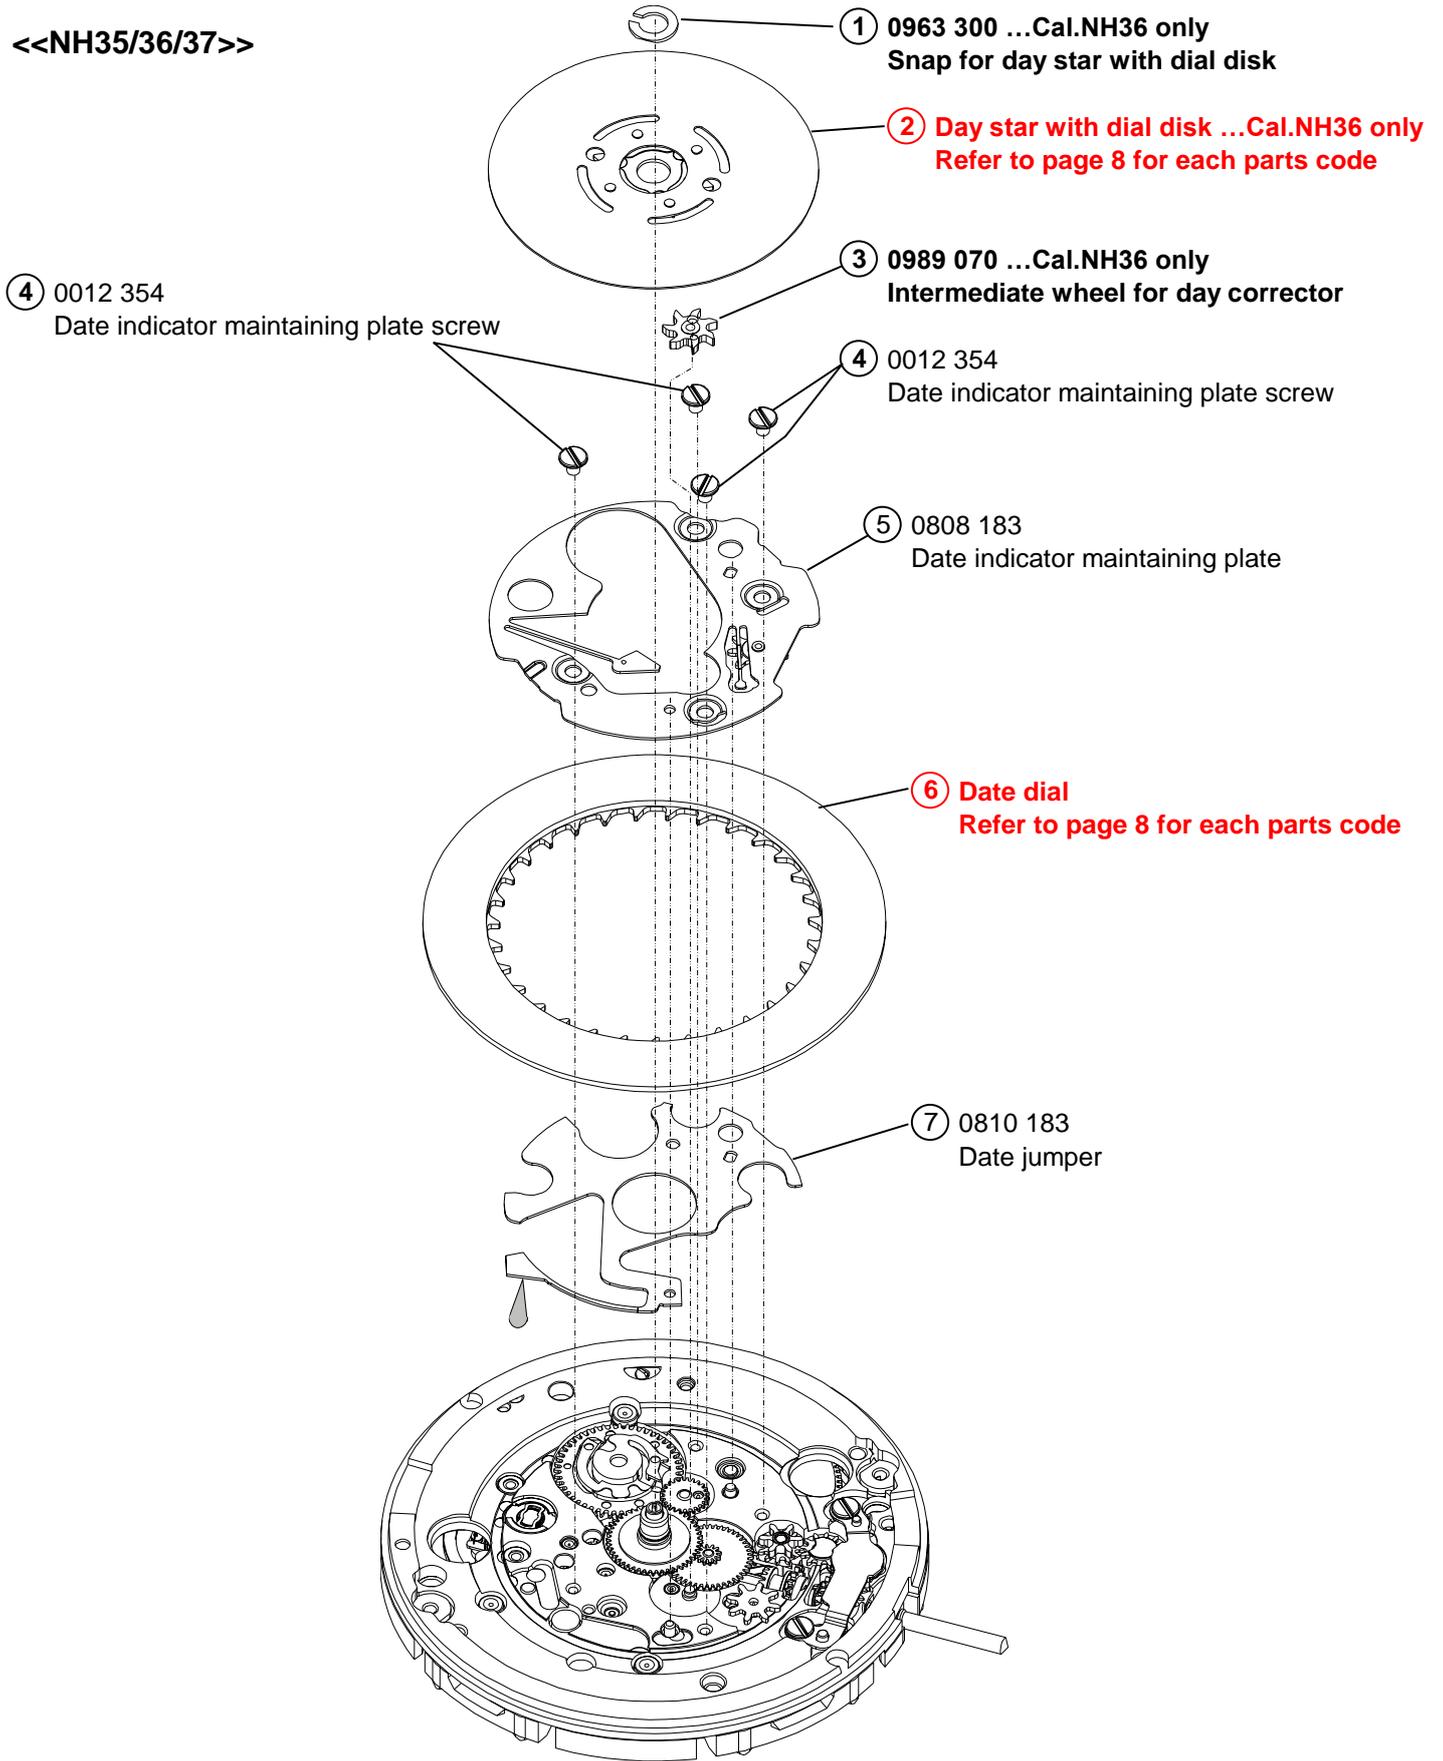

Type of oil

Moebius 9010

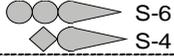


Oil quantity mark

NORMAL QUANTITY

SUFFICIENT QUANTITY

<<NH35/36/37>>

**14** Hour wheel  
Refer to page 9 for each parts code

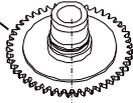

**8** 0962 025  
Day-date corrector setting transmission wheel E

**9** 0012 485  
Guard for day-date corrector setting transmission wheel screw

**15** 0261 190  
Minute wheel and pinion



**10** 0836 183  
Guard for day-date corrector setting transmission wheel

**16** Refer to page 9 for each parts code


**17** Refer to page 9 for each parts code

**18** Cannon pinion  
Refer to page 8 for each parts code




**11** 0962 185  
Day-date corrector setting transmission wheel C


**12** 0962 023  
Day-date corrector setting transmission wheel B

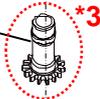

**13** 0737 183  
Day-date corrector wheel

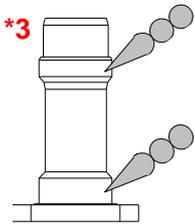


**19** 4408 170  
Dial holding spacer

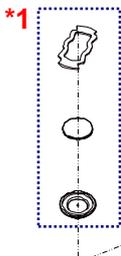


**37-1**  
Lower shock absorbing spring

**37-2**  
Lower shock absorbing cap jewel

**37-3**  
Lower hole jewel frame for shock-absorber

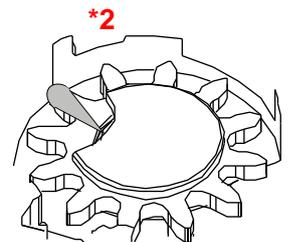



Disassembling procedures Figs.  
NH38/39 ① → ⑧  
Reassembling procedures Figs.  
NH38/39 ⑧ → ①

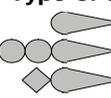**Type of oil**  

 Moebius 9010  
S-6  
S-4

**Oil quantity mark**  

 NORMAL QUANTITY  
SUFFICIENT QUANTITY
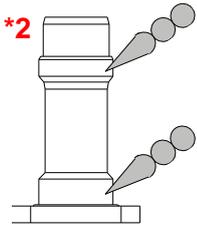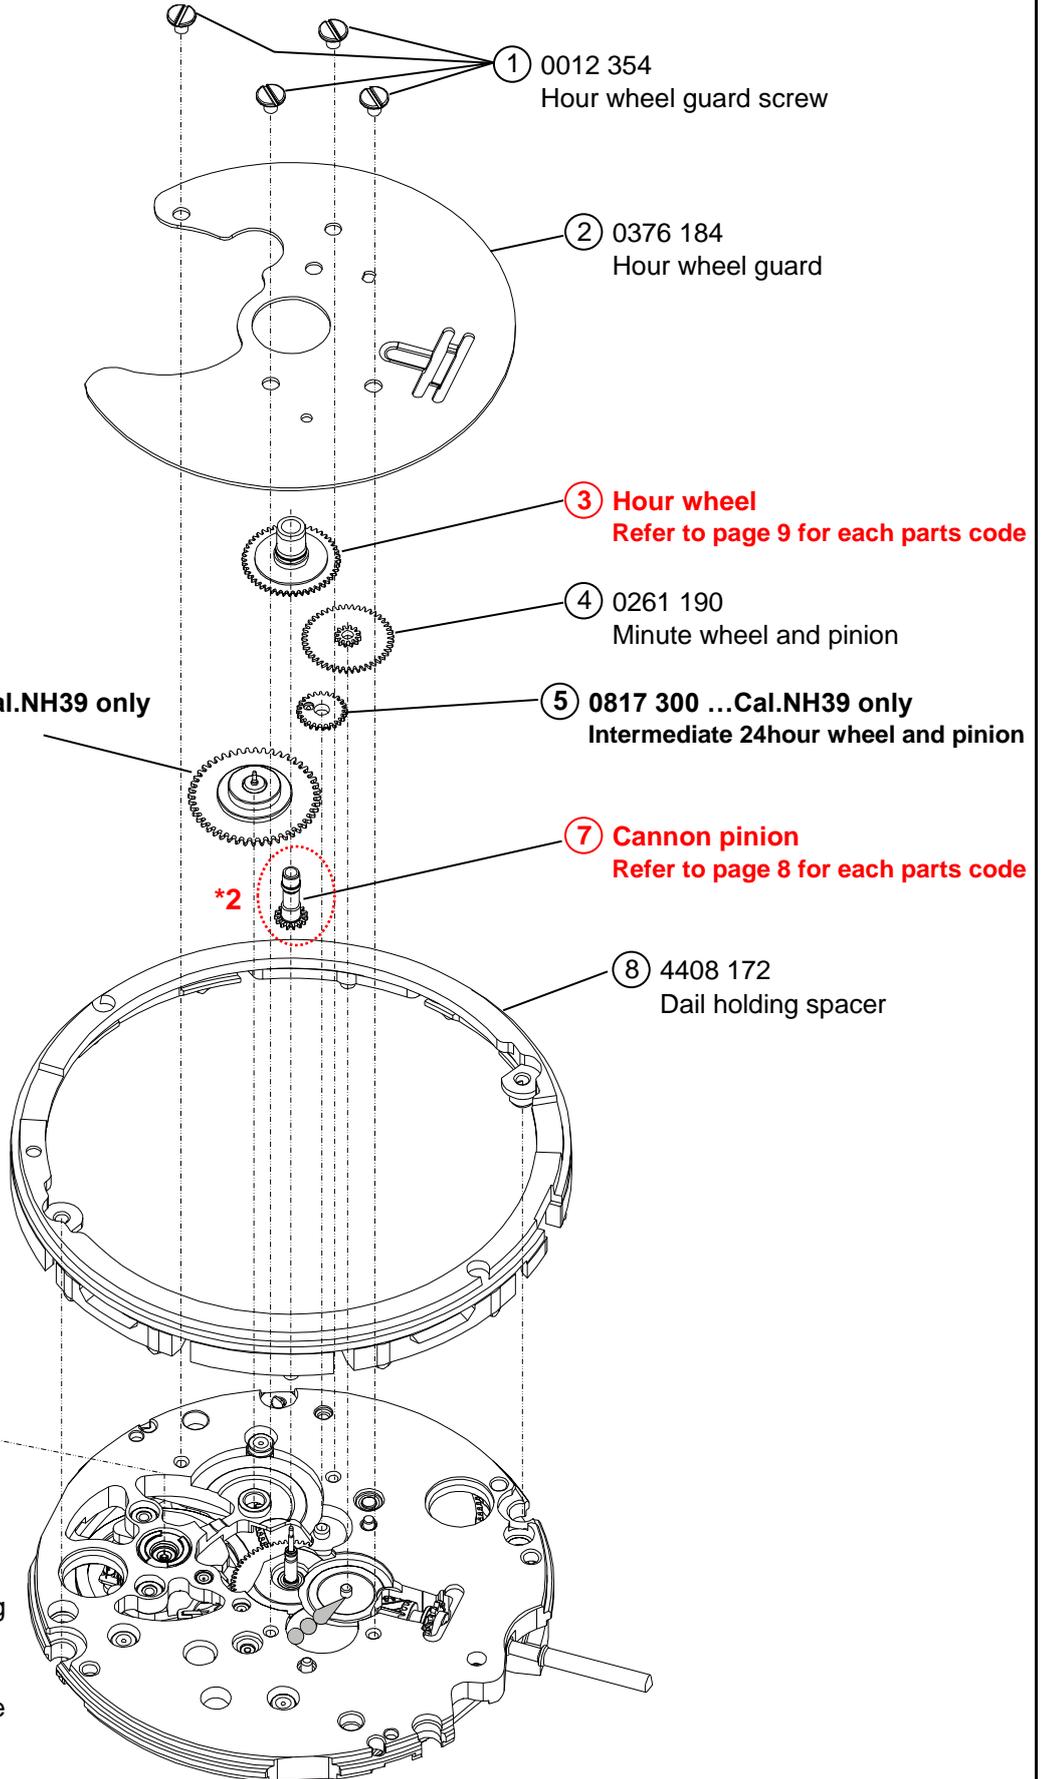
<<NH38/39>>



- \*1 ③7-1 Lower shock absorbing spring
- ③7-2 Lower shock absorbing cap jewel
- ③7-3 Lower hole jewel frame for shock-absorber


Disassembling procedures Figs.

① → ③⑦

Reassembling procedures Figs.

③⑦ → ①

Type of oil

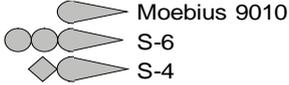

Oil quantity mark



**① Oscillating weight with ball bearing**  
Refer to page 8 for each parts code

**⑦ 0012 100**  
Balance bridge screw



**⑧ 0171 353**  
Balance cock

**8-1**  
Balance complete  
with stud  
Refer to page 8 for  
each parts code

**\*1** **8-2**  
Upper shock absorbing spring

**8-3**  
Upper shock absorbing  
cap jewel

**8-4**  
Upper hole jewel frame for  
shock-absorber

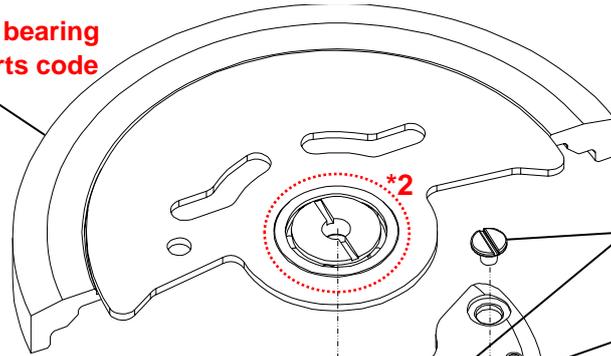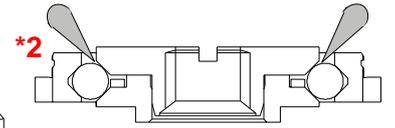

**\*2** **② 0012 354**  
Automatic train bridge screw

**③ 0191 183**  
Automatic train bridge

whole tooth  
**④ 0514 183**  
Second reduction wheel and pinion




**⑤ 0012 919**  
Ratchet wheel screw

**⑥ 0285 051**  
Ratchet wheel

**⑨ 0012 354**  
Pallet bridge screw

**⑩ 0161 300**  
Pallet bridge

**⑪ 0301 009**  
Pallet fork

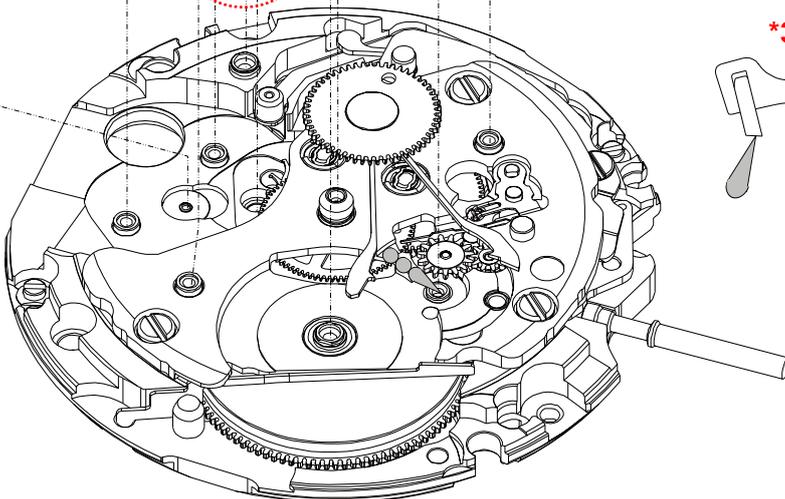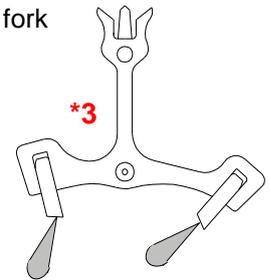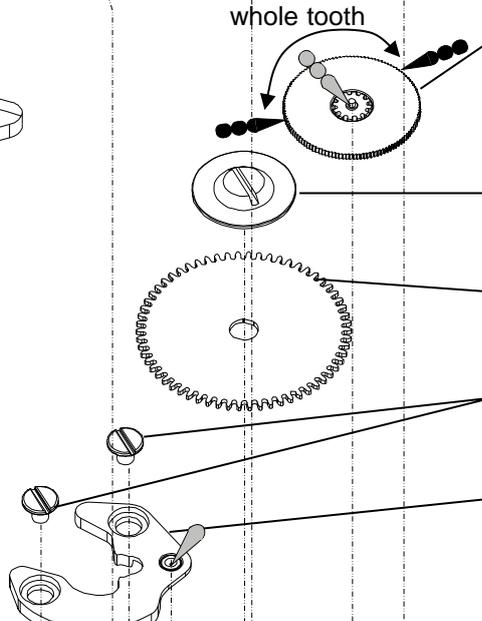

Type of oil

Moebius 9010

S-6  
S-4


Oil quantity mark

NORMAL QUANTITY

SUFFICIENT QUANTITY


⑰ 0511 010

First reduction wheel  
Refer to page 10 for oiling spot

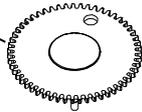

⑯ 0831 183

Pawl lever

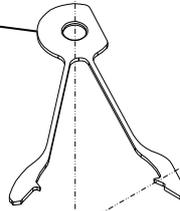

⑮ 0836 002



Reduction wheel holder



⑳ Fourth wheel and pinion

Refer to page 8 for each parts code

\*1

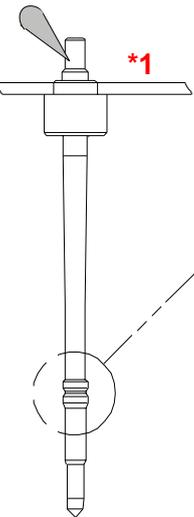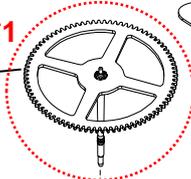

⑫ 0120 100

Barrel and train wheel bridge screw

⑬-1 Cap jewelled spring

⑬-2 Cap jewel

⑭ 0363 184

Ratchet sliding wheel spring

⑬ 0114 183

Barrel and train wheel bridge with hole jewel frame  
Refer to page 10 for oiling spot

⑱ 0436 166

Lower plate for barrel and train wheel bridge

⑲ 0012 354

Lower plate for barrel and train wheel bridge screw

㉑ 0231 070


Third wheel and pinion

㉒ 0381 004

Click

㉓ 0201 083

Barrel complete with mainspring

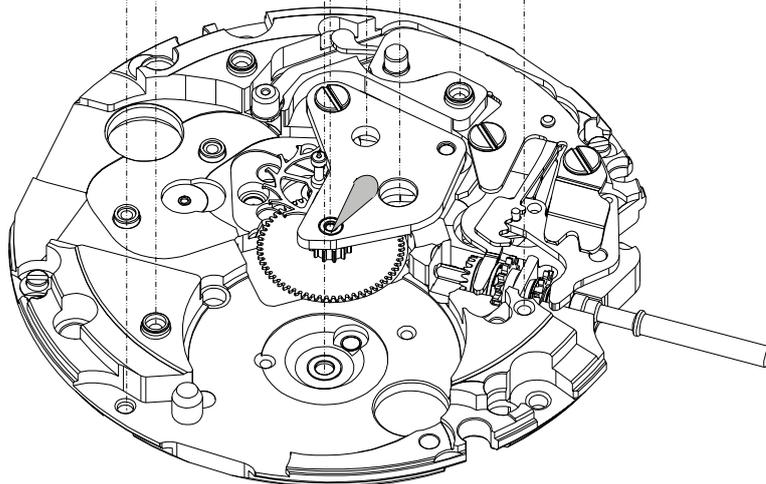

Type of oil


Moebius 9010

S-6  
S-4

Oil quantity mark

NORMAL QUANTITY

SUFFICIENT QUANTITY

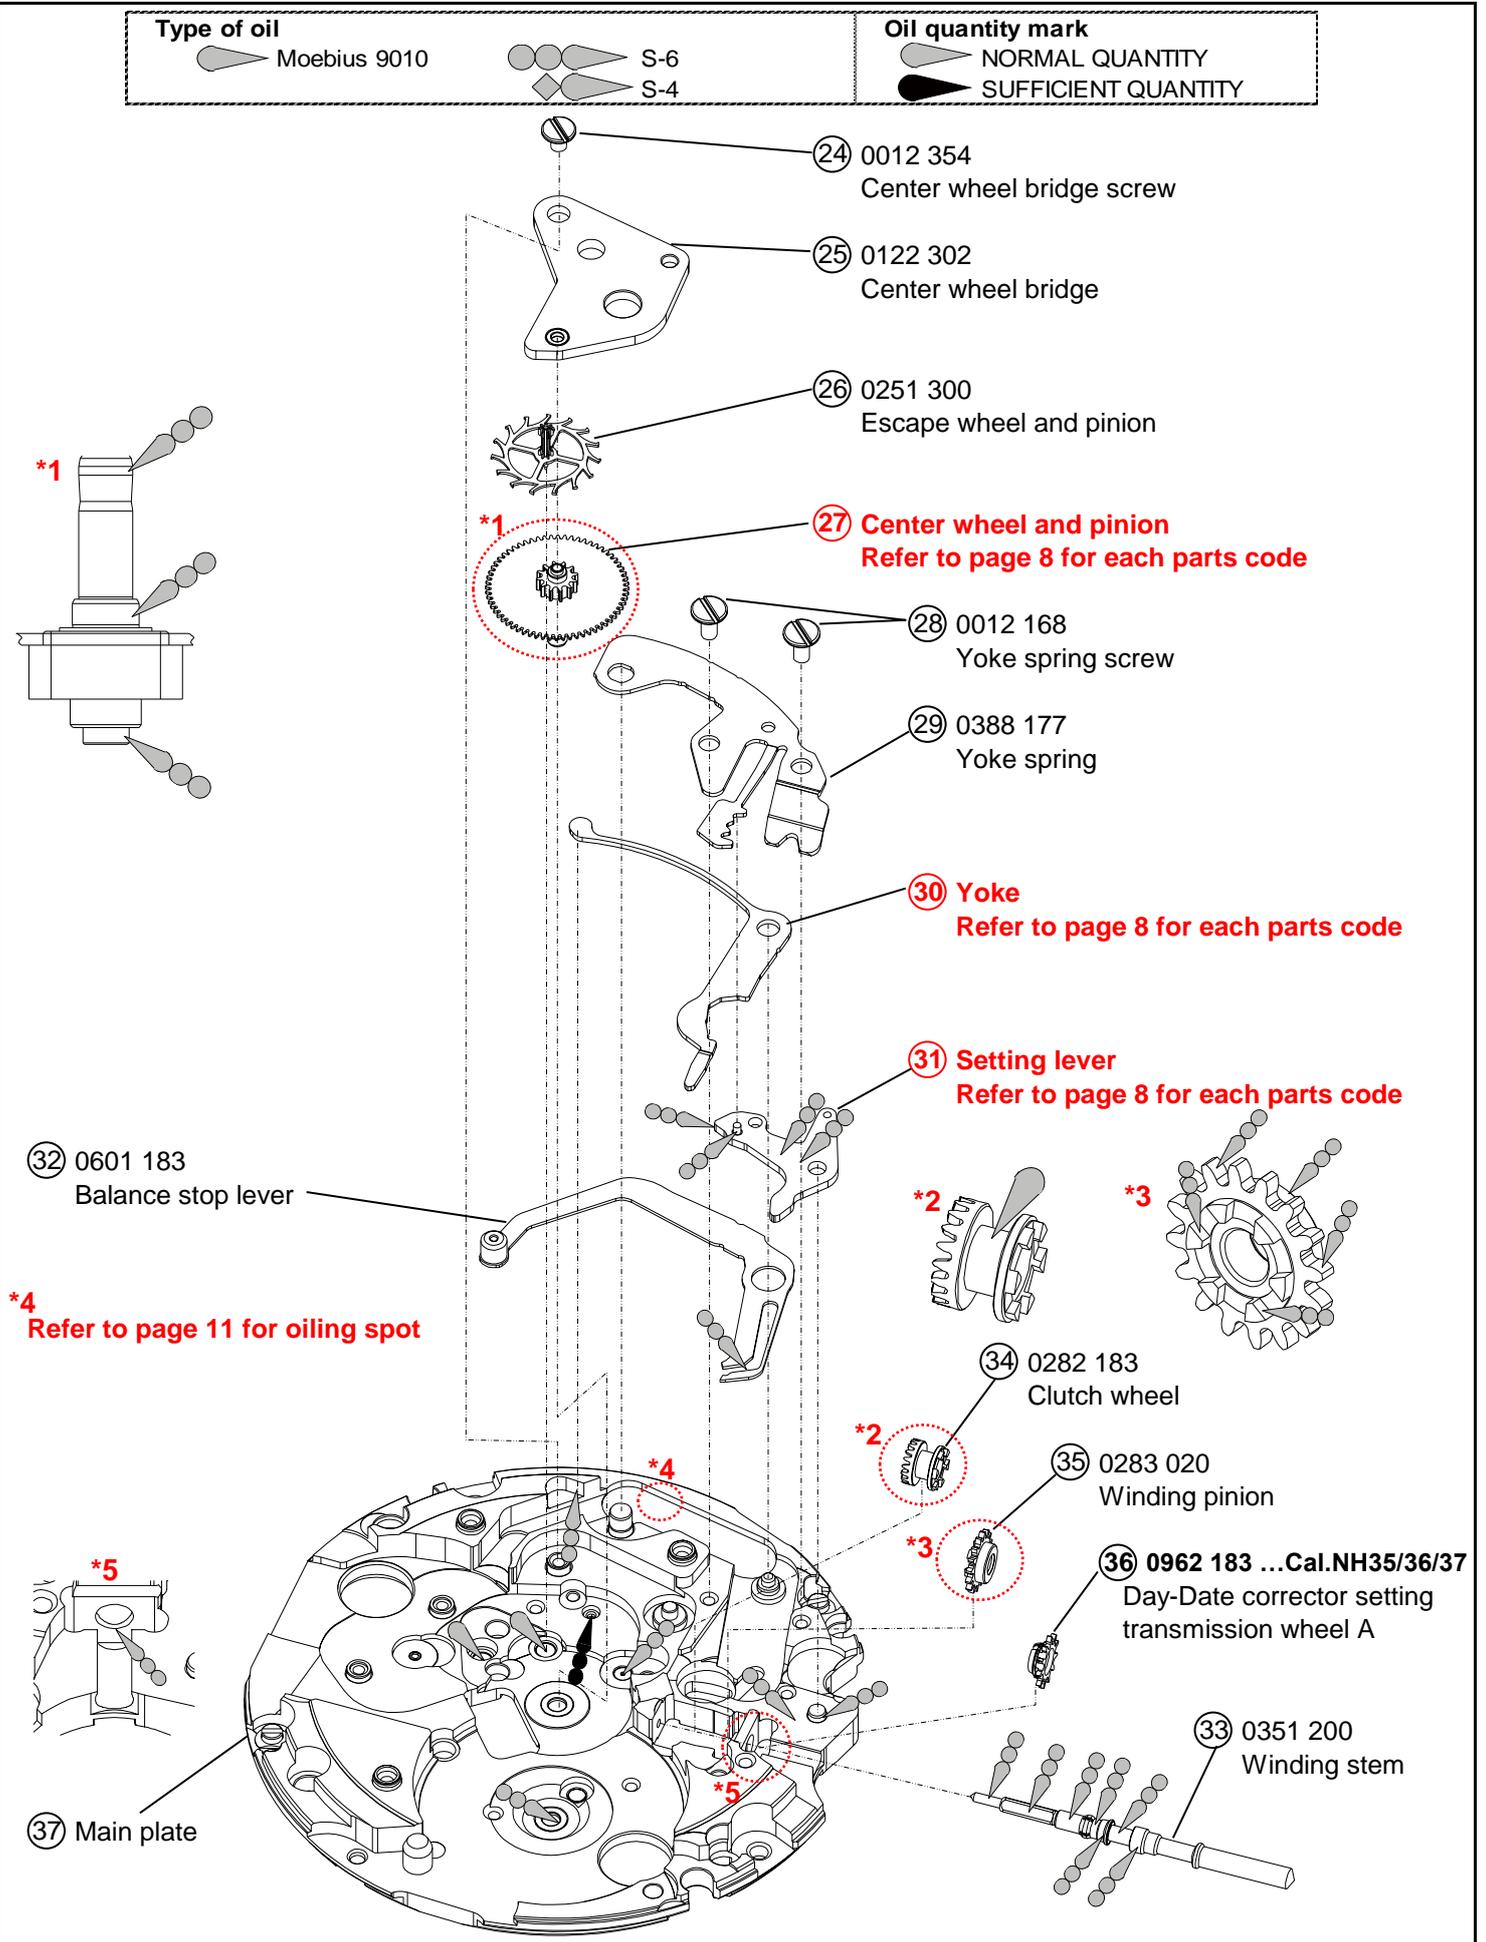

**② Day star with dial disk ...Cal.NH36 only (P-2)**

Parts code	Position of crown	Position of day frame	Color of letters	Color of background	Language
0160 495	3H	3H	MON~FRI : Black SAT : Blue SUN : Red	White	English & Spanish

**⑥ Date dial ... Cal.NH35 / NH36 / NH37 (P-2)**

Cal.	Parts code	Position of crown	Position of day frame	Color of letters	Color of background
NH35 NH37	0878 208	3H	3H	Black	White
NH36	0878 206	3H	3H	Black	White

**⑱ Cannon pinion ...NH35/36/37 (P-3)**

Cal.	Parts code	Cal.	Parts code
NH35 NH36	0225 420	NH37	0225 426

**⑦ Cannon pinion ...NH38/39 (P-4)**

Cal.	Parts code	Cal.	Parts code
NH38	0225 420	NH39	0225 426

**① Oscillating weight with ball bearing (P-5)**

Cal.	Parts code	Marking	Cal.	Parts code	Marking	Cal.	Parts code	Marking
NH35	0509 467	Japan mark	NH36	0509 463	Japan mark	NH37	0509 470	Japan mark
	0509 468	Malaysia mark		0509 464	Malaysia mark		0509 471	Malaysia mark
NH38	0509 476	Japan mark	NH39	0509 473	Japan mark			
	0509 477	Malaysia mark		0509 474	Malaysia mark			

**⑧-1 Balance complete with stud (P-5)**

Cal.	Parts code	Cal.	Parts code
NH35 NH36 NH37	0310 183	NH38 NH39	0310 184

**⑳ Fourth wheel and pinion (P-6)**

Cal.	Parts code	Cal.	Parts code
NH35 NH36 NH38	0241 010	NH37 NH39	0144 185

**⑳ Center wheel and pinion with cannon pinion (P-7)**

Cal.	Parts code	Cal.	Parts code
NH35 NH36 NH38	0224 203	NH37 NH39	0224 205






**⑳ Yoke (P-7)**

Cal.	Parts code	Cal.	Parts code
NH35 NH36 NH37	0384 183	NH38 NH39	0384 184






**㉑ Setting lever (P-7)**

Cal.	Parts code	Cal.	Parts code
NH35 NH36 NH37	0383 185	NH38 NH39	0383 186

Remarks: Different parts for each CAL.

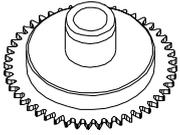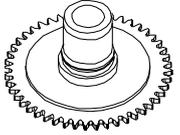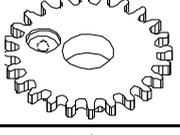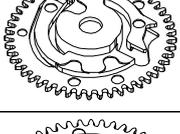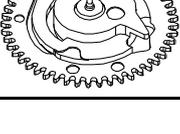Page	No	Cal.					Parts code	Parts name	Parts form
		NH35	NH36	NH37	NH38	NH39			
P-3	⑭	O	-	-	-	-	0273 182	Hour wheel 0273 182 ⇒ 0273 184 (Height difference)	
		-	O	-	-	-	0273 183		
		-	-	O	-	-	0273 184		
P-4	③	-	-	-	O	-	0273 183	0273 183 ⇒ 0273 185 (Height difference)	
		-	-	-	-	O	0273 185		
P-3	⑯	O	O	-	-	-	0817 300	Intermediate date driving wheel and pinion	
		-	-	O	-	O		Intermediate 24hour wheel and pinion	
P-3	⑰	O	O	-	-	-	0802 183	Date indicator driving wheel	
		-	-	O	-	-	0157 182	24hour wheel	


■ List of screw

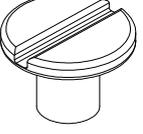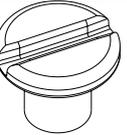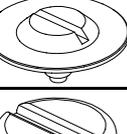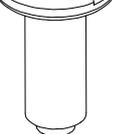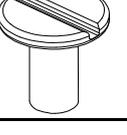Page	No	Parts code	Parts name	Parts form	Page	No	Parts code	Parts name	Parts form
P-2	④	0012 354	Date indicator maintaining plate screw (x4)		P-3	⑨	0012 485	Guard for day-date corrector setting transmission wheel screw (x2)	
P-4	①		Hour wheel guard screw (x4)		P-5	⑤	0012 919	Ratchet wheel screw	
P-5	②		Automatic train bridge screw (x2)		P-5	⑦	0012 100	Balance bridge screw	
	P-6		⑱			Lower plate for barrel and train wheel bridge screw		P-6	
P-7	⑳		Center wheel bridge screw						
P-7	㉘	0012 168	Yoke spring screw (x2)						


Type of oil	Oil quantity mark
 Moebius 9010	 NORMAL QUANTITY
 S-6	 SUFFICIENT QUANTITY
 S-4	

**1.Oiling spot**


**(13) Barrel and train wheel bridge with hole jewel frame**

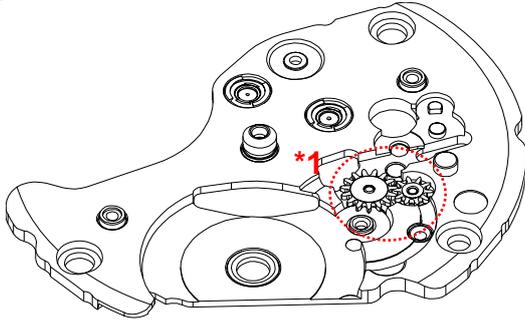



**\*1**

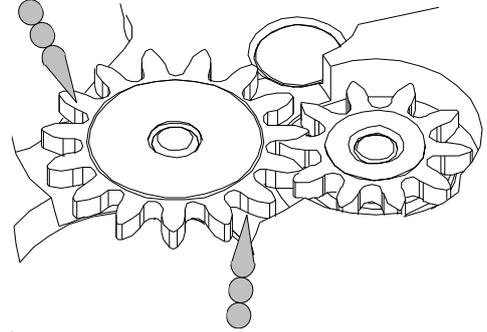

Barrel and train wheel bridge with hole jewel frame (back side)

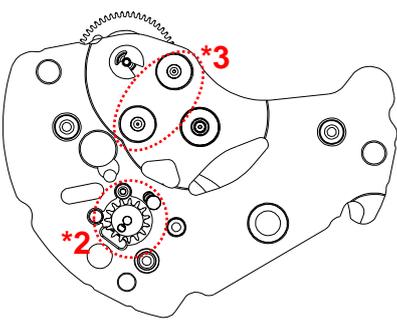


**\*2**

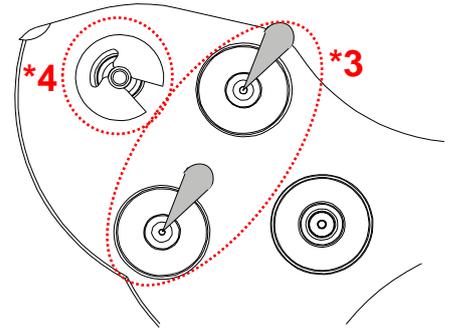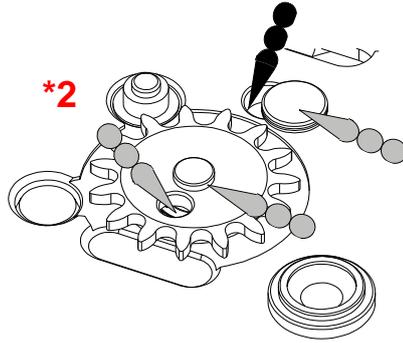

Note

**\*2 After oiling, set lower plate for barrel and train wheel bridge & screw.**

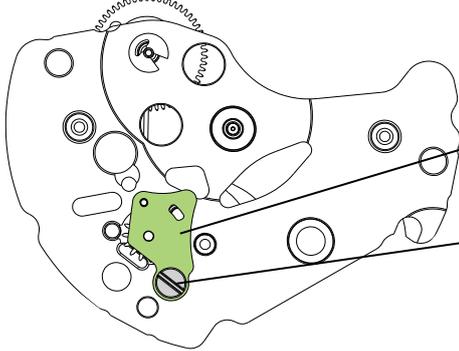


**(18) Lower plate for barrel and train wheel bridge**

**(19) Lower plate for barrel and train wheel bridge screw**


**\*4 After oiling, set first reduction wheel & pawl lever & reduction wheel holder.**

**(17) First reduction wheel**

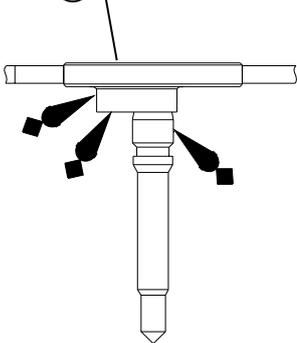



**(17) First reduction wheel**

**(16) Pawl lever**

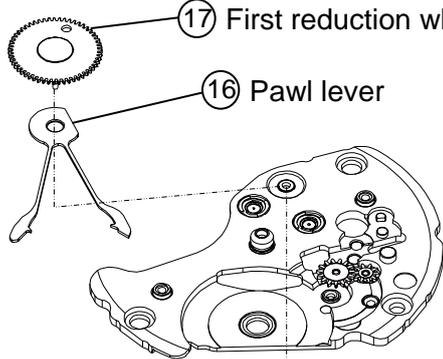

**(15) Reduction wheel holder**

③② Balance stop lever


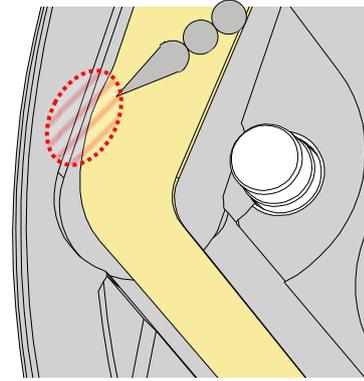
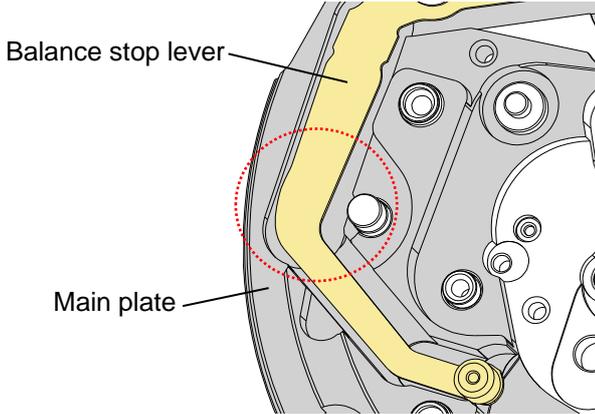


**Contact part of main plate and balance stop lever**

**2. Setting position of oscillating weight**


• Before assembling oscillating weight.

Match the center of the oscillating weight and winding stem. Set the hole of first reduction wheel gear on the imaginary line toward the balance bridge guide pin.

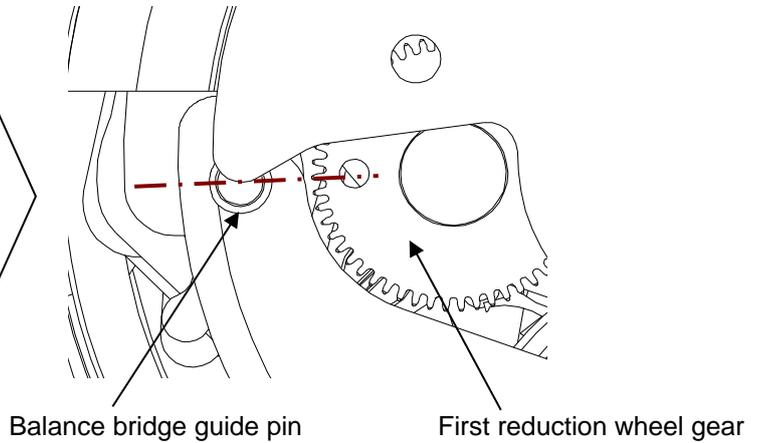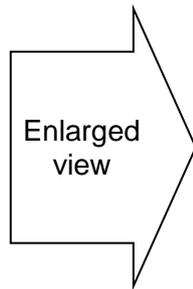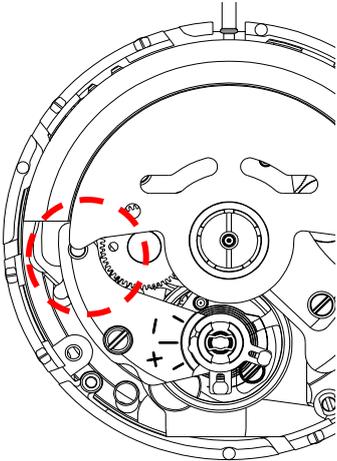

**3. To remove the winding stem**


- 1) Set the winding stem to normal position.
- 2) Pull out the winding stem, while pushing "A"

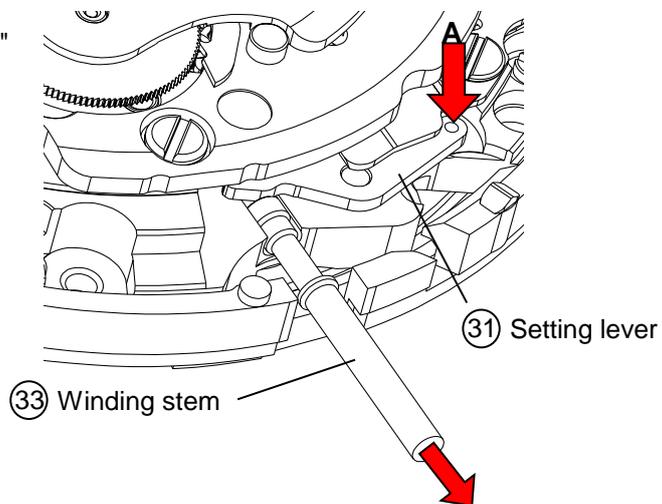

**4. Disassembling / assembling of the First reduction wheel**

<< Disassembling >>


<< Assembling >>

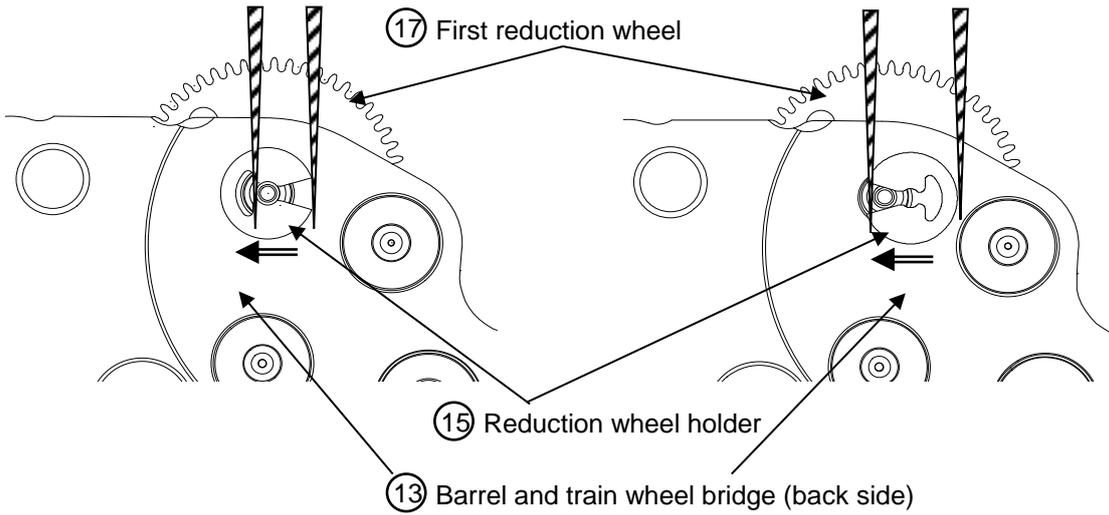

**5. Disassembling / assembling of the Ratchet sliding wheel spring.**

<< Disassembling >>


<< Assembling >>

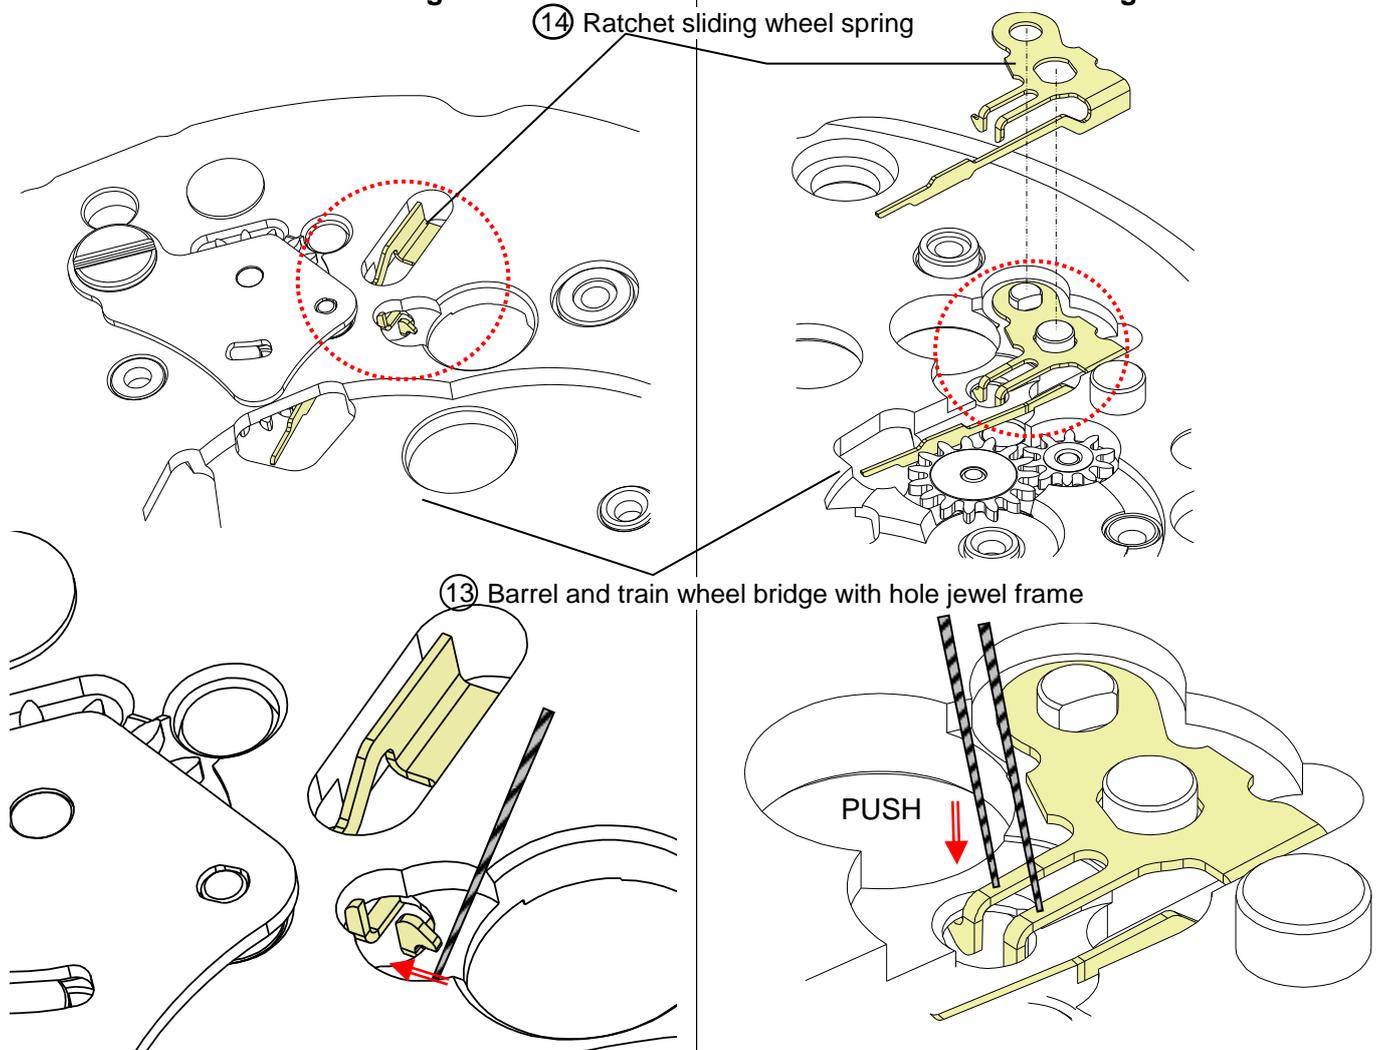

Remove the hook of the ratchet sliding wheel spring from barrel and train wheel bridge with hole jewel frame.


The hooks of ratchet sliding wheel spring are hung up on barrel and train wheel bridge with hole jewel frame.

**6.Accuracy adjustment**

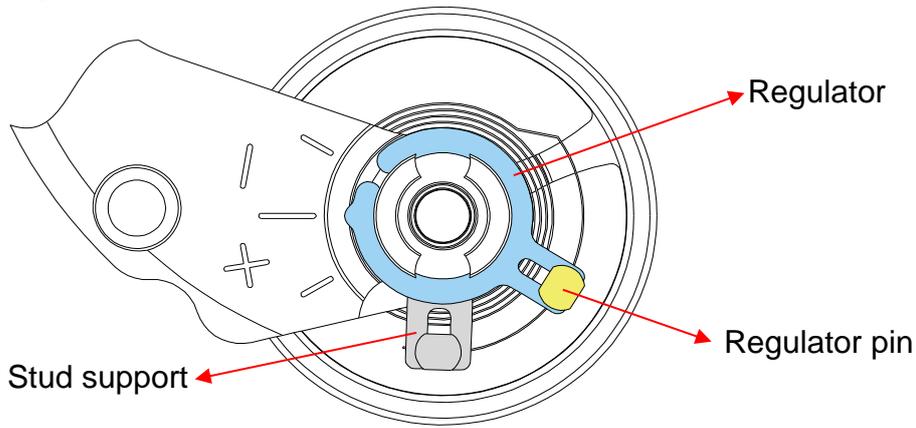


**Note:**


•Regulator ... Time adjustment

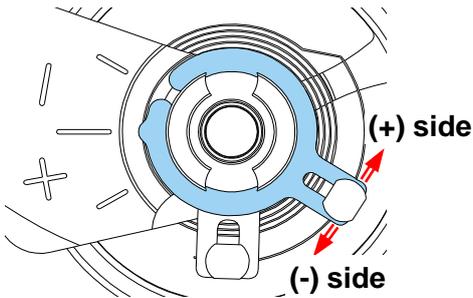


•Stud support ... Beat error adjustment

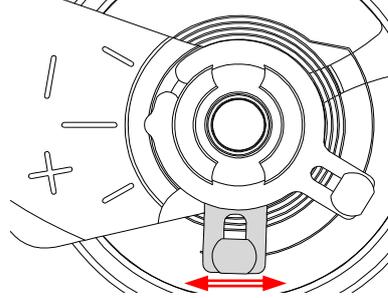


•Regulator pin ... Gap adjustment of balance spring and regulator pin

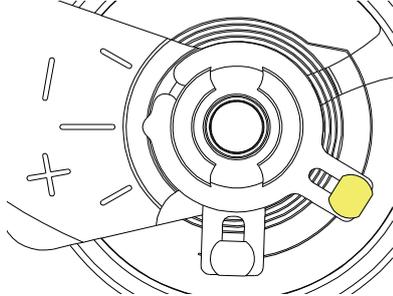

Anticlockwise rotation

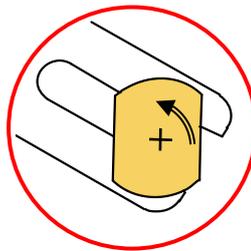

No clockwise rotation

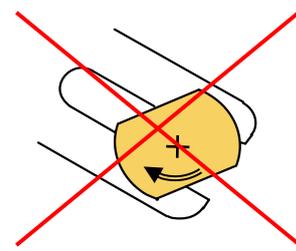

**7.To wind up the mainspring**

<<Movement>>



The mainspring would be fully wound up by turning the ratchet wheel screw 8 times clockwise. (Manual winding or Screwdriver)

Manual winding ... Rotate crown clockwise at normal position by minimum 55 times. (Equal to ratchet wheel screw 8 times )

Screwdriver winding ... Turn the ratchet wheel screw 8 times clockwise.

[ Manual winding ]

[ Screwdriver winding ]

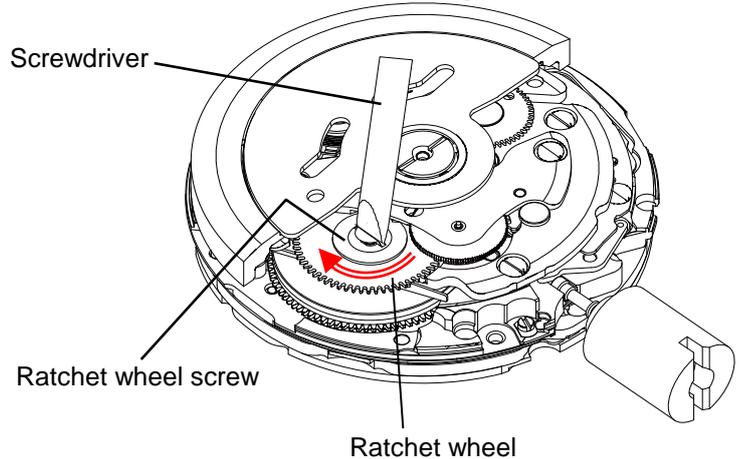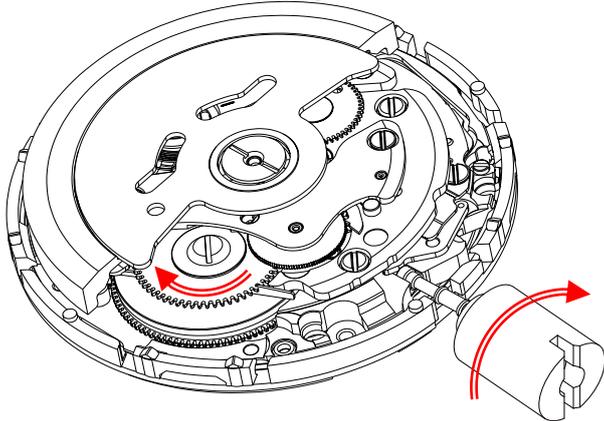

**8.How to attach hands**

Place the movement directly on a flat metal plate or something similar to attach the hands.


We recommend the use of movement holder to attach hands.

For hands attachment, please use a special equipment.

When the movement receives a strong shock, it may be damaged.

**\*Install the 24hour hand. ...Cal.NH37 & NH39**

Pull out the crown to the second click position and rotation it clockwise to install 24hour hand.

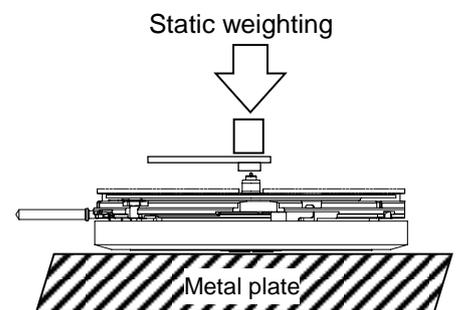

**9.Accuracy measurement condition**

Static Accuracy : -20~+40 seconds per day

Measurement Conditions


- 1) Measurement should be done within 10~60 minutes after fully wound up.
- 2) Lift angle : 53 deg
- 3) Measurement position : (1) Dial up (2) 9 o'clock up (3) 6 o'clock up
- 4) Minimum measurement Time : 20 seconds
- 5) Stabilizing Time :


Leave the watch for at least 20 seconds to stabilize after you change its measurement position.

**10.About the handling ...Cal.NH38 & 39**

○ Part is processed as a mirror surface. It is damaged when touching with tweezers.

Please be careful about the handling.

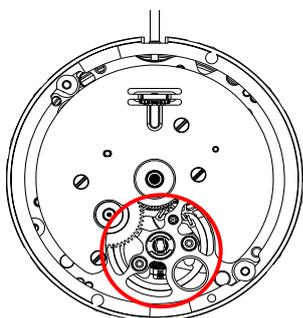

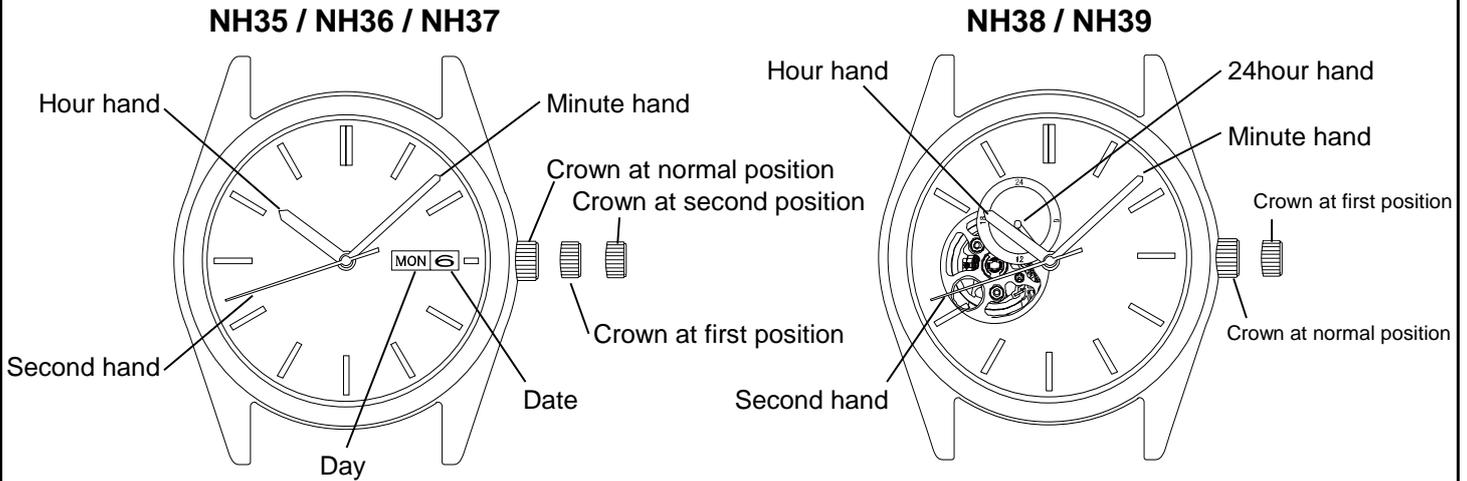

Time indication	NH35	NH36	NH37	NH38	NH39
3Hands (hour, minute, second)	○	○	○	○	○
Date calendar	○	○	○	-	-
Day calendar	-	○	-	-	-
24hour indicator	-	-	○	-	○

**1.How to set the time**

- 1) Pull out the crown to the second click position. ...Cal.NH35 & NH36 & NH37  
Pull out the crown to the first click position. ...Cal.NH38 & NH39
- 2) Turn the crown to set hour and minute hands.  
(Check that AM / PM is set correctly.)
- 3) Push the crown back into the normal position.

**2.How to set the Date ...Cal.NH35 & NH36 & NH37**

- 1) Pull out the crown to the first click position.
- 2) Turn the crown to left for date setting.
- 3) Turn the crown to right for day setting. ...Cal.NH36 only  
\*Do not set the date between 9:00 P.M. and 4:00 A.M. as this will cause a malfunction.
- 3) Push the crown back into the normal position.

**3.To wind up the mainspring**

- a) Manual winding ... Rotate the crown clockwise at normal position.  
Wind turning the ratchet wheel screw 8 times. It will start to move naturally after shaking slightly.
- b) To wind up with winding machine.  
Full wind up conditions
  - Rotary speed : 30 rpm
  - Operating time : 60 minutes