


PWM Charge Controller

p5555c

User Manual

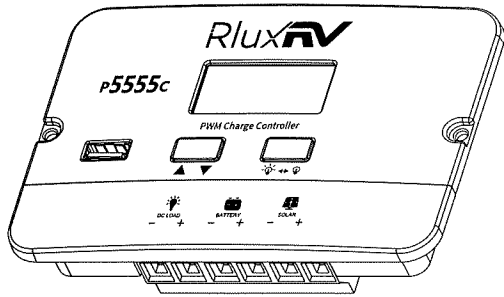

*We may modify these specifications without prior notice.

Warnings and Tools Icon Chart

Icons	Name	Description
	High Voltage	High voltage device. Installation should be performed by an electrician.
	High Temperature	This device will produce heat. Mount device away from other items.
	Environmental Hazard	Electronic Equipment. Do not put in landfill.
	Wire Cutter	A wire cutter is needed for cutting and stripping prior wires to connect.
	Multi-meter	A multi-meter is needed for testing equipment and verifying polarity of cables.
	Anti-static Glove	Anti-static gloves are recommended to prevent controller damage caused by static electricity.
	Electrical Tape	Electrical tape is recommended to safely insulate spliced or bare wires.
	Screwdriver	A common size screwdriver is needed to attach wires to the controller.


Product Features

Thank you for choosing our product. This PWM solar charge controller is a device for solar charge regulation and DC output load control. This device is mainly used in small size off-grid solar power systems.

These charge controllers have these features:

- Charging modes available for most common deep-cycle battery types in the market, including AGM (sealed lead acid batteries), GEL, Flooded, and Lithium mode with customized parameters.
- Automatic recognition of 12V/24V battery system for AGM/GEL/Flooded battery.
- 5V 1A USB output provides charging for mobile devices.
- Provides multiple load control mode options for light based, time based and manually adjusted scenarios.
- Industrial grade design with full range of electronic protections, such as battery over-charge, battery over-discharge, PV over-voltage, controller over-heating, DC load short-circuit, DC load over-load, as well as reverse polarity protection for PV and battery sides, and etc.
- We provide 2 ways of installation: flat mount with bracket and flush mount fixture.

Device Diagram

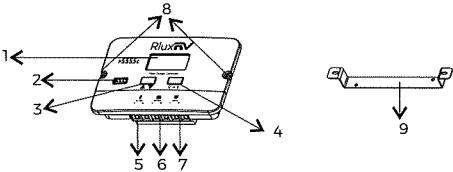


#	Description	#	Description
1	LCD Display Screen	6	Battery Terminals
2	5V 1A USB Port	7	Solar Terminals
3	Function Key	8	Installation Mounting Holes
4	Load Key	9	Flat Mount Bracket
5	Load Terminals		

Mounting Instruction


This controller can be mounted flush or flat with included bracket at a cool, dry and weather safe location.

Flat Mount with Bracket




1. Attach the mounting bracket to the back of the controller using screws.
2. Mark the bracket's mounting holes on the mounting surface.
3. Attach the mounting bracket to the mounting surface using screws.

Flush Mount



1. Mark the controller's dimension and mounting holes on the mounting surface.
2. Make necessary alterations to ensure the controller fits into the mounting surface snugly. Pre-install wires if needed (turn to next page for instructions).
3. Attach the controller to the mounting surface using screws.

Device Diagram

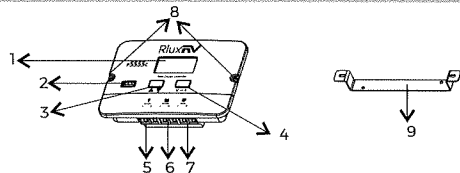


#	Description	#	Description
1	LCD Display Screen	6	Battery Terminals
2	5V 1A USB Port	7	Solar Terminals
3	Function Key	8	Installation Mounting Holes
4	Load Key	9	Flat Mount Bracket
5	Load Terminals		

Mounting Instruction


This controller can be mounted flush or flat with included bracket at a cool, dry and weather safe location.

Flat Mount with Bracket




1. Attach the mounting bracket to the back of the controller using screws.
2. Mark the bracket's mounting holes on the mounting surface.
3. Attach the mounting bracket to the mounting surface using screws.

Flush Mount



1. Mark the controller's dimension and mounting holes on the mounting surface.
2. Make necessary alterations to ensure the controller fits into the mounting surface snugly. Pre-install wires if needed (turn to next page for instructions).
3. Attach the controller to the mounting surface using screws.

Wire Connection Sequences

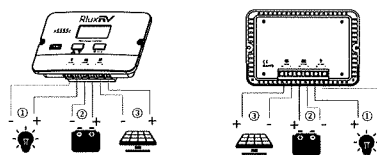


Front View

Back View

During installation of your PWM controller, please follow below order of connection:

1. Connect the DC load wiring to the DC load output (if applicable).
2. Connect the positive battery wire followed by the negative battery wire.
3. Make sure your solar panels are fully covered to prevent electrical shock. Connect the positive solar array output wire followed by the negative solar array output wire.

LCD Display Interface Overview

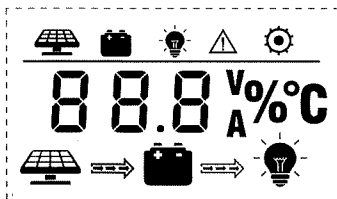

Display Section	Status
Active Functions	
Parameters	88.8 V% A °C
Charge and Load Status	

Status Information


Status Icon	Indication	Status	Description
	Solar Charge Indication	Steady On	Daylight Detected
		Off	No Daylight Detected
		Flowing	Solar Charging Battery
		Flash	Solar Input System Over Voltage
	Battery Indication	Steady On	Battery Connected and Functional
		Off	No Battery Connection
		Slow Flash	Battery Over-Discharged
		Slow Flash	Battery Over-Voltage
	DC Load Indication	Flowing	DC Load On
		Off	DC Load Off
		Flash	Over-Load / Short-Circuit

Key Functionality Chart

Function Key	System Mode	Input	Input Function
	View Mode	Long Press	Enter SET mode
		Short Press	View Next Page
	View Mode	Long Press	N/A
		Short Press	Switch Load On/Off (Manual Control Program Only)
	Set Mode	Long Press	Save Data & Exit SET Mode
		Short Press	View Next Page
	Set Mode	Long Press	N/A
		Short Press	Adjust parameter

LCD Display Rules & Cycles


LCD Screen Display Cycle

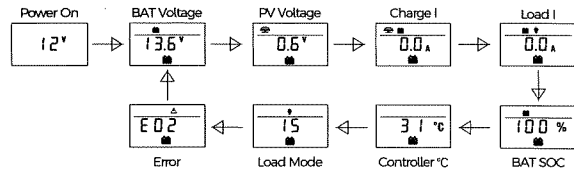

·The information pages in the screen will be automatically turning to the next page every 5 seconds and keep lasting. The user also can use function key to cycle through different pages.

·The error code page will be displayed when an error is detected.


Setting Battery Mode

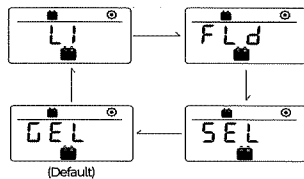

Abbreviations	Battery Types	Description
FLD	Flooded Battery	Auto-recognition with default parameters set for each type of batteries.
SEL	Sealed/AGM Battery	
GEL	Gel Battery	
LI	Lithium Battery	Customize charge & discharge voltages.


Advanced Battery Settings

- In Lithium mode, short press the function key again to cycle through each parameter view.
- Use the load key to adjust parameter value, then long press function key to save and exit.

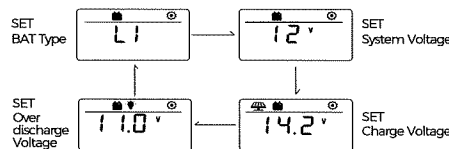

Load Mode Settings

- Enter Load SET Mode by long pressing the function key in Load Mode view only.
- Short press the load key to cycle through load modes before long pressing the function key again to save and exit.



Mode	Definition	Description
0	Daylight Auto-Control	The PV voltage turns on the load when there is no night.
1-14	Daylight On/Timer Off	DC load turns on when there is no night. DC load turns off according to timer. Mode 1 = turn off after 1 hour, etc.
15	Manual Mode	DC load turns on/off by pressing the load key.
16	Testing Mode	DC load turns on and off in a quick succession.
17	Always on	DC Load Stays On.

Error Code Chart

Code	Error	Description & Quick Troubleshoot
E00	No error	The PV voltage turns on the load when it is night.
E01	Battery Over-discharged	Battery voltage is too low. DC load will be turned off until battery re-charges to recovery voltage.
E02	Battery Over-voltage	Battery voltage has exceeded controller's limit. Check the voltage of the battery for compatibility with the controller.
E04	Load Short Circuit	DC load short circuit.
E07	Overheating	Controller exceeds operating temperature limit. Ensure the controller is placed in a well-ventilated cool, dry place.
E08	Load Over-current	DC load draws power that exceeds controller's capability. Reduce load size or upgrade the controller with a higher load capacity.
E09	Solar Over-current	Solar array current exceeds controller rated input amperage. Decrease the amperage of solar panels connected to the controller or upgrade to a higher rated controller.
E10	Solar Over-Voltage	Solar array voltage exceeds controller rated input voltage. Decrease the voltage of solar panels connected to the controller.

*Please contact professionals for technical support on additional troubleshooting.

Error Code Chart

Code	Error	Description & Quick Troubleshoot
E00	No error	The PV voltage turns on the load when it is night
E01	Battery Over-discharged	Battery voltage is too low. DC load will be turned off until battery re-charges to recovery voltage.
E02	Battery Over-voltage	Battery voltage has exceeded controller's limit. Check the voltage of the battery for compatibility with the controller.
E04	Load Short Circuit	DC load short circuit.
E07	Overheating	Controller exceeds operating temperature limit. Ensure the controller is placed in a well-ventilated cool, dry place.
E08	Load Over-current	DC load draws power that exceeds controller's capability. Reduce load size or upgrade the controller with a higher load capacity.
E09	Solar Over-current	Solar array current exceeds controller rated input amperage. Decrease the amperage of solar panels connected to the controller or upgrade to a higher rated controller.
E10	Solar Over-Voltage	Solar array voltage exceeds controller rated input voltage. Decrease the voltage of solar panels connected to the controller.



*Please contact professionals for technical support on additional troubleshooting.

Controller Specification

- The variable "n" is adopted as a multiplying factor when calculating parameter voltages, the rule for "n" is listed as: if battery system voltage is 12V, n=1; 24V, n=2.
- For example, the equalize charge voltage for a 12V FLD (Flooded) battery bank is $14.8V \times 1 = 14.8V$. The equalizing charge voltage for a 24V FLD (Flooded) battery bank is $14.8V \times 2 = 29.6V$.

Parameter	Value			
Model No.	p5555c			
Battery System Voltage	12V/24V Auto (FLD/GEL/SEL) Manual (Li)			
No-load Loss	8ma (12V); 12ma (24V)			
Max Solar Input Voltage	<55Voc			
Rated Solar Charge Current	15A			
Max Solar Input Power	255W/12V:510W/24V			
Light Control Voltage	5V*n			
Light Control Delay Time	10s			
Max Load Output Current	15A			
USB Output	5V1A			
Operating Temperature	-35°C ~ +45°C			
IP Protection	IP32			
Net Weight	0.21kg			
Operating Altitude	≤ 3000 meters			
Controller Dimension	130*90*34.6 mm			
Parameter	Battery Parameters			
Battery Types	FLD	SEL	GEL	Li
Equalize Charge Voltage	14.8V*n	14.6V*n	--	--
Boost Charge Voltage	14.6V*n	14.4V*n	14.2V*n	14.2V*n (adjustable)
Float Charge Voltage	13.8V*n			--
Boost Charge Recovery Voltage	13.2V*n			--
Over-discharge Recovery Voltage	12.6V*n			--
Over-discharge Voltage	11V*n			11V*n (adjustable)

Product Dimensions

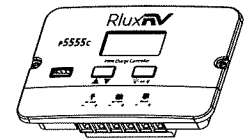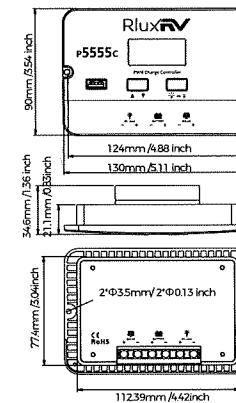

Product Dimension:
130*90*34.6 mm / 5.11*3.54*1.36 inch
Flat Mount Size:
124 mm / 4.88 inch
Flush Mount Size:
130 mm / 5.11 inch
Installation Hole Size:
Φ3.5 mm / Φ0.13 inch

