



Please read the manual carefully
before using the unit

DH60V2

USER MANUAL

TABLE OF CONTENT

Precaution For Use	01
Introduction to Product Components	10
Control Interface.....	11
Operation Instructions.....	12
Cleaning and Maintenance.....	16
Common Faults and Solutions.....	17
Safety Note.....	18

Statement

The graphics and functions provided in this manual may not be the same as the actual product. Please always refer to the actual product. The model of the machine on the manual is for reference only. Please operate the machine based on the actual product. The right to interpret the relevant terms belongs to the company.

I. Precaution For Use

WARNING for Using R290 Refrigerant:

Transportation, marking and storage for units that employ flammable refrigerants

1.Transport of equipment containing flammable refrigerants

Attention is drawn to the fact that additional transportation regulations may exist with respect to equipment containing flammable gas. The maximum number of pieces of equipment or the configuration of the equipment, permitted to be transported together will be determined by the applicable transport regulations.

Compliance with the transport regulations.

2.Marking of equipment using signs

Signs for similar appliances used in a work area generally are addressed by local regulations and give the minimum requirements for the provision of safety and/or health signs for a work location.

All required signs are to be maintained and employers should ensure that employees receive suitable and sufficient instruction and training on the meaning of appropriate safety signs and the actions that need to be taken in connection with these signs.

The effectiveness of signs should not be diminished by too many signs being placed together.

Any pictograms used should be as simple as possible and contain only essential details.

Compliance with local regulations.

3.Disposal of equipment using flammable refrigerants

See National Regulations.

Compliance with national regulations.

4.Storage of equipment/appliances

The storage of equipment should be in accordance with the manufacturer's instructions.

5.Storage of packed (unsold) equipment

Storage package protection should be constructed such that mechanical damage to the equipment inside the package will not cause a leak of the refrigerant charge.

The maximum number of pieces of equipment permitted to be stored together will be determined by local regulations.

Service operations

1.General

For appliances using flammable refrigerants, an installation, service and operation manual, in the form of either separate or combined manuals, shall be provided and shall include the following information.

2.Symbols

Warning

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.)

Do not pierce or burn.

Be aware the refrigerants may not contain an odour.

Appliance shall be installed, operated and stored in a room with a floor area larger than 4m².



Caution , risk of fire

Appliance filled with flammable mag as R290.



Before use the appliance, read the owner's manual first.



Before install the appliance, read the installation manual first.



Before repair the appliance, read the service manual first.

3.Information in manual

1)The following information shall be specified in the manual where the information is needed for the function of the manual and as applicable to the appliance:

--that compliance with national gas regulations shall be observed.

--The maximum refrigerant charge is **DH60V2** for **0.14kg**;

--a warning to keep ventilation openings clear of obstruction;

--a notice that servicing shall be performed only as recommended by the manufacturer.

2)The manual shall include a statement advising that an unventilated area where the appliance using flammable refrigerants is installed shall be so constructed that should any refrigerant leak, it will not stagnate so as to create a fire or explosion hazard. This shall include:

--a warning that the appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation;

--a warning that the appliance shall be stored in a room without continuously operating open flames (for example an operating gas appliance) and ignition sources (for example an operating electric heater).

The appliance shall be stored so as to prevent mechanical damage from occurring.

3)The manual shall contain specific information about the credentials of qualified service personnel as follows.

--Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorises their competence to handle refrigerants safely in accordance with an industry recognised assessment specification.

--Servicing shall be performed only as recommended by the manufacturer.Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.

4.Information on servicing

The manual shall contain specific information for service personnel who shall be instructed to undertake the following when servicing an appliance that employs a flammable refrigerant.

1)Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

2)Work procedure

Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.

3)General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

4)Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

5)Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.

6)No ignition sources

No person carrying out work in relation to a REFRIGERATING SYSTEM which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks.

- No Smoking” signs shall be displayed.

7)Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

8)Checks to the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer’s maintenance and service guidelines shall be followed. If in doubt consult the manufacturer’s technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- if an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

9)Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised. Initial safety checks shall include:

- That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;

- that no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding.

5.Repairs to sealed components

1)During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

2)Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc. Ensure that apparatus is mounted securely. Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications.

NOTE: The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

6.Repair to intrinsically safe components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.

Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating. Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

7.Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

8.Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

9.Leak detection methods

The following leak detection methods are deemed acceptable for systems containing flammable refrigerants.

Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed. Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

10. Removal and evacuation

When breaking into the refrigerant circuit to make repairs – or for any other purpose– conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

- Remove refrigerant;
- Purge the circuit with inert gas;
- Evacuate;
- Purge again with inert gas;
- Open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders. The system shall be “flushed” with OFN to render the unit safe. This process may need to be repeated several times. Compressed air or oxygen shall not be used for this task.

Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and there is ventilation available.

11. Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed.

--Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of

refrigerant contained in them.

--Cylinders shall be kept upright.

--Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.

--Label the system when charging is complete (if not already).

--Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system it shall be pressure tested with OFN. The system shall be leak tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

12.Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

a)Become familiar with the equipment and its operation.

b)Isolate system electrically.

c)Before attempting the procedure ensure that:

- Mechanical handling equipment is available, if required, for handling refrigerant cylinders;
- All personal protective equipment is available and being used correctly;
- The recovery process is supervised at all times by a competent person;
- Recovery equipment and cylinders conform to the appropriate standards.

d)Pump down refrigerant system, if possible.

e)If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.

f)Make sure that cylinder is situated on the scales before recovery takes place.

g)Start the recovery machine and operate in accordance with manufacturer's instructions.

h)Do not overfill cylinders. (No more than 80 % volume liquid charge).

i)Do not exceed the maximum working pressure of the cylinder, even temporarily.

j)When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.

k)Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

13.Labelling

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

14.Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.


The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

Important notes

For the sake of safety, please read this manual carefully before using the product for the first time, and keep the manual for reference. This product is for household use only. Please use this product according to the installation and operation instructions in this manual.


- Unplug the power plug before cleaning or storing the dehumidifier.
- Do not spray the machine with water, insecticide, or flammable liquids.
- Do not place the machine near heating devices or inflammable dangerous goods.
- Do not insert fingers or sticks into the air inlet or outlet.
- The machine body shall be kept horizontal, and the machine shall not be placed on uneven or inclined ground.
- The machine shall not be used in a closed and narrow space.
- If the clothes drying function is used, the clothes should be kept at least 40cm away from the air outlet to prevent the water on the clothes from dripping into the machine and damaging the machine.
- The power supply wiring of the machine must be carried out in accordance with the national wiring rules, and the power line must be reliably connected to the external grounding wire.
- If the power cord is damaged, it must be replaced by the manufacturer or its maintenance department or similar full-time personnel to avoid danger.
- Model and specification of fuse tube: 3.15 A.
- Dehumidifiers shall not be used by persons (including children) who are physically, sensorily, or intellectually weak, or who lack experience and knowledge, unless they are supervised or directed by an adult.
- Children should be supervised to ensure they do not play with equipment.
- When the machine is in use, the distance between the machine and the surrounding objects shall be at least 20cm , as shown in the figure:

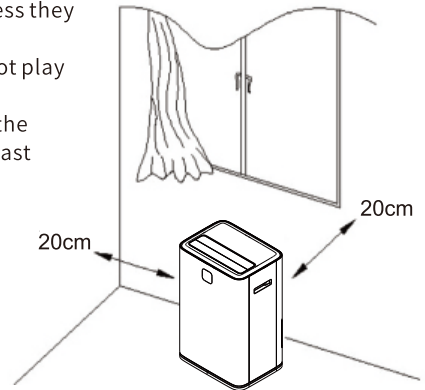


II. Introduction to Product Components

Product components

Note: All illustrations in this manual are only used for illustration. The actual appearance and function shall be subject to the purchased product.

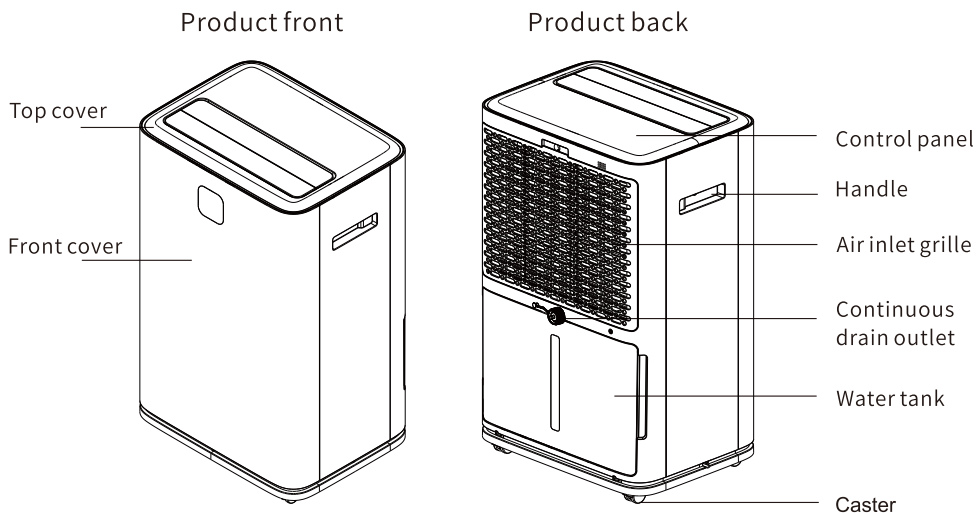

Product components

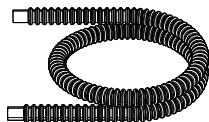


Drain hose
(internal diameter $\phi 1.60\text{cm}$)

Note: The product components are configured according to the functions of the actual model

III. Control Interface

Control panel (For specific models, please refer to the corresponding control panel. Please refer to the purchased product.)

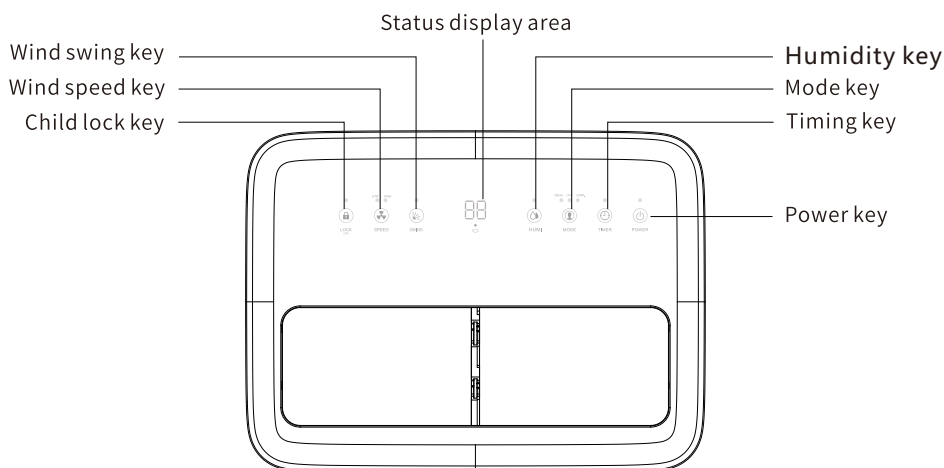

Key description (some keys with * will be different according to different models, please refer to the product purchased.)



Power key

It is used to control the startup and shutdown of the machine.



Humidity key

It is used to set the humidity values, with the setting range of 30 ~ 80%RH .



Mode key

It is used to select the working mode.



Timing key

It is used to set the time, with the setting range of 1 to 24h.



Child lock key

(Press hold for 3S)It is used to enter and release the child lock status.



Wind speed key

It is used to set a comfortable and strong wind.



Wind swing key

It is used to start and stop the wind swing.

IV. Operation Instructions

Function settings

1. Mode selection

The equipment has three working modes: intelligent mode, drying mode and continuous dehumidification mode.

In the power-on state, press the [Mode] key, and the equipment will be cyclically switched among the intelligent, drying and continuous dehumidification modes. Each time the mode key is pressed, the working mode will be switched correspondingly.

[Intelligent] mode: humidity and wind speed can be set.

[Drying] mode: humidity and wind speed can be set.

[Continuous] dehumidification mode: humidity cannot be set, but wind speed can be set.

2. Timing setting

In the power-off state, the timer is set to timed power-on. In the power-on state, the timer is set to timed power-off. Press the "Timer key" to set the timer time. The timer time will increase by 1h every time you press it. The setting range is 1 ~ 24h, which can be set circularly. Press and hold the "timer key" for several seconds to continuously adjust the timer time; if the timer time is 00, the timer is invalid.

When the timer is valid, the timer indicator is on. Press the "timer key" once, and the display screen will display the remaining timer time.

After a few seconds, the current humidity value will be automatically displayed.

3. Humidity setting

The humidity is set in the dehumidification mode (other modes are invalid). Press the [Set] key once to enter the set humidity viewing state: "88" flashes to display the set humidity value, and the humidity indicator "O" is on.

During "88" flashing, press the [Humidity] key to set the humidity setting value. The setting range is 30 ~ 80% RH, which can be set cyclically. Press the [Humidity] key once to increase the set humidity value by 5% RH; After 5s without key operation or pressing other keys, it will automatically confirm the exit, and "88" will display the current environmental humidity. When the set humidity value is 30 %RH, it is a continuous dehumidification state.

4. Wind speed setting

There are two kinds of wind speed: comfortable wind and strong wind. In the power-on state, press the [Wind Speed] key to switch the wind speed to a windshield, which can be set cyclically.

5. Wind swing setting

In the power-on state, press the [Wind swing] key to set the swing state: continuous swing or arbitrary stop. When the machine is shut down, the machine stops running and returns to the "Swing Stop" state.

6. Child lock setting

In the power-on state, press and hold the [Child Lock] key for 3 seconds to control the entry and release of the child lock state. After entering the child lock state, all other key operations are invalid, and only the [Child Lock] key can be pressed for 3 seconds to release.

7. Power-off memory function

If the equipment is suddenly powered off during normal operation, it will automatically restore to the parameter setting state before power failure after being powered on again.

8. Defrosting function

When operating at a lower ambient temperature, the system will automatically judge whether there is frost, and if there is frost, it will automatically defrost. Defrosting action: the fan runs quickly and the compressor stops.

9. Full water protection

When the water tank is full of water, the machine stops, and the water full indicator light "H₂O" flashes; when the water full is released, the water full indicator light is off, and the machine can be restarted. When the water is full, the compressor stops, but the water pump can be started and stopped normally.

Note: The water tank must be placed in place normally, otherwise it will also cause full wa

Display status description

- Timing status indicator "O": it will be on when the timing is valid, will flash when setting and viewing, and will be off when it is invalid..
- Comfortable indicator light "LOW": it will be on when the wind speed is set to be comfortable, otherwise it will be off.
- Strong indicator light "HIGH": it will be on when the wind speed is set as strong wind, otherwise it will be off.
- Intelligent mode indicator light "DEHU": it will be on when the intelligent working mode is selected and operated, otherwise it will be off.
- Drying mode indicator light "DRY": it is on when the drying mode is selected, otherwise it is off.
- Continuous dehumidification mode indicator light "CONT": it is on when the continuous dehumidification mode is selected, otherwise it is off.
- Water full indicator light "W": it is normally on when the water is full, otherwise it is off.
- During normal operation, "RH" displays the current ambient humidity value.

Note:

Please make sure that the air outlet is open before starting the machine, otherwise the machine will be overheated.




Do not stop the machine by unplugging the power cord.

Water tank drainage

- Please make sure that the air outlet is open before starting the machine, otherwise the machine will be overheated.
- Do not stop the machine by directly unplugging the power cord.

When the water tank is full of water, the water full light flashes and the machine stops automatically. The tank must now be emptied of water and correctly positioned.

Empty the water tank

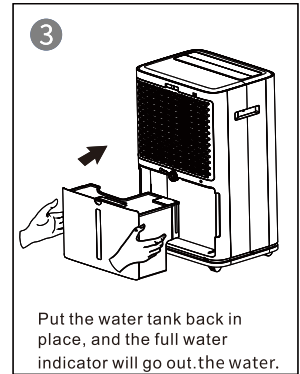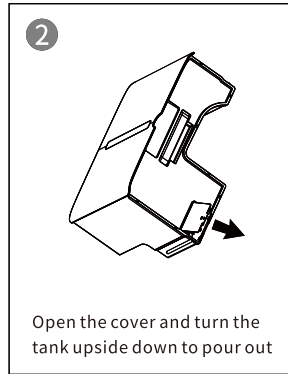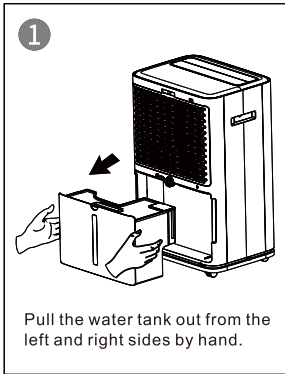

Note:

- Do not remove the float from the water tank. If the float is removed from the water tank, the full water sensor will not be able to sense the water level properly, so that the water will overflow from the tank when it is full.
- If the water tank is very dirty, just use cold or warm water to clean it. Do not use detergent, steel wool, chemical dust cloth, gasoline, benzene, thinner or other solvents, otherwise it may damage the water tank and cause it to leak.
- When it is put into the water tank, press the water tank tightly by hand. If the water tank is not placed properly, the full water state can not be removed, and the machine will still be unable to operate normally.

V. Cleaning and Maintenance

Warning




To avoid electric shock, the machine must be turned off and unplugged before cleaning and maintenance.

A-Body cleaning

Wipe the body with a soft, slightly damp cloth.

B-Grille cleaning

- Hold the small handle on the top of the grille and pull outward to remove the grille.
- Clean the grille: Use a vacuum cleaner to gently remove the dust from the surface of the grille. If the grille is very dirty, use warm water and a mild detergent to wipe it and dry it completely.
- Slowly install the grille back into the body.

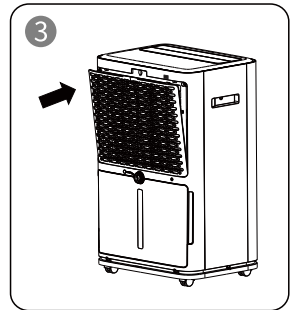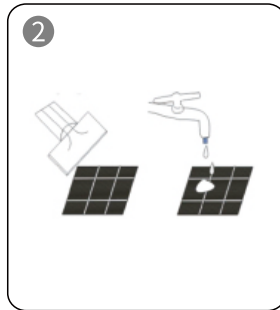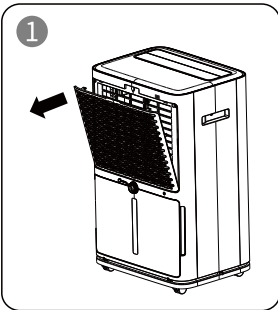

VI. Common Faults and Solutions

If there is any problem in operating the machine during use, please check according to the following table:

Fault phenomenon	Cause analysis	Exclusion method
The machine doesn't work	Is the power cord properly connected?	Connect the plug and socket.
	Is the water full symbol flashing? Is the water tank full or not in place?	Drain the water from the tank and return it to the correct position on the body.
	Is the room temperature above 35°C or below 5°C ?	Because this product is not suitable for overheated or overcooled environment, the machine will automatically protect, which is a normal phenomenon.
	Is the room temperature between 5°C and 20°C?	The machine will automatically defrost, which is a normal phenomenon.
	Is the ambient humidity lower than the set humidity?	Set the humidity value to be more than 3% RH less than the ambient humidity or set the humidity set value to 30%RH
	The machine is protected against frequent starts. Has the machine just stopped?	Please be patient for more than 3 minutes.
The dehumidification efficiency is poor	Poor air flow	A space of about 20cm should be left around the product.
	Ambient humidity too low	It is a normal phenomenon.
Noisy operation	Is the machine tilted?	Move the machine to a horizontal position.
	Is the air inlet blocked?	Clean the dirt at the air inlet and outlet of the product.
	Is the strainer properly installed?	Check whether the filter bag is removed and correctly positioned as required.
Humidity always shows "25" (when there is a large difference from the actual humidity)	Humidity sensor failure?	When the "25" fault phenomenon is displayed all the time and the humidity is set to 30% RH, the machine can continue to dehumidify and operate normally.
		Repair and replace humidity sensor.
Humidity always shows "99" (when there is a large difference from the actual humidity)	Is the surface of the humidity sensor wet? Humidity sensor failure?	When the "99" fault phenomenon is displayed all the time and the humidity is set to 30% RH, the machine can continue to dehumidify and operate normally.
		Repair and replace humidity sensor.

Notice: Please make sure that the air outlet is open before starting the machine, otherwise the machine will overheat. Never stop the machine directly by unplugging the power cord. If the problem persists, please shut down and unplug the power plug

VII. Safety Note



1. When using, do not place the machine on soft and uneven ground to avoid vibration or movement.



2. Do not insert thin rods or hard objects into the fuselage to avoid failure or danger.



3. When using, please keep the machine away from heaters, electric kettles and other heat sources.



4. When using, please close the doors and windows to achieve the best dehumidification effect.



5. Do not place objects in front of and behind the machine. If the ventilation is blocked, the dehumidification effect will be affected.



6. In case of power failure or long-term non-use, please unplug the power cord.



7. When cleaning the machine body, wipe it gently with a wet cloth, and do not spray water directly.



8. Do not place anything on the machine.



9. Please clean the filter screen once every two weeks (do not use hot water, alcohol, gasoline or toluene above 40 °C).



10. In case of continuous drainage, the drainage pipe shall be placed horizontally and shall not be uneven or twisted.



11. After the filter screen is cleaned, please do not dry it in direct sunlight to avoid deformation.



12. Before moving and carrying the machine, please pour out the water in the water tank.

Remark: All the product drawings involved in this manual shall be subject to the actual product. All the contents of this manual have been strictly checked and proofread, but there is possibility of incorrect typesetting or printing. Please understand .

